 


# INSTALLERS

 
## TO AVOID DAMAGE TO OVEN OR FLOOR

- Do not remove the side door spacers until the oven is ready to install. Removing the door spacers could allow the door to shift, damaging the door latch. Door spacers are provided on some models.
- Do not remove oven from bottom base pad until oven is ready to install. Setting oven directly on the floor can cause damage to the floor.
- Do not lift or move oven by door handle(s) or control panel.
- Prior to installing the oven, you will need to remove the oven door(s). Prepare a surface where you will place the door(s). This surface should be flat and covered with a soft blanket, or use the corner post from the packaging material.

To remove the oven door:

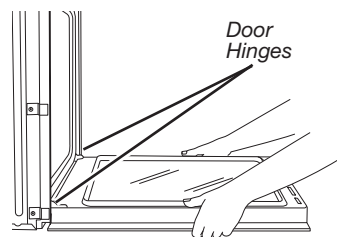


Fully open the oven door.

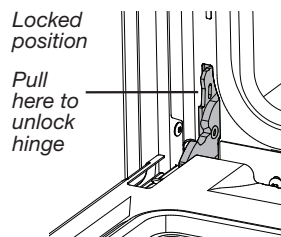


Rotate door hinges from locked to unlocked position.

 
**NOTE:** This instruction covers different models and your hinge may vary slightly from the one illustrated.

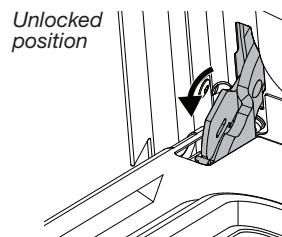

 
Repeat previous step for door hinge on opposite side.

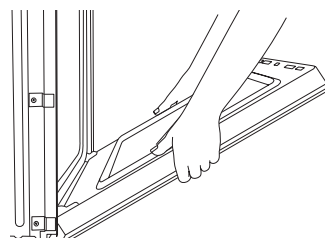

 Gently start to close the door. The door will stop at a partially closed position.

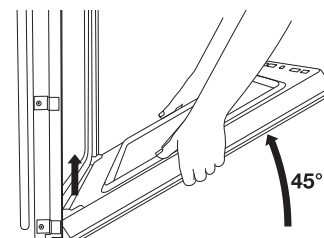


 Using two hands, grasp the edges of the oven door. Close the oven door slightly past the stop position to take the weight off of the door hinges and then pull the oven door up.

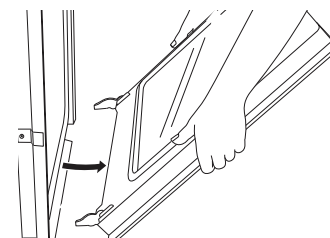


Pull the oven door toward you and then remove. You may need to gently shift door from side to side as you pull.

 To replace the oven door:

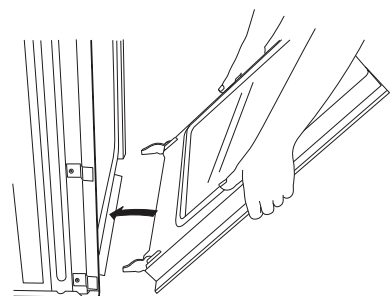


 Using two hands, grasp the edges of the oven door. Insert the hinges at the same time and push the oven door into the oven cavity slot to replace. You may need to gently shift door from side to side as you push.

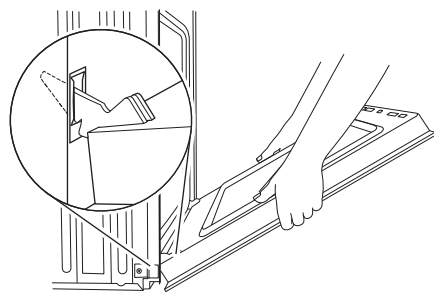


Make sure the door hinge notch is engaged on the bottom of the oven cavity slot.

 **IMPORTANT:** Do not close door at this step or damage may occur to the door hinges.

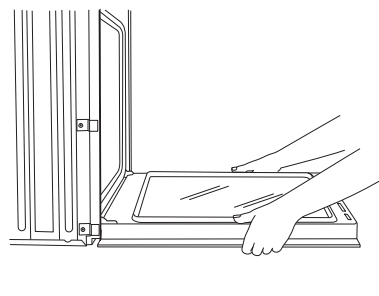


Fully open the oven door.

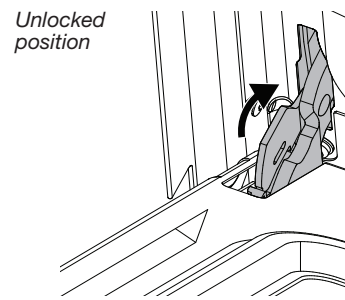 

Move door hinges from unlocked to locked position.

 **NOTE:** This instruction covers different models and your hinge may vary slightly from the one illustrated.

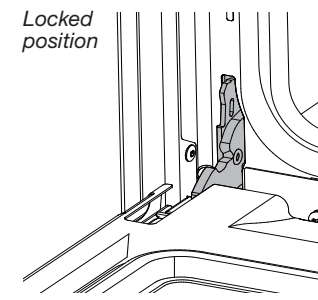

After the door hinges have been locked, gently swing the door upward to close. The door should not be forced closed. Check that the hinges are locked if there is any resistance while closing the door.


- Follow installation instructions found in bag containing literature.

# INSTALLATEURS

 
## POUR ÉVITER D'ENDOMMAGER LE FOUR OU LE PLANCHER

- Ne pas enlever les cales d'espacement de la porte latérale avant que le four soit prêt pour l'installation.  
Enlever les cales d'espacement de la porte pourrait permettre à la porte de se déplacer et ainsi endommager le loquet de la porte.  
Des cales d'espacement de porte sont fournies sur certains modèles.
- Ne pas enlever le four de la base du fond avant que le four soit prêt pour l'installation.  
Installer le four à même le plancher peut provoquer des dommages au plancher.
- Ne pas soulever ou déplacer le four par la(les) poignée(s) de la porte ou le panneau de commande.
- Avant d'installer le four, il vous faudra retirer la(les) porte(s) du four. Préparer une surface sur laquelle on pourra poser la(les) porte(s) du four.  
Cette surface doit être plate et recouverte d'une couverture douce. On peut aussi utiliser les cornières de l'emballage.


Pour enlever la porte du four :

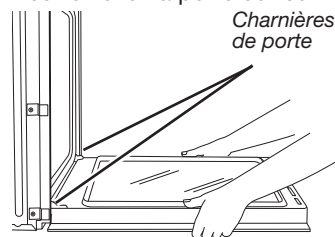




Ouvrir complètement la porte du four.

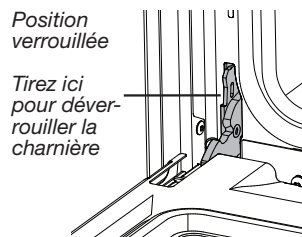 

 
Déverrouiller les loquets des charnières de la porte.  
**REMARQUE :** Cette instruction s'applique à plusieurs différents modèles et vos charnières peuvent varier légèrement de celles qui sont illustrées.

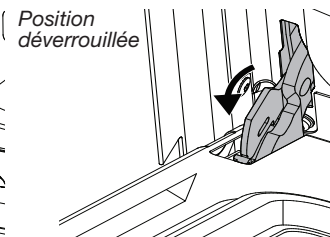

 
 
 
Répéter l'étape précédente pour les loquets situés sur l'autre côté.

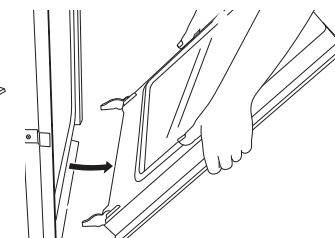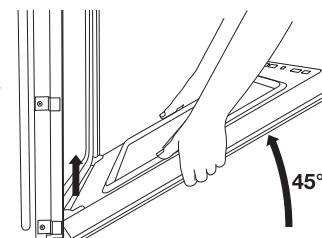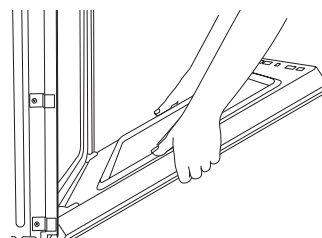


Pour réinstaller la porte du four :

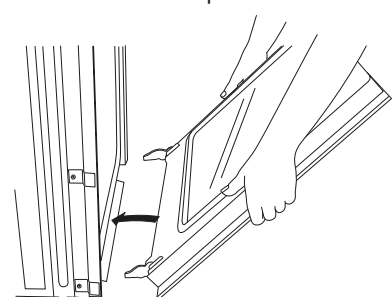 

   S'assurer que les encoches de charnière de la porte sont engagées au fond des fentes de la cavité du four.  
**IMPORTANT :** Ne pas fermer la porte à cette étape pour ne pas endommager les loquets de la porte.

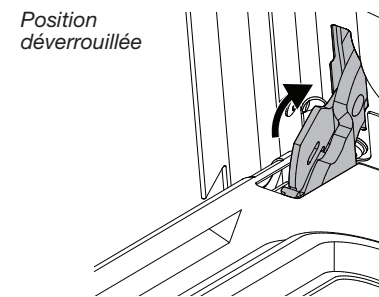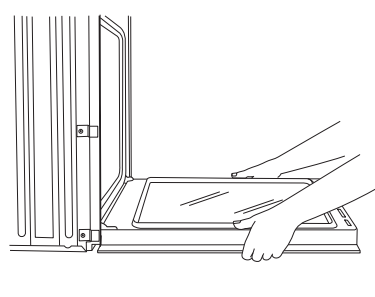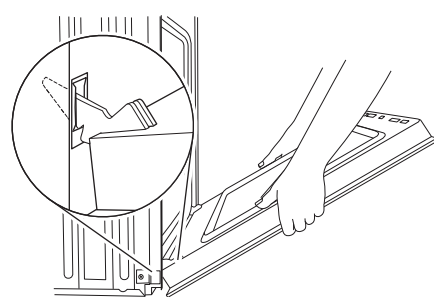

 Verrouiller les loquets des charnières de la porte.  
**REMARQUE :** Cette instruction s'applique à plusieurs différents modèles et vos charnières peuvent varier légèrement de celles qui sont illustrées.

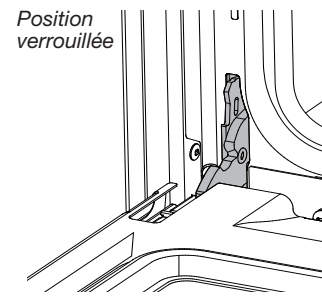

- Suivre les instructions d'installation situées dans le sachet de documentation.

W11423741A

©2020 All rights reserved. Used under license in Canada.  
Tous droits réservés. Utilisé sous licence au Canada.

See reverse side for English

10/20  
Printed in U.S.A.  
Imprimé aux É.-U.