 




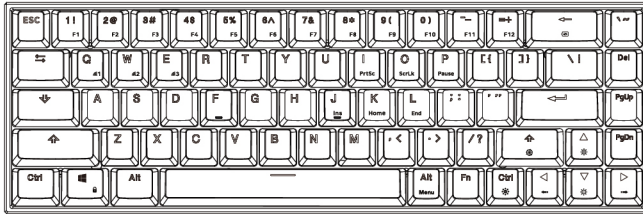

# Mechanical Keyboard **B68**


Quick Start Guide

## Fn Shortcut Keys:



 +  -  = **Fn + 1 thru 12**  
F1 thru F12

 +  = **Fn + I**  
Print Screen



 +  = **Fn + O**  
Scroll Lock



















 +  = **Fn + P**  
Pause

 +  = **Fn + J**  
Insert

 
 +  = **Fn + K**  
Home

 +  = **Fn + L**  
End

 +  = **Fn + Right Alt**  
Menu

	+		=	<b>Fn + ↑</b> LED Lighting Brightness Increase
	+		=	<b>Fn + ↓</b> LED Lighting Brightness Decrease
	+		=	<b>Fn + →</b> LED Lighting Speed Increase
	+		=	<b>Fn + ←</b> LED Lighting Speed Decrease
	+		=	<b>Fn + Del</b> Enter Normal Mode (Default RED LED Color)
	+		=	<b>Fn + Right Ctrl</b> LED Mode Switch
	+		=	<b>Fn + Right Shift</b> LED Color Switch (Red, Green, Blue, Yellow, Purple, Blue and White)
	+		=	<b>Fn + Esc</b> Reset Settings
	+		=	<b>Fn + Win</b> Windows Key Lock

## Various LED modes can be triggered by Fn + Right Ctrl Keys




- |             |                     |
|-------------|---------------------|
| ① Snake     | ⑦ Color Cycle       |
| ② Spectrum  | ⑧ Reactive Sideways |
| ③ Reactive  | ⑨ Reactive Burst    |
| ④ Sine wave | ⑩ Windmill          |
| ⑤ Static    | ⑪ Custom 1, 2       |
| ⑥ Breathing |                     |

## **Connectivity switch:** ( located at the back of the keyboard )

 Toggle Left for BT mode, Middle for OFF, Right for WIRED MODE

## **BT Connection:** ( Connect/Store up to 3 Devices )


Tab key will be backlit in White when in BT mode and Esc will blink to search connection



Long press ( 3 sec ) for pairing mode between the BT device.

Esc Key will blink fast when discoverable. When pairing is complete,

 ESC key will stop blinking.



Single press to connect/disconnect to paired device.

Esc Key will stop blinking when connection is established.

## Charging:



FN + Backspace displays battery power level.  
Keys 1~0 lights up in green to show battery level.

Blinking Blue • Keyboard battery is charging. Backspace key will stop blinking when fully charged.

Blinking Red • Low Battery, will stop functioning after 10 seconds.  
Connect your USB Wire to charge.

## Sleep/Time Out:

- The keyboard goes to sleep after 90 seconds when the keyboard is disconnected from the device or the device fails to reconnect.
- The keyboard goes to sleep when the keyboard is inactive for 120 seconds.

## **Package Contents**

- TECWARE B68 Mechanical Keyboard
- Quick Start Guide
- Esc Key Dyesub PBT Keycap x 1
- Removable Type-C cable
- Switch Puller x 1
- Keycap Puller x 1

## **System Requirements**

- PC with USB port
- Windows 7/8/10, Mac

## **Warranty**

- 1 Year. Please contact your local distributor for support.



[www.tecware.co](http://www.tecware.co)