

Size: 80(w) x 100(h) mm



**PHILIPS**

**GoSure**

Advanced Safety  
Assistant Device  
安全记录仪  
GS5101

## User Manual

|      |    |
|------|----|
| EN   | 3  |
| 简体中文 | 10 |



飞利浦汽车生活  
官方微信公众号



GoSure 5101 model name & SN will print on the product label

GoSure 5101 的唯一产品型号和序列号会印刷在产品的机身标上





## English

### Warranty and service

Lumileds is the warrantor of this product.

The Lumileds warranty applies, provided:

The product is handled properly for its intended use only;

The product is used in accordance with its operating instructions;

The original invoice is presented with the product.

The Lumileds warranty does not apply if the product is damaged due to accident, error, or misuse.

For more information and assistance, or if you have a problem with the product, you can visit the Philips website at

[www.philips.com/automotive](http://www.philips.com/automotive),

or contact the retail outlet where you purchased the product.

For users in China, please call the customer service hotline: 400 690 8826

Lumileds (Shanghai) Management Co., Ltd.

No. 19-20, Lane 299, Wenshui Road, Jian'An District, Shanghai

Postal code: 200072

### 1 Important

If you need to remove the Micro SD card, please do so when the device is powered off, otherwise it will damage or cause product abnormalities;

Please only use the items delivered in this package to install the device.

 
Please do not dismantle the product by yourself. For more information and assistance, or if you have a problem with the product, please contact retail outlet where you purchased the product or the after-service center.

Please avoid high temperatures and direct sunlight exposure when operating product outdoors.

Do not dismantle, impact, or put the machine into fire.


Please comply with the relevant national laws and regulations; do not use this product for any illegal purpose.

## 2 Product overview

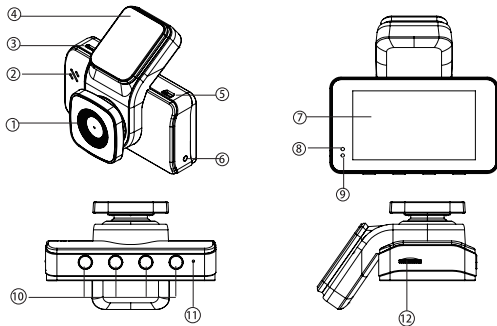

- |                             |                               |                        |
|-----------------------------|-------------------------------|------------------------|
| 1. Camera lens              | 2. Speaker                    | 3. Micro USB port      |
| 4. Detachable adhesive base | 5. Rear camera port(Optional) | 6. Reset pinhole       |
| 7. Display screen           | 8. Power indicator            | 9. Status indicator    |
| 10. Button                  | 11. Microphone                | 12. Micro SD card slot |

## Accessories

 

## 3 Installation instructions

### 3.1 Micro SD card installation guide

#### Insert the Micro SD memory card

Push in the Micro SD card as shown in the picture until the card is inserted in the slot.



#### Remove the Micro SD card

 
Push to eject the Micro SD card out of the slot.

Memory card use: Please confirm the insertion direction of the Micro SD card. If the direction is incorrect, it may damage the unit and the Micro SD card; Please use a high-speed Micro SD card with a C10 logo that meets the SDHC specifications. For this product, please use a genuine Micro SD card with the C10 logo. A memory card within 16GB-128GB is recommended.


Note: be sure to format Micro SD card before use.

### 3.2 Installation guide

1. Clean the installation location to ensure that the holder can be firmly pasted.
2. Tear off the film from the detachable adhesive base and fix the device in the proper installation location;

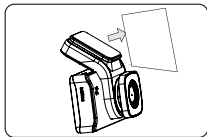


 
3. Rotate the lens to adjust the angle and make sure the view is parallel to horizon.



4. Wiring advice: wire cable along top window – A pillar – storage box like right picture.

5. Use original power cable and connect Micro USB to device, and insert power adaptor to vehicle's cigar lighter slot.

  6. Once the device is installed and connected to the power supply, it will automatically turn on and begin recording. The working light indicator will be on, indicating that it has entered a normal working state.

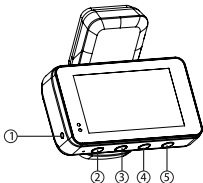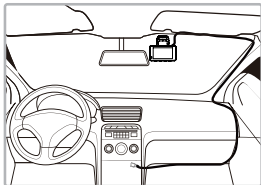

### 3.3 Understanding the soft key

1. Reset button
2. Emergency button(Home page)  
/Return button(Menu page)
3. Front or Rear camera switch button  
(Home page)/Forward button(Menu page)
4. Voice recording on/off button(home page)  
/Backward button(Menu page)
5. Menu button(Home page)  
/OK button(Menu page)

### 3.4 LED indicator description

| LED color | State    | Status description             |
|-----------|----------|--------------------------------|
| Red       | Off      | Power off                      |
|           | On       | Power on,<br>but not recording |
|           | Blinking | Recording                      |
| Blue      | Off      | Power not connected            |
|           | On       | Power is connected             |

Note: When entering menu page, device will stop recording.



## 4 Main Function

### Stop and Go reminder

Built in with advanced algorithm, the device will identify front car startup and remind you when you are in traffic jam or waiting at traffic lights.

### Collision detection

When detecting collision during driving, the device will automatically lock the video and save to emergency folder. Detection sensitivity can be adjusted to low, medium and high level.

Note: To prevent them from being overwritten, please backup important locked files.

Note: Formatting the memory card will delete the locked file, please backup the locked file to a memory card on a regular basis.

### Driver fatigue alert

The device will identify driver's fatigue status and provide voice reminder by device internal algorithm.

### Parking mode

The device will automatically start recording when detecting external collision.

### Time lapse recording mode

The device will start time lapse recording mode when the engine is off.

Note: parking mode and time lapse recording mode requires hardwire kit support. Please select a hardwire kit with low-voltage detection and voltage conversion.

## Important

The above functions are for driving warnings or alerts only and cannot replace the driver's judgement or operation, nor can they exclude the occurrence of accidents or infringements, so please always drive carefully.

### Smart voice indications:

This product can support smart voice indications:

This function only supports Chinese language.

1. You have been driving for 1/2/4 hour(s), please take a rest. (Please note that the alert duration time is set in the APP menu)
2. Please format the memory card
3. Video locked
4. Please insert the memory card
5. Please replace the memory card
6. Please connect the APP and set the time
7. Vehicle ahead startup
8. Please turn on automotive lighting

### Voice control

You may operate the device with following voice commands.

Note: Please switch on the microphone, and disconnect the APP when you want to use the voice control function.

This function only supports Chinese language.

1. I want to take a photo
2. Lock the video
3. Start video
4. Stop video

### Firmware upgrade

Once the device is connected to the APP, go to Device Settings to check if a new firmware version is available. If so, click to confirm the automatic update, and do not disconnect the APP during the firmware update process.



## 5 APP information

Scan the following QR code to download the APP.



Turn on the device, open the APP, click "Connect device" on the APP device page, and the App will automatically search for the device's Wi-Fi. Select "GoSure5101-Serial Number" in the Wi-Fi list to connect. (Default password: 12345678)

### Special Note:

The APP is from third party. The user shall use the APP reasonably, in accordance with the agreement between the user and the app provider. Any problems related to the APP can be solved by contacting the APP provider.

## 6 Disclaimer

The images and sounds recorded by the device are for reference only. To the extent permitted by law, Lumileds shall not be liable for any indirect losses or consequential losses suffered by users due to the device.

Special Note: The device must be in a normal working state, otherwise it can be result in image damage or loss in the following situations:

1. Pulling out the Micro SD card during recording may cause damage or loss of video files;
2. An impact on the machine during the recording process may cause damage or lose the recorded video file;
3. Repeated impacts during the recording process will loosen the memory card, which may damage or lose the video file;
4. The recorded video is for reference only, and Lumileds does not assume any responsibility for any bad files or loss of data due to any abnormal operation of the machine.

## 7 FAQ

| Problem                                  | Cause and solution                                                                                                                                             |
|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot loop recording                    | Cause: Check if the memory card is full<br>Solution: Format the memory card<br>Note: back up important videos or pictures before formatting                    |
| Picture stuck                            | Cause: The Micro SD card does not fit<br>Solution: Check whether the Micro SD card uses a Class10 high-speed card, and that the capacity is not less than 16GB |
| Cannot take pictures or videos           | Cause: Check that the memory card has enough space<br>Solution: Format the memory card<br>Note: Before formatting, please back up important videos or photos   |
| The device automatically stops recording | HD video requires a large amount of data, so please use a high-speed Micro SD card compatible with the SDHC, which will have C10 logo                          |
| Prompt "File Error"                      | An error occurred when the memory card was storing data, resulting in incomplete files. Please format the memory card.                                         |
| The image is foggy                       | 1.Please check the lens for dirt and fingerprints, and clean the lens before shooting<br>2.If you still have problems, please contact after-sales service.     |
| System halt                              | Please short press the reset button to restart and resume operation                                                                                            |



## 简体中文

### 保修和服务

亮锐为此产品提供保修。

亮锐保修适用范围：

- 产品严格按照指定用途操作；
- 产品依照使用说明使用；
- 出示产品原始发票。

亮锐保修不适用于事故、失误或使用不当引起的产品损坏。

欲知详情和指导，或对产品有疑问，请访问飞利浦网站：

[www.philips.com/automotive](http://www.philips.com/automotive)，亦可联系向您出售产品的零售商。

或致电客户服务热线：400 690 8826

亮锐（上海）管理有限公司

上海市静安区汶水路299弄19-20号

邮编: 200072

### 1 ▲ 重要事项

设备硬件如需拔插时(插拔Micro SD卡)，请在设备关机状态下，否则易导致设备异常或损坏；

请使用本公司原装配件，且请勿拆卸本产品，如果需要更多的帮助或者支持，请联系你购买产品的当地零售店或者售后服务中心

 
室外使用请避免高温及太阳直接暴晒；

机器禁止拆解、撞击或投入火中。

重要提示：敬请遵守国家相关法律法规，不得将此产品用于任何非法用途，否则后果自负！



## 2 产品简介

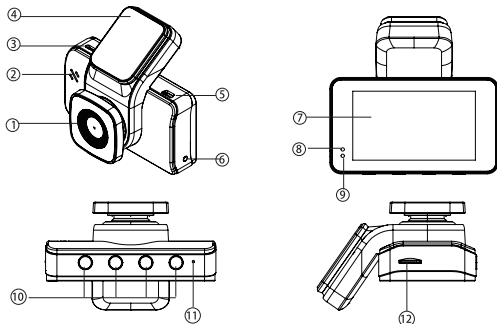

- |                |          |         |         |
|----------------|----------|---------|---------|
| 1. 镜头模组        | 2. 扬声器   | 3. 电源接口 | 4. 底座胶贴 |
| 5. 后路摄像头接口(选配) | 6. 重启键   | 7. 显示屏  |         |
| 8. 电源指示灯       | 9. 状态指示灯 | 10. 按键  | 11. 麦克风 |
| 12. Micro SD卡槽 |          |         |         |

## 配件



3.6M  
电源线

车载  
充电器

说明书