 
 
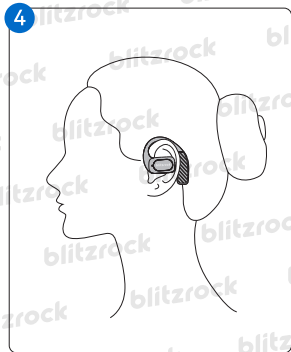 
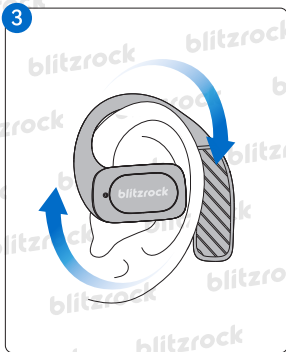 


blitzrock

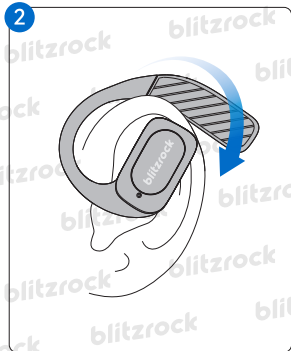

User Manual


CT3

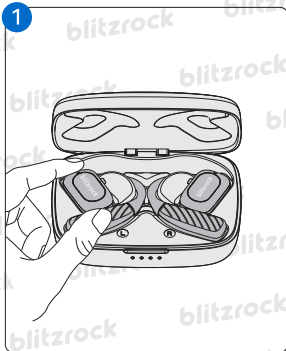

PACKAGE CONTENTS



 
Headphones×1

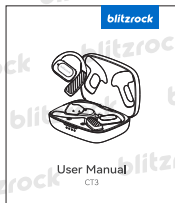

User Manual×1



 Charging Case×1



Charging Cable×1

 
 
PRODUCT INTERODUCTION

Touch Area

Headphone Charging
Status Indicator

Charging Pins

Status Indicator

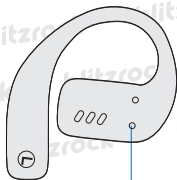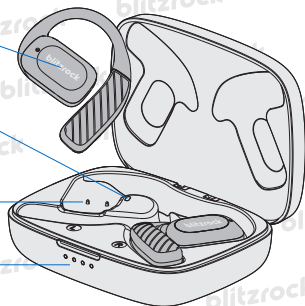

Charging Contacts



 
Charging Interface



Please use the provided Type-C Charging Cable to charge.


CHARGING

1

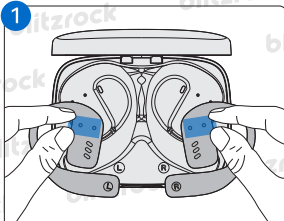


Please remove the insulating sheet and all protective stickers before the first use.

 2

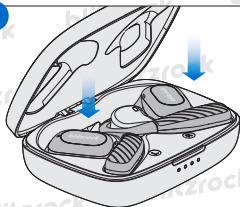

Put the Headphones into the charging case and the Headphones status indicator will light up.

 3

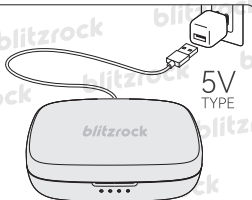

Charging : ○ ○ ○ ○

Fully Charge : The light goes off.

4



1%-25% ○

26%-50% ○ ○

 
51%-75% ○ ○ ○

76%-100% ○ ○ ○ ○

The charging case can be fully charged in 2 hours.


PAIRING

1

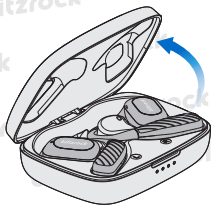


Automatic pairing after opening lid

 2

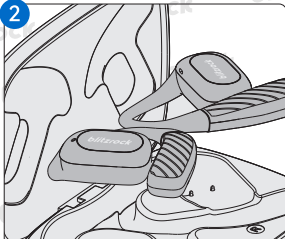

Pairing mode(indicator on one earphone only).

 3

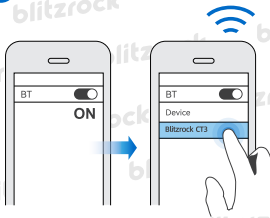

4




Power on and connected to a device.

FUNCTION

	🎵	🔊
 (1x) L/R	▶/	🔊
 (2x) R	▶▶	🔊 / 🔄
 (2x) L	◀◀	🔊 / 🔄
 (3x) L/R	🗣️ Voice Assistant	/
 (4x) L/R	🎮 Toggle Game Mode	/
 (HOLD L)	🔊-	🔊-
 (HOLD R)	🔊+	🔊+



*Please turn on game mode when you notice that the sound is lagged behind the video

 *Game mode is switched off by default.

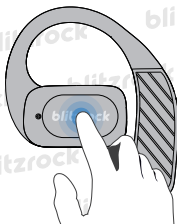

Touch area

  POWER ON/OFF

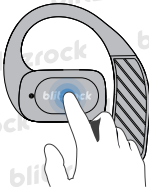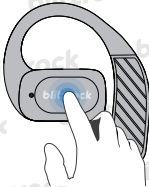With Headphone Case		Without Headphone Case	
Power On			Tap and hold for 3 seconds to power on a headphone individually.
Power Off			Tap and hold for 5 seconds to power off a headphone individually.

TROUBLE SHOOTING

1.Charging case not charging:

Check if the power adapter is working, or try using a different charging cable.

 
2.Earphones not connecting to Bluetooth or Bluetooth signal not found:

Open your phone's settings, delete the Bluetooth pairing records, and then search for the earphones Bluetooth signal to reconnect.

3.Earphones won't power on:

Ensure the charging case has power and try charging the earphones for a while before attempting to power them on.

Restore Factory Settings


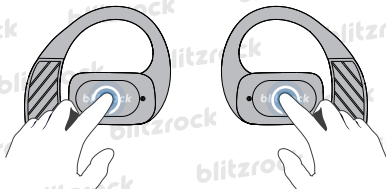


When the headset is turned on, touch the left and right earphone touch positions 6 times at the same time. The earphone indicator light flashes white 3 times, and the headset is restored to factory settings.

Blitzrock APP Pairing


Step1:

  Blitzrock APP can be downloaded from the Google Play and Apple APP Store.

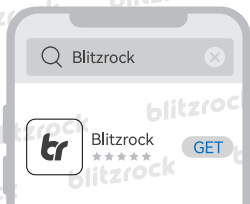

Step2:


 
Bluetooth pairing with your headphones.

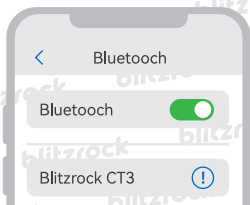


Blitzrock APP Pairing

Step3:

  Open the Blitzrock APP and pairing with your Blitzrock CT3.

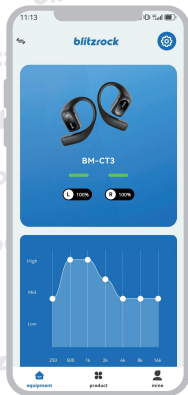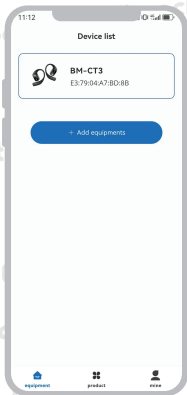

SPECIFICATIONS

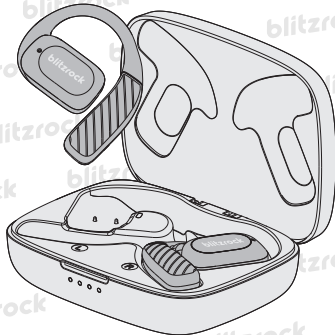 

Brand	Blitzrock
Model	CT3
BT Version	BT5.4
BT Protocol	A2DP, HFP, HSP, AVRCP, SBC, AAC
Driver Unit Size	17*12mm
Charging Input	USB-C 5V $\equiv$ 0.5A
Battery Capacity(Earphones)	60mAh*2
Battery Capacity(Charging Case)	400mAh
Warranty	12 Months

FCC statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.