



Original	Replacement
 Power	 Power
 TV	 Smart / List
 TV	 +  Shift + 1
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/DTV	 +  Shift + Guide / EPG / -/--
 PRE-CH	 Back / Return
 TV/DTV	 TV/Radio /

Original	Replacement
 CH MGR	 Display / Media
 D.Menu	 D.Menu / Top
 Sleep	 Sleep / Timer
 << REW	 << / Tune-
 << REW	 I<< / Preset-
 Stop	 Stop / Hold
 Vol+	 Vol+
 >> FF	 >>I / Preset+
 >> FF	 >> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear







Original	Replacement
 DVD	 Smart / List
 DVD	 +  Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 << REW	 << / Tune-
 << REW	 I<< / Preset-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze


Original	Replacement
 >> FF	 >>I / Preset+
 >> FF	 >> / Tune+
 Stop	 Stop / Hold
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Enter / OK	 OK
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Info	 Info / Angle





Original	Replacement	Original	Replacement
 STB	 Smart / List	 << REW	 I<< / Preset-
 STB	 +  Shift + 3	 Play / Pause	 Pause / Step / Freeze
 Power	 Power	 >> FF	 >>I / Preset+
 Source	 AV / Input / RDS	 Play / Pause	 Play / Slow
 1	 1	 >> FF	 >> / Tune+
 2	 2	 Stop	 Stop / Hold
 3	 3	 Vol+	 Vol+
 4	 4	 Vol-	 Vol-
 5	 5	 Mute	 Mute / Dimmer
 6	 6	 P+	 CH+ / Page+
 7	 7	 P-	 CH- / Page-
 8	 8	 Menu	 Menu / Home
 9	 9	 Exit	 Exit / Cancel / Clear
 0	 0	 Up	 Up
 PRE-CH	 Back / Return	 Enter / OK	 OK
 Sleep	 Sleep / Timer	 Left	 Left
 << REW	 << / Tune-	 Right	 Right



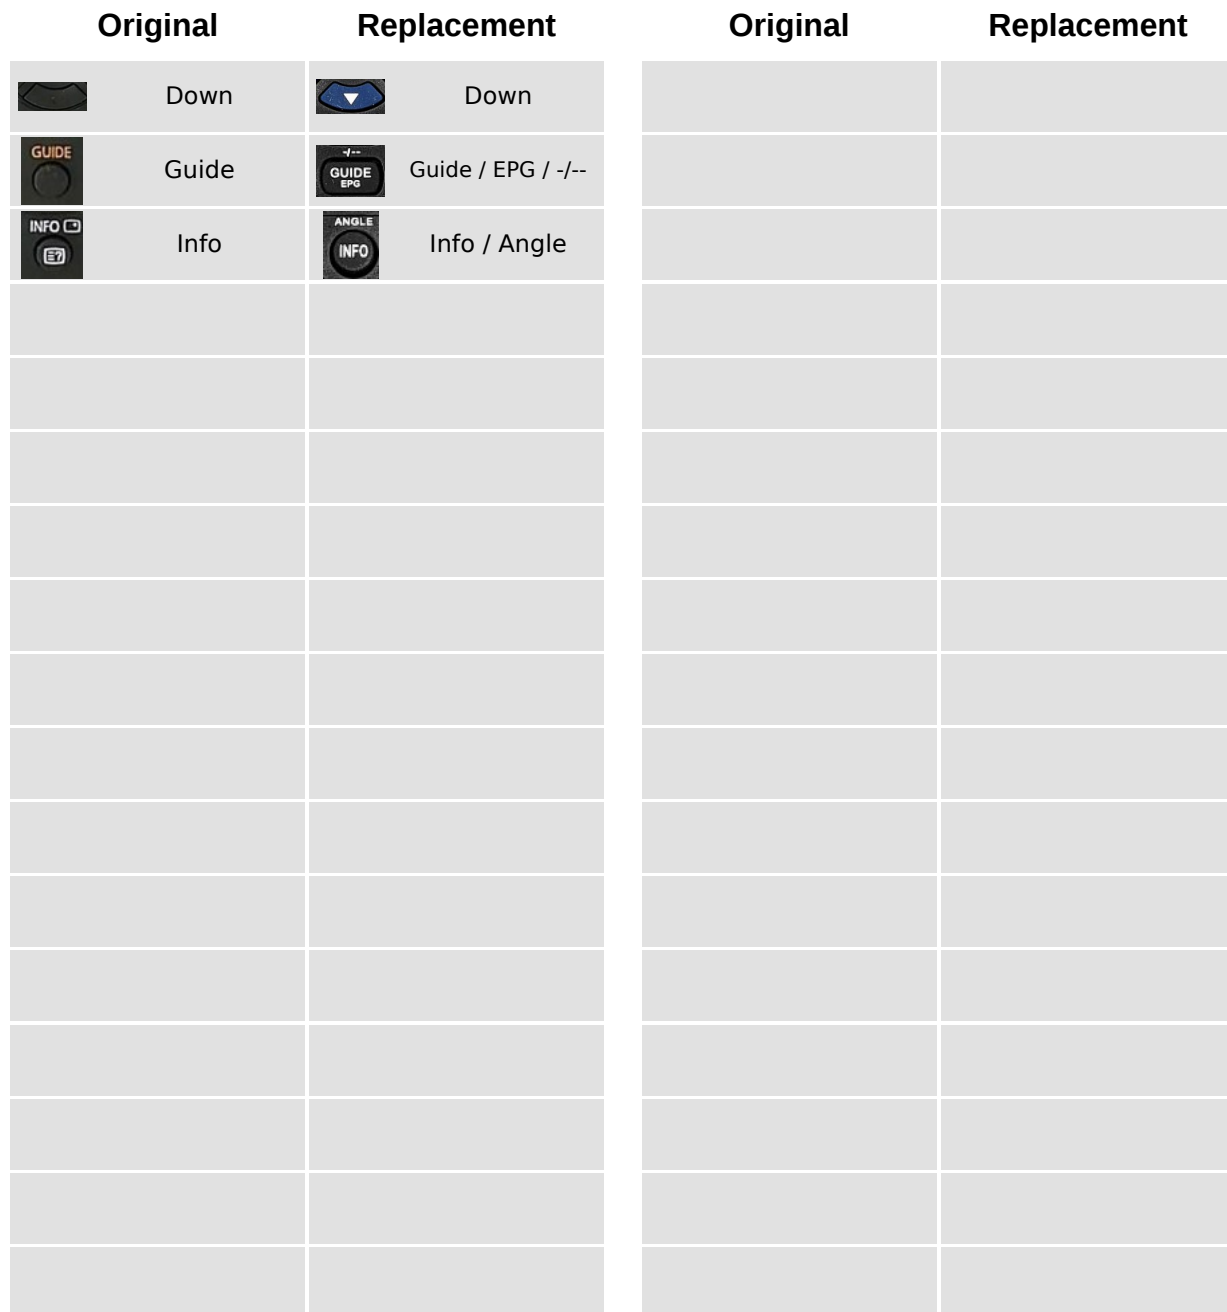



Original	Replacement
 Mute	 Mute / Dimmer
 CABLE Power	 Power
 CABLE	 Smart / List
 VCR	 Display / Media
 CABLE 1	 1
 CABLE 2	 2
 CABLE 3	 3
 CABLE 4	 4
 CABLE 5	 5
 CABLE 6	 6
 CABLE 7	 7
 CABLE 8	 8
 CABLE 9	 9
 CABLE 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 CABLE P-	 CH- / Page-

Original	Replacement
 CABLE P+	 CH+ / Page+
 VCR Power	 Shift + Power
 VCR Menu	 Menu / Home
 VCR Exit	 Exit / Cancel / Clear
 VCR 1	 Shift + 1
 VCR 2	 Shift + 2
 VCR 3	 Shift + 3
 VCR 4	 Shift + 4
 VCR 5	 Shift + 5
 VCR 6	 Shift + 6
 VCR 7	 Shift + 7
 VCR 8	 Shift + 8
 VCR 9	 Shift + 9
 VCR 0	 Shift + 0
 VCR P+	 Shift + CH+ /
 VCR P-	 Shift + CH- /
 VCR Up	 Up





Original	Replacement
 VCR Left	 Left
 VCR Enter/OK	 OK
 VCR Right	 Right
 VCR Down	 Down
 VCR Info	 Info / Angle
 VCR Stop	 Stop / Hold
 VCR << REW	 << / Tune-
 VCR << REW	 I<< / Preset-
 VCR Play/Pause	 Play / Slow
 VCR Play/Pause	 Pause / Step / Freeze
 VCR >> FF	 >> / Tune+
 VCR >> FF	 >>I / Preset+

Original	Replacement

