 


# MANUAL OF REMOTE CONTROL

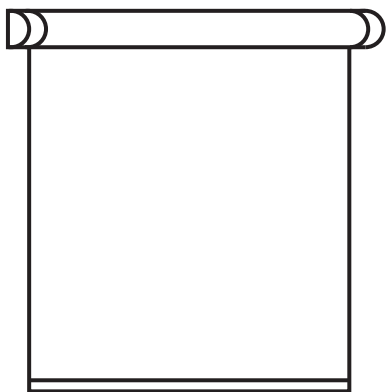

# CONTENTS

## REMOTE CONTROL

1. Parameters	1
2. Install The Battery	2

 
 
## REMOTE CONTROL PROGRAMMING

1. Enter Setting Mode	3
2-14. Motor Programming	4-12

## CERTIFIED STATEMENT

1. FCC Statement	13
------------------	----

# REMOTE CONTROL

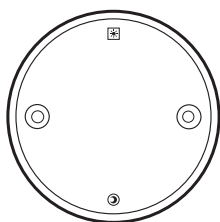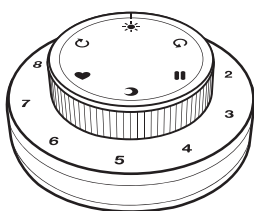


Remote Holder



**S** x2

## 1. PARAMETERS

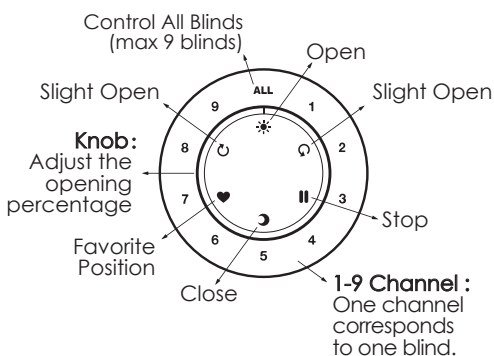 


### Example Operation:

If there are 9 blinds, and you want to open blinds 1, 3, and 5 together, the operation method is:

Press 1, 3, and 5 in sequence, and then press "Open".

 
### Back

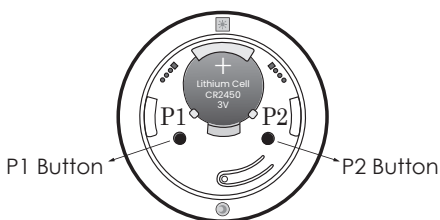

## 2. INSTALL THE BATTERY




 Your blind has been programmed before shipment.  
Please use it directly after installation.

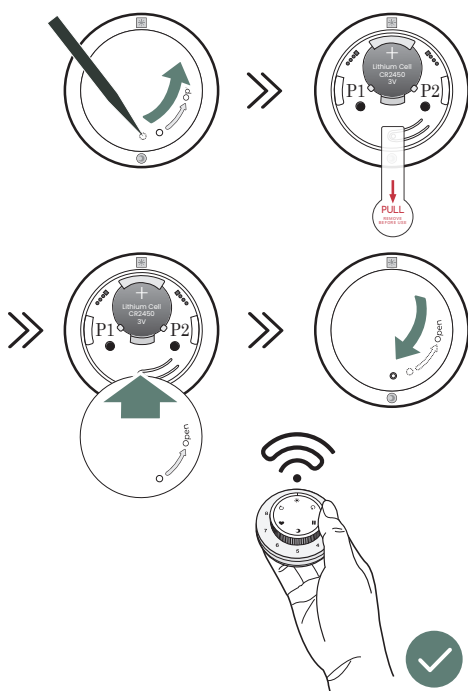



## INSTALL THE REMOTE HOLDER ON WALL
 
### Method 1

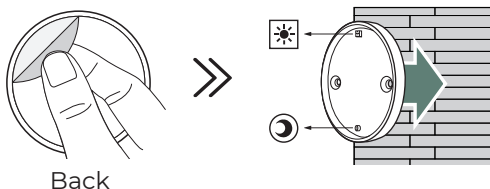

Back


### Method 2

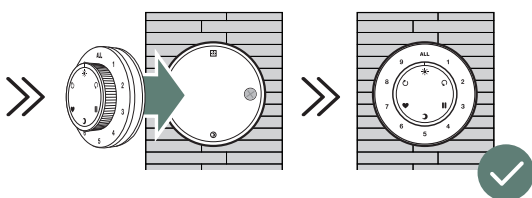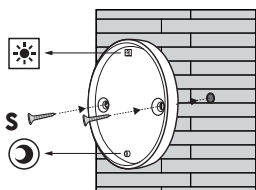  


# REMOTE CONTROL PROGRAMMING

## 1. ENTER SETTING MODE

 01.

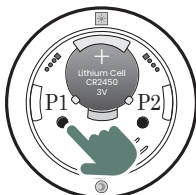


Hold " P1 " for **5s**

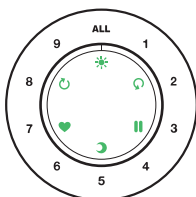 

Green light flashing indicates setting mode.

 02.

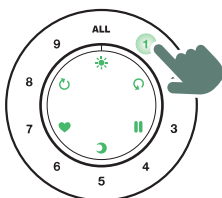

Choose the channel you want to set from "1-9".




It will exit setting mode if hold "P1" for 5s again or no operation for 3 mins.

## 2. SET FAVORITE POSITION



 
1. The favorite position is not set at factory.
2. Before setting the favorite running position, please ensure that the top and bottom limit positions have been set.
3. Please ensure that the remote is in setting mode before following the steps below:

01.

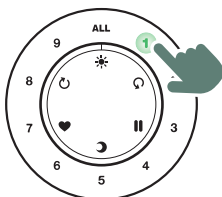

Press " Channel **1** "  
(Take channel 1 for example)

 02.

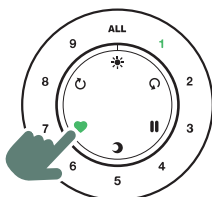


Hold " ♥ " for **3s**



The motor responds.



## 3. DELETE FAVORITE POSITION

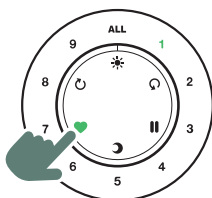 

Hold " ♥ " for **3s**




The motor responds.



## 4. HOW TO CHANGE UP/DOWN DIRECTION



 Please ensure that the remote is in setting mode before following the steps below:

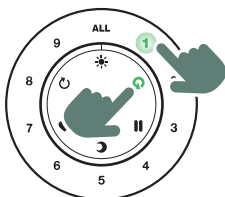

Hold " Channel 1 " then  
Press "  " for x1  
(Take channel 1 for example)



The motor responds.




## 5. HOW TO ADJUST SHADES RUNNING SPEED



 1. Please ensure that the remote is in setting mode before following the steps below:
2. If the motor does not jog, it may have reached the maximum or minimum speed. There are three speed settings available.

Add speed

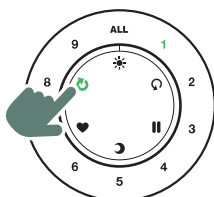


Hold "⌚" for **3s**



The motor responds.



 Reduce speed

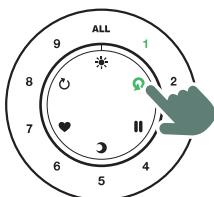

Hold "⌚" for **3s**



The motor responds.






## 6. DELETE TOP LIMIT POSITION



 Please ensure that the remote is in setting mode before following the steps below:

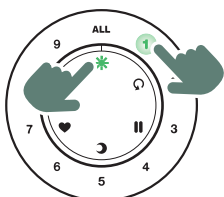

» The motor responds.


Hold " Channel 1 " then  
Press " ☀ " for x1  
(Take channel 1 for example)



## 7. DELETE BOTTOM LIMIT POSITION



 Please ensure that the remote is in setting mode before following the steps below:

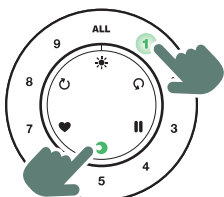

» The motor responds.


Hold " Channel 1 " then  
Press " ☾ " for x1  
(Take channel 1 for example)



## 8. DELETE TOP & BOTTOM LIMIT POSITION



 1. The favorite position will also be deleted.
2. Please ensure that the remote is in setting mode before following the steps below:

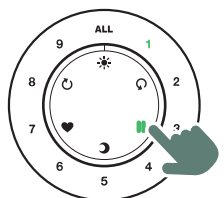

» The motor responds.

Hold " ⏻ " for 3s



## 9. SET TOP LIMIT POSITIONS

 


Please ensure that the remote is in setting mode before following the steps below:

01.

Move the shade to the desired top limit position.

02.

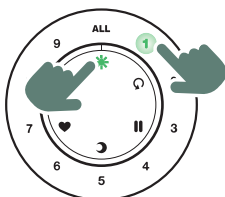

Hold " Channel 1 " then  
Press " ☀ " for x1  
(Take channel 1 for example)



The motor responds.



## 10. SET BOTTOM LIMIT POSITIONS

 


Please ensure that the remote is in setting mode before following the steps below:

01.

Move the shade to the desired bottom limit position.

02.

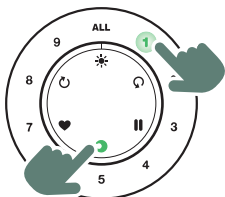

Hold " Channel 1 " then  
Press " ☾ " for x1  
(Take channel 1 for example)




The motor responds.



# 11. UNPAIR THE MOTOR



 1. All paired remotes on the current channel won't be able to control the motor after the step.
2. Please ensure that the remote is in setting mode before following the steps below:

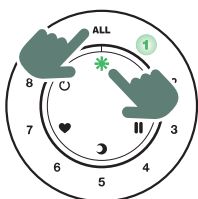

Hold "**ALL**" for **3s** then  
Press "**\***" for **x1**  
(Take channel 1 for example)



The motor responds.



## 12. RE-PAIR THE MOTOR



Please ensure that the remote is in setting mode before following the steps below:

 
01.

Hold the motor button for **2s**




The motor responds.

02.

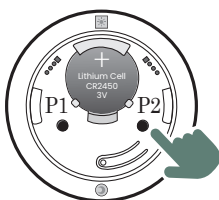

Press " P2 " **x1**

 03.

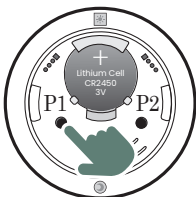

Press " P1 " **x1**



# 13. ADD NEW REMOTE "B"



 
Please ensure that the remote is in setting mode before following the steps below:

## 01. Paired remote "A"




Hold " Channel **1** " then  
Press " **II** " for **x1**  
(Take channel 1 for example)


02. Ensure that the unpaired remote "B" has entered setting mode.  
Choose the channel you want to set from 1-9. Please refer to Page 3 for this step.

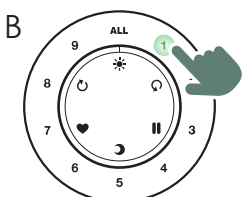

 03.

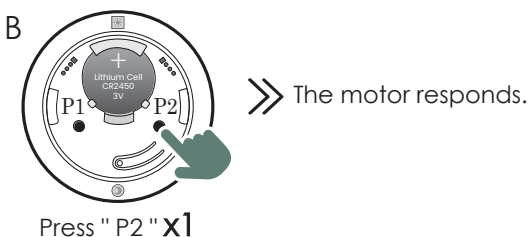

 04.

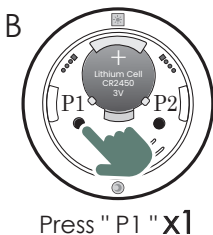


# 14. KNOB FUNCTION



Please ensure that the remote is not in setting mode before following the steps below:  
If it's in setting mode, please refer to page 3 to exit setting mode.


## ADJUST THE OPENING PERCENTAGE

 01.

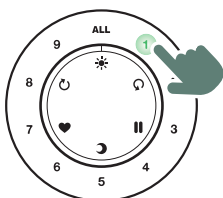


Press " Channel 1 "  
(Take channel 1 for example)

 02.

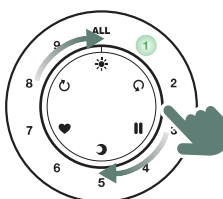

» The shade moves down.

 Rotate clockwise

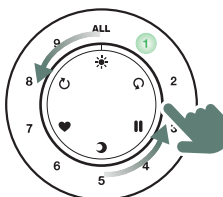


» The shade moves up.

Rotate counterclockwise



1. At each rotation, the current black mark is the initial position.
2. Rotate it for one cycle, and the shade will open by 40%.

## DOT MOVE

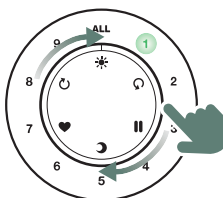 

» The shade moves up or down 1-2 grids.

Rotate 1-2 grids



For Shangri-la Shades, please move the shade to bottom limit position and rotate the knob 1-2 grids to achieve dimming function.

# CERTIFIED STATEMENT

## 1. FCC STATEMENT

### **FCC ID: 2A9IA-GR-09-01**

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and.
- (2) This device must accept any interference received, including interference that may cause undesired operation.