

Allison Offline Authentication USB Dongle **Setup Guide**

The purpose of the Allison Offline Authentication USB Dongle is to allow Allison DOC® and TCM Reflash to authenticate with the 6th Gen TCM when an active internet connection is not available (offline) or has a low grade/poor quality connection. The Allison Offline Authentication USB Dongle is not required when online and logged into Allison DOC® with an Allison HUB user ID or Allison TCM Reflash user ID.

Note: Allison OEM VCP users should refer to the VCP User Guide for information. The VCP User Guide is located on Allison HUB under the Engineering > VEPS Tools menu.

While the Allison Offline Authentication USB Dongle is intended for offline use, an active internet connection <u>and</u> an Allison HUB account or TCM Reflash account are required to activate and provision the dongle for the first time. To request an Allison HUB account visit https://hub.allisontransmission.com/.

NOTE: Due to the small size of the USB, it is recommended to attach the USB dongle to a lanyard.

To use your new USB dongle for the first time:

- Insert USB dongle to PC's USB port and ensure the white LED illuminates. If it does not, remove and reinsert the USB dongle.
 - a. Open Allison DOC® or TCM Reflash
 - From Allison DOC®, go to the "Help" menu and select "Allison Security (6th Gen)", then select the "Advanced" button.
 - From TCM Reflash, select the 6th Gen Database and then select the link in the lower corner.
- 2. Click the "New USB" tab.
- Enter your Pin in the "New Pin" and "Confirm Pin" boxes. Click the "Change Pin" button.
- 4. Indicate whether the credentials are for TCM Reflash or the Allison HUB by selecting the radio button.

Allison Security

Allison certificates are necessary

Offline Access | Online Access | New USB

New PIN:

Change PIN

PIN must be from 6 to 16 digits long. Too many wrong PIN attempts results in the USB Dongle being reset you must then set a new PIN and provision the USB Dongle. Access to PCS is necessary for provisioning

Close


Confirm PIN:

available through US

- 5. Click Provision USB Dongle
- 6. A success message should appear and signs indicator is updated. This functionality ails if a new/reset USB dongle is not detected. The #signs are the number of 6th Gen TCM 'unlocks' allowed.

When the #signs are low, reprovision Allison Certificates on an existing USB dongle:

- 1. Insert USB dongle to PC's USB port
- Access Allison Certificates dialog. Go to the "Online Access" tab.
- Indicate whether the credentials are for TCM Reflash or the Allison HUB by selecting the radio button.
 - a. Enter Username and Password
- 4. Enter the USB dongle's PIN
- 5. Clicking the "Provision USB Dongle" button.
- A success message will display after approximately one minute.

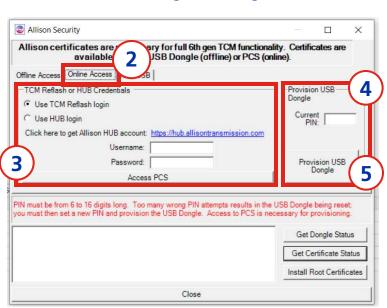

X

4

Get Dongle Status

Get Certificate Status

Install Root Certificates

h gen TCM functionality. Certificates are

(offline) or PCS (online).

User Name

Password

For support, please contact:

DOCsupport@noregon.com | U.S. and Canada Toll Free: 877-659-6913 | International: 1-336-970-5534