 


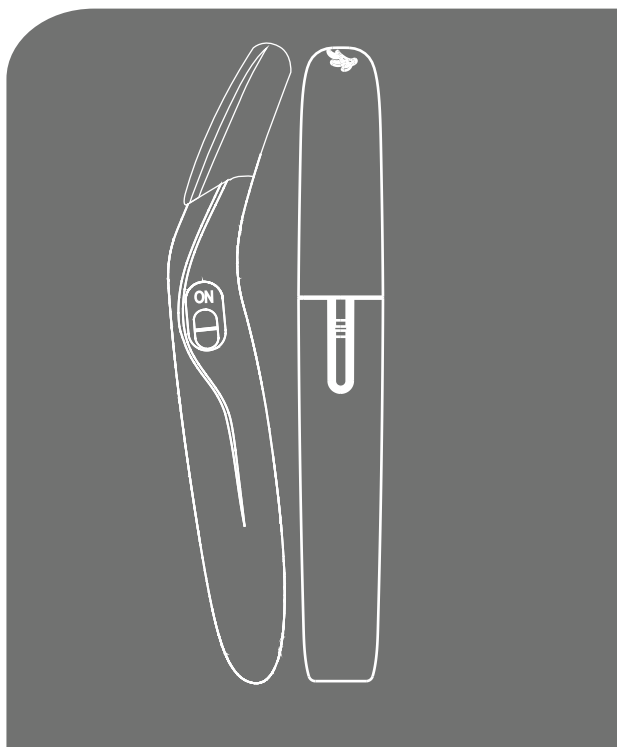

TB-2052 & TB-858

Safety Instructions:

⚠ WARNING

- ⚠ CAUTION**

- ### Device Specifications:

- Device Description:


- Picture 1

Preparing the Device for Use:

Install the Battery

How to Use:


Picture 3

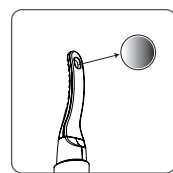

Picture 4

-

Picture 5

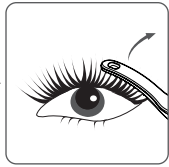

-

Picture 6

Cleaning & Maintenance:

- 1) Ensure the device is switch off before you start cleaning.
- 2) Do not immerse it or wash under running water. Clean the device with a clean slightly wet cloth.
- 3) Do not use steel wool, abrasive cleansers, chemicals, or corrosive liquids to clean the device.
- 4) Do not use lubricants, detergents, polishing agents, or air fresheners on this device.
- 5) Remove the mascara on the heated comb with a cotton swab moistened with makeup remover, afterward clean it with a cotton swab moistened with water. Allow it to dry in a well-ventilated place.

Storage:

Recycling:

Warranty & Support:

Troubleshooting

Problem	Possible Cause	Solution
The heated comb temperature is low.	The battery is low.	Replace the battery as instructed in this instruction manual.
	Using the device in a room with a temperature below 15°C.	This is normal.
The curling effect is not satisfying.	The heated comb has not preheated completely.	Use the device only after the temperature sensor on the back of the heated comb changes from blue to red.
Eyelids feel hot when using the device.	You are pressing the heated comb against the eyelids	Use the device in front of a mirror to avoid pressing the heating comb on the eyelids.
Other problems.		Consult your local dealer.

Device Description:

-
- 1 Trimmer Blade
2 Power Switch
3 Blade Release Button
4 Battery Cover
5 Protective Cap
6 Long Eyebrow Comb
7 Short Eyebrow Comb
8 Cleaning Brush


Picture 1

FEATURES:

1. Gently, quickly and painlessly removes and trims hair without irritation. Also safe for sensitive skin.
2. Ideal for removing hair from Bikini area and also eyebrows, face, underarms and whole body.
3. Tilted cutting head is good for holding and trimming.
4. With 2 combs. The big comb for body hair trimming and the small comb for eyebrow.
5. Sleek and compact, this shaver fits easily in your purse and cosmetic bag.
6. x 1 AAA battery required (not provided).


HOW TO USE:

- **How to install battery:**

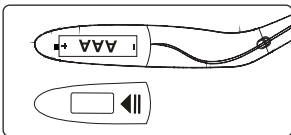

- How to use:

1. Remove the cap before use.
2. Slide the power switch up to the "ON" position to turn on the unit.
3. Close the blade head to your skin and remove unwanted hair by moving it in the opposite direction of hair growth.
4. Attach the big comb or small comb to the blade head for body hair trimming or eyebrows.
5. Slide the power switch down to turn off the unit after each use.

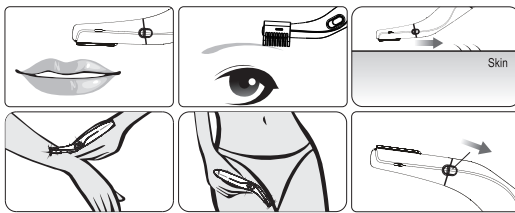

- How to clean:

1. Use the cleaning brush to remove any hair that has accumulated on the blade.
2. If necessary for cleaning, the blade head may be removed by sliding the latch down away from the tip.
3. Clean the main body with wet/dry cloth or tissue if dirty.
4. This product is not water resistant. Don't wash it with water.

ATTENTION:

1. Remove battery if the product will not be used for an extended period.
2. Keep out of reach of children.
3. DO NOT disassemble the main body .

TROUBLE CLEARING:

Feature	Fault Cause	Processing Method
Poor trimming effect	The blade was deformed or damaged.	Replace with a new blade.
	Worn blades.	
Does not work	Battery installed incorrectly.	Reinstall battery correctly.
	Low battery.	Install new battery.
Blade loose	The blade head not locked correctly.	Lock the blade head correctly.

12 Month Warranty

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic. 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us