

# User Guide

kugan  
.com



## Atlas G900 Mini PC Pro

with Windows 11 Pro (128GB)

KAMPG900HA



# Safety & Warnings

 
- Read all instructions in this user guide before first use. Retain the guide for future reference.
- Handle the PC with care and inspect it regularly to ensure it remains in good working condition.
- If the PC, power cord, or plug show any signs of damage, cease use immediately and contact **help.Kogan.com** for assistance.
- Do not modify, repair, or attempt to alter the features or functions of the PC.
- This PC contains small CMOS batteries on the motherboard. If these batteries require replacement, do not attempt to replace them yourself. Contact **help.Kogan.com** for assistance.
- Do not use the PC in environments where it may come into contact with liquids. If any liquid touches the PC, stop use immediately.
- Avoid exposing the PC to strong light or direct sunlight.
- Do not place items directly on top of or against the sides of the PC, as this may impede proper cooling.
- A sudden power outage during use may damage the hard drive. Once power is restored, perform a scan to check the hard drive for errors.
- When connecting or disconnecting cables, avoid pulling them forcefully. Take care when inserting or removing any connected cords.
- Images in this user guide are for reference only.
- Unplug and store the PC if it will not be used for an extended period.

# Components


- Mini PC
- Power Adaptor
- Wall Mount Bracket
- PM4x10mm Screw (x2)
- PM3x5mm Screw (x2)
- User Guide

# Overview


## Top and Side View

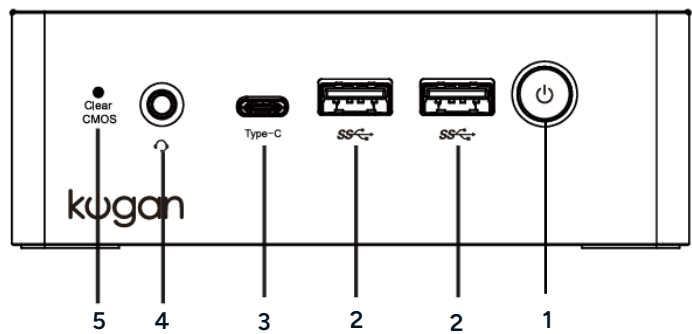

 - 1 Power Button
- 2 USB 3.0 Port
- 3 USB-C Port
- 4 3.5mm Audio Out Port
- 5 Reset Button

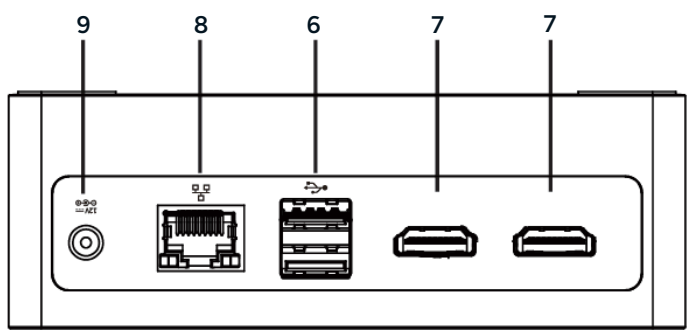


 - 6 USB 2.0 Port
- 7 HDMI Port
- 8 Ethernet Port
- 9 DC Input

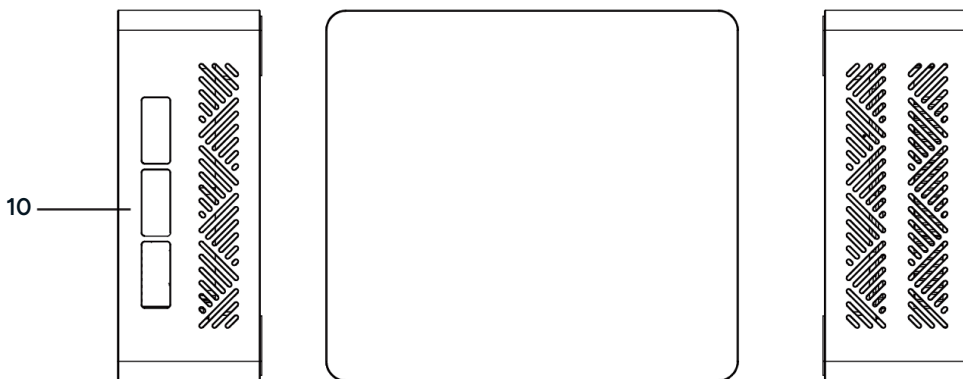

10      Outlet



## Bottom View

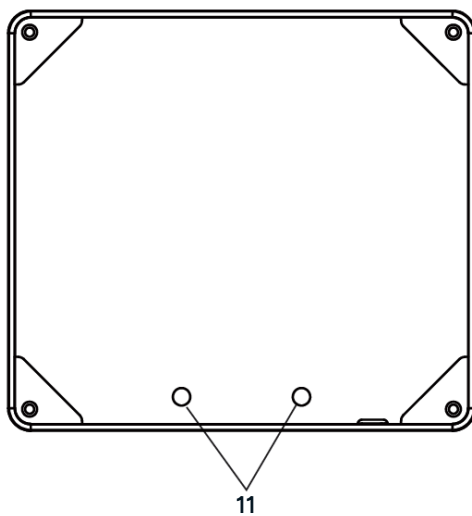 

11      Mounting Holes

# Assembly

  1. Turn on your TV or monitor and set the video input to HDMI.
2. Connect one end of an HDMI cable (not provided) to an HDMI port on the PC. Connect the other end to the HDMI port on your TV or monitor.
3. Plug the power adaptor into an electrical outlet, then connect the other end to the DC input on the PC.
4. Press the 'Power' button to start the PC.
5. Connect a wired or wireless keyboard and mouse via the USB ports to begin use.

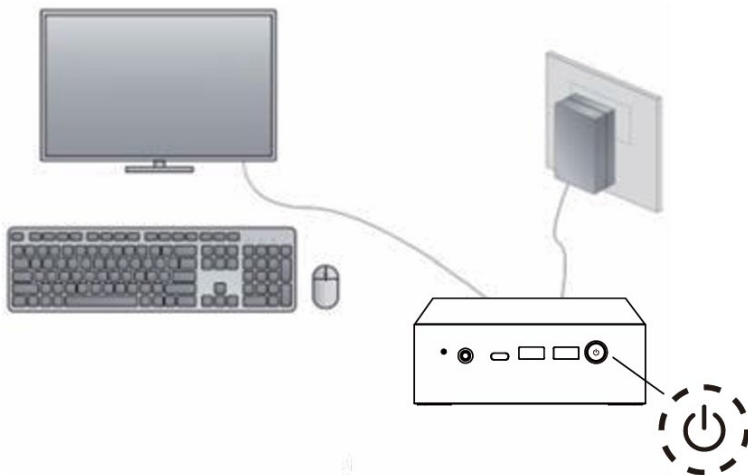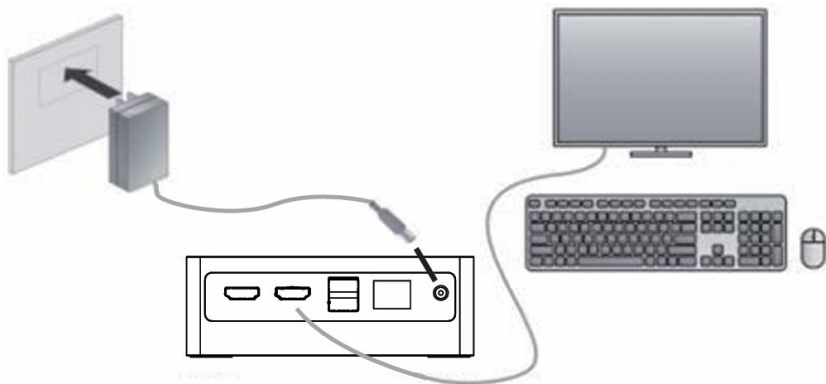

# Installation

## Wall Mounting

### Step 1: Attach the Bracket to the PC

1. Turn the PC upside down to expose the mounting plate.
2. Align x2 small holes on the bottom of the bracket with the holes on the PC's mounting plate.
3. Secure the bracket to the PC using x2 PM3x5mm screws.

### Step 2: Mark Drill Points on the Wall

1. Hold the PC with the attached bracket against the wall in the desired mounting location.
2. Use a pencil to mark the positions of x2 larger holes on the top section of the bracket.

### Step 3: Drill Holes

Using a drill and appropriate bit for your wall type, create holes at the marked positions.

### Step 4: Mount the PC to the Wall

1. Align the bracket's top holes with the drilled holes.
2. Insert x2 PM4x10mm screws through the bracket into the wall.
3. Tighten securely to ensure the PC is stable and flush against the wall.

### Step 5: Check Stability

Gently tug the PC to confirm it is firmly mounted and does not wobble or shift.

#### Note:

Ensure all cables are connected before final mounting or leave enough clearance to access ports after installation.



## Accessing the PC

While the PC is booting up, press the 'Esc' key. This allows access to advanced settings.

## Reset

If the PC needs to be reset to factory settings, use a pin (not provided) to press and hold the 'Reset' button for a few seconds. The PC will then reset and restart.

### Note:

The 'Reset' button is intended only for restoring the PC to its default settings during recovery. Use this button only when the PC is powered off

## Using Windows 11

When the PC is turned on for the first time, you may be prompted to set up Windows 11. Follow the on-screen instructions to complete the setup.

## Desktop

Once the setup is finished, the PC will boot to the desktop. The desktop may contain icons, which serve as shortcuts for accessing applications. To open an application, double-click its icon.




### Note:

You may need to log into your Microsoft account for programs to run with full compatibility.


## Start Menu

- Click the Windows icon at the bottom of the screen to open the Start menu.
- Installed apps can be accessed via the Start menu. Recently used apps will be listed under the Recent section for quick access.
- Additional apps can be installed from the Microsoft Store.

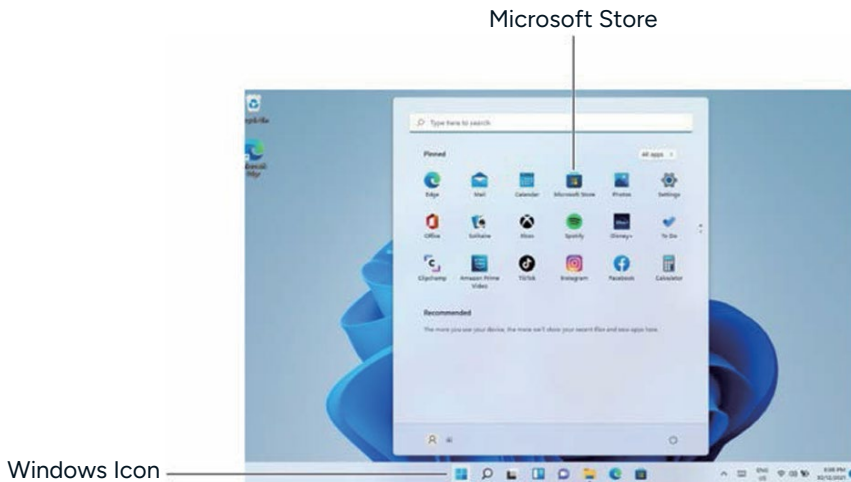 



## Notification Menu

 Click the time and date in the lower-right corner of the screen to open the Notification menu. This menu displays alerts such as emails, updates, and calendar reminders, and provides quick access to settings (such as Wi-Fi, Bluetooth, and screen brightness).

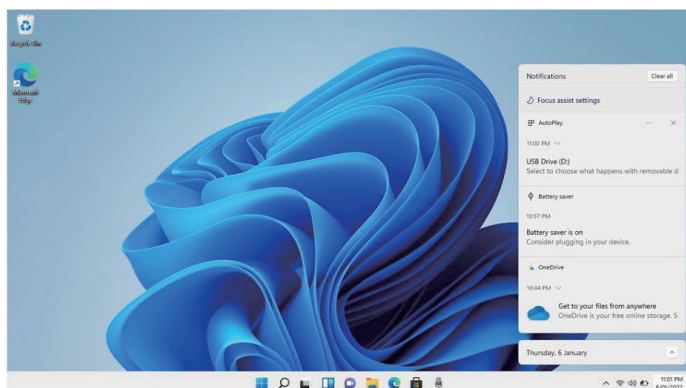


## Multitasking

  To use multiple windows, drag one window to the left or right side of the screen until an overlay appears, then release it. You can then select another open window to fill the other half of the screen.

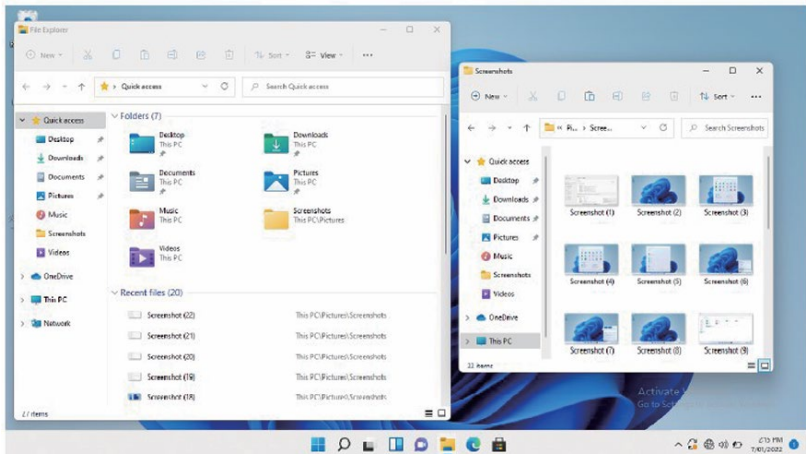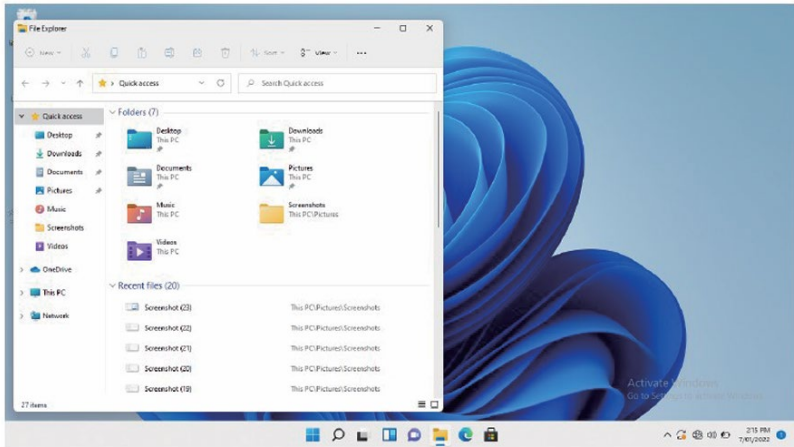

## Sleep, Restart and Shut Down

- Click the Windows icon at the bottom of the screen, then click the 'Power' icon. Select 'Sleep', 'Restart', or 'Shut down' to perform the desired action.
- To wake the PC from sleep, press the 'Power' button.
- If the PC becomes unresponsive, press and hold the 'Power' button to force a shutdown, then press it again to turn the PC back on.

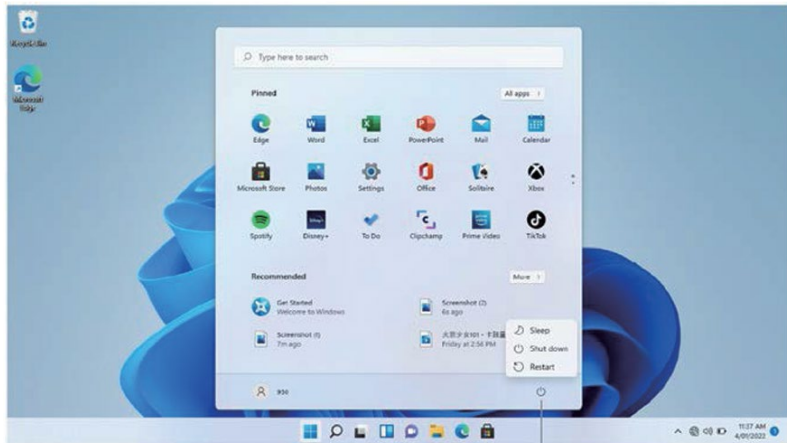 

Power Icon

# Specifications

Power input	DC IN, 12V/3A
Dimensions	124.5 x 112.0 x 44.0mm
Weight	298g
<b>System</b>	
CPU	Intel Twin Lake N150
CPU speed	Base frequency 0.8 GHz
Operating system	Windows 11 pro
GPU	Intel® Graphics
Memory	4GB (DDR4) Sodimmx1
Storage capacity	128GB
Expandable SSD	128GB SSD M.2 2280 SATA
microSD card support	Maximum 128GB
Bluetooth	Yes, V5.0
Ethernet (RJ45)	Yes
Wi-Fi connectivity	802.11a/b/g/n/ac, supports 2.4GHz and 5GHz
<b>Ports</b>	
USB 3.0 port	x2
USB 2.0 port	x1
USB-C port	x1
HDMI port	x2
3.5mm audio port	x1

## Notes

[illegible]



### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.Kogan.com**.

