


DJI MIC 3

Quick Start Guide


快速入门指南

v1.0



Instrukcja obsługi

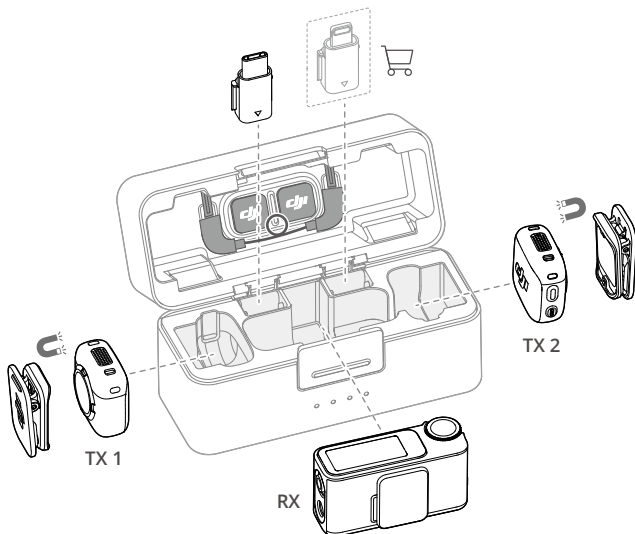

A

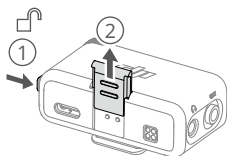

RX

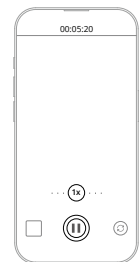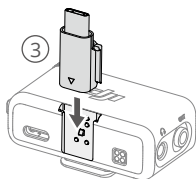


TX 1




TX 2

B

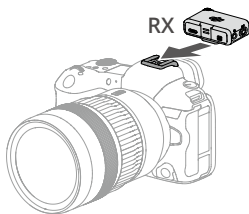


TX 1

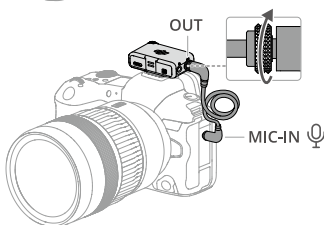



TX 2





C

TX

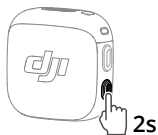Osmo Action 4 /
Osmo Action 5 Pro

 Osmo Pocket 3
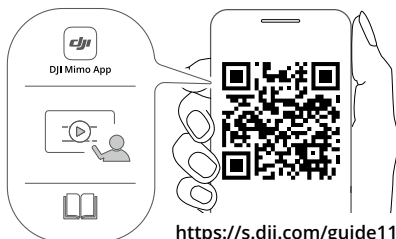
<https://s.dji.com/guide111>

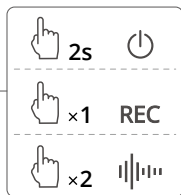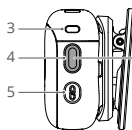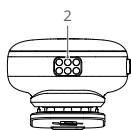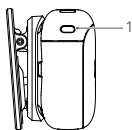

EN

 
 

1. Recording Status LED
2. Charging Contacts
3. System Status LED
4. Power Button
5. Linking Button

CHS

1. 录音状态指示灯
2. 充电触点
3. 系统状态指示灯
4. 电源按键
5. 配对按键

PL

1. Dioda stanu nagrywania
2. Styk ładowania
3. Dioda LED stanu systemu
4. Przycisk zasilania
5. Przycisk łączenia

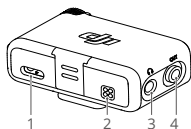

EN



1. USB-C Port
2. Charging Contacts
3. Monitor Port
4. Output Port
5. Touchscreen
6. Dial
7. Power Button
8. Release Button

CHS

1. USB-C 接口
2. 充电触点
3. 监听接口
4. 输出接口
5. 触摸屏
6. 拨轮
7. 电源按键
8. 解锁按键

PL

1. Port USB-C
2. Styk ładowania
3. Port monitora
4. Port wyjściowy
5. Ekran dotykowy
6. Pokrętło
7. Przycisk zasilania
8. Przycisk zwalniania

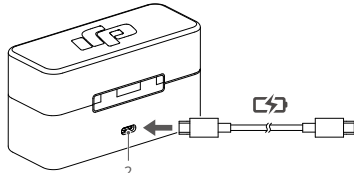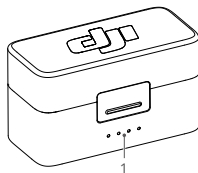

EN

1. Battery Level LEDs
2. USB-C Port

CHS

1. 电量指示灯
2. USB-C 接口

PL

1. Diody LED poziomu naładowania akumulatora
2. Port USB-C