

## WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



**United States**  
**Lincoln Customer Relationship Center**  
1-800-521-4140  
(TDD for the hearing impaired 1-800-232-5952)  
**owner.lincoln.com**

**Canada**  
**Lincoln Client Relationship Centre**  
1-800-387-9333  
(TDD for the hearing impaired 1-888-658-6805)  
**lincolncanada.com**

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



Lincoln MKC  
February 2016  
First Printing  
Quick Reference Guide  
Litho in U.S.A.  
HJ7J 19G217 AA

**2017 MKC**



## Quick Reference Guide



The Lincoln Pledge is the collective promise of everyone at the Lincoln Motor Company—from our trusted service advisors to expert technicians to the voice on the other end of the line should you call—that we'll be there for you and your Lincoln wherever, whenever, if ever you need us. Here are some of the ways the Lincoln Pledge comes to life and makes the journey of owning a Lincoln a rewarding one.

### Lincoln Warranties

Be assured that everything between the bumpers of your Lincoln is covered for four years/50,000 miles<sup>2</sup> as well as a six-year/70,000-mile Powertrain Warranty for life.<sup>2</sup>

### Roadside Assistance

If ever you need help on the road, the Lincoln Motor Company will be there for you with 24-hour/seven-days-a-week assistance nationwide.<sup>2</sup>

### Complimentary Car Wash

As an added touch, after each service visit we're happy to provide your Lincoln back to you washed and ready for the road ahead.<sup>3</sup>

### Complimentary Loaner

Should your Lincoln require warranty service, we'll be there for you with a loaner vehicle.<sup>3</sup>

### Service Parts Warranty

We'll stand behind our service and you with a two-year, unlimited-mile warranty on both parts and labor.<sup>2</sup>

### Dedicated Support


**Lincoln Client Relationship Center  
and Roadside Assistance**  
1-800-521-4140

**TDD for the Hearing Impaired**  
1-800-232-5952

**owner.lincoln.com**

- ▶ How-to and informational videos.
- ▶ Warranty and maintenance information.
- ▶ Make your payment or schedule service online.
- ▶ Shop for accessories.

**Join us in Conversation**

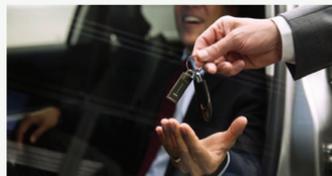

Our caring agents are empowered to handle your call and concerns from beginning to end.

<sup>1</sup> Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at **LincolnCanada.com** for more details.

<sup>2</sup> See dealer for complete details. Lincoln reserves the right to change program details at any time without obligations.

<sup>3</sup> Availability depends on dealership participation.

# Table of Contents

- Instrument Panel..... 4 – 5
- SYNC 3..... 6 – 9
- Convenience.....10
- Lincoln Experiences ..... 11
- Liftgate..... 12
- Liftgate and Built-in Storage ..... 13
- Function..... 14 – 15
- Essential Features..... 16 – 17
- Comfort..... 18
- Commonly Used SYNC 3 Voice Commands..... 19



owner.lincoln.com



lincolncanada.com



MyLincoln Mobile

### LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you install a scanner app) and you can access even more information about your vehicle.



### 1 Electric Parking Brake

The operating switch (P) replaces the conventional handbrake, and is to the left of the steering column. To use, pull the switch. The brake system warning lamp lights to confirm that you applied the electric parking brake. You can release the electric parking brake manually by switching the ignition on, pressing the brake pedal and then pressing the electric parking brake switch down. The brake system warning lamp turns off. Refer to the **Brakes** chapter of your **Owner's Manual** for more details.

### 2 Left Vehicle Information Display

Provides information about various systems on your vehicle. Use the left, 5-way control located on the steering wheel to choose and confirm settings and messages. Refer to the **Information Displays** chapter in your **Owner's Manual** for more information.

## Instrument Panel

2017 MKC

### 3 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or blinks after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion (avoid heavy acceleration and deceleration) and contact your authorized dealer as soon as possible.

### 4 Right Vehicle Information Display

Displays information about Entertainment, Climate, Phone and Navigation\*. Use the right, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the **SYNC 3** chapter in your **Owner's Manual** for more information.

### 5 Steering Wheel Controls

#### Audio

Press **VOL +** or **-** to increase or decrease volume levels. Press **◀** or **▶** to access the next or previous radio station preset, CD track or MP3 selection.

#### Voice

Press to answer call.  
 Press to exit phone mode or end a call.  
 Press to access voice recognition.

\*if equipped

### 6 Power Tilt and Telescoping Steering Column\*

The 4-way rocker control allows you to adjust the steering wheel to the position you desire.

### 7 Push Button Start

Allows you to start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. If you leave your vehicle idling for an extended period of time, it automatically shuts down. Before the engine shuts down, a message appears in the information display, allowing the driver to override the shutdown feature.

**Note:** Your intelligent access key must be inside the vehicle for the ignition to start. The keyless warning alert sounds the horn twice when you exit the vehicle with the key and the vehicle is still on.

### 8 Push Button Shift Transmission

Your vehicle includes an electronic transmission. The shift buttons are on the center stack next to the SYNC® 3 system.

#### Putting Your Vehicle in Gear

- Fully press down the brake pedal.
- Press and release one of the **PRNDS** buttons to select your gear.
- The gear shift button you select lights and the information display shows the selected gear.

- Release the brake pedal and your transmission remains in the selected gear.

**Note:** When entering an automatic car wash, always put your vehicle into **Stay in Neutral** mode. To put your vehicle in **Stay in Neutral** mode, make sure your vehicle is stationary first and then:

- Press the neutral (N) button on the shifter assembly once. The information display screen then reads **"Press N again to enter Stay in Neutral mode"**.
- Press **N** on the shifter assembly again. The information display displays a message to confirm that you are in the **Stay in Neutral** mode, and the **N** button flashes continuously to confirm your selection.
- To exit **Stay in Neutral** mode, fully press down on the brake pedal, then press and release another gear. Release the brake pedal and your transmission remains in the selected gear.


### 9 Auto-Start-Stop\*

For more information on Auto-Start-Stop, see page 17.

### 10 Auto Hold

For more information on Auto Hold, see page 15.

### 11 Hazard Warning Flashers

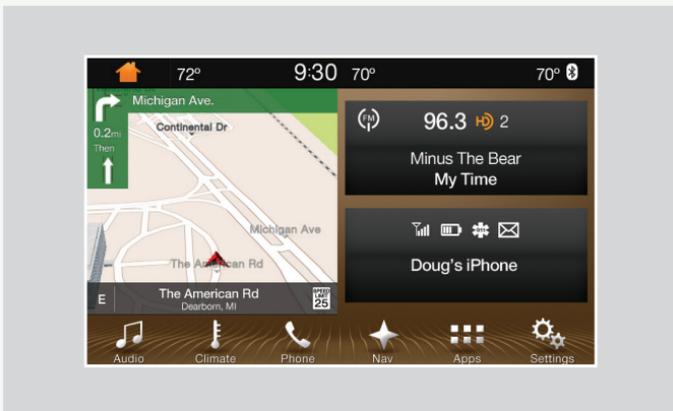

**Using SYNC 3**

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

Use the touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. The system provides easy interaction with your audio, climate, phone, navigation\*, mobile apps and settings.

Press **Settings** on the feature bar in your touchscreen to personalize the many features and settings of your vehicle all in one place.

**General Tips**

- ▶ Press the home icon  at any time to return to the home screen.
- ▶ For additional support, refer to the **SYNC 3** chapter in your **Owner's Manual**, visit the website or call the toll-free number. See the inside back cover of this guide for more details.

**Why Do You Need a SYNC Owner Account?**

A SYNC owner account allows you to receive the latest software updates, and when you have questions, free customer support. Some services may not be available in your area.

**Create Your Account**

Create your account by visiting the website. Call the toll-free number for more information.

**In the United States:**  
[owner.lincoln.com](http://owner.lincoln.com)  
 1-800-521-4140

**In Canada:**  
[syncmyride.ca](http://syncmyride.ca)  
 1-800-387-9333

1. Set up your owner account at [owner.lincoln.com](http://owner.lincoln.com) (U.S.) or [syncmyride.ca](http://syncmyride.ca) (Canada). Register by following the on-screen instructions.
2. After registering, you can update your system and choose to download the update onto a USB driver or use Wi-Fi to deliver automatic updates.

**Pairing Your Cell Phone with SYNC 3**

Pair your phone to SYNC before using SYNC 3. Make sure that your vehicle is in park (P) and you switch on your ignition.

1. Make sure you switch **Bluetooth** on and that your device is discoverable.
2. Touch **Add Phone** on the touchscreen. Follow the on-screen instructions.
3. Listen for a prompt telling you to search for SYNC on your device. Select SYNC on your device.
4. Confirm that the six-digit PIN provided by SYNC matches the PIN displayed on your device.
5. The display indicates when the pairing is successful.

**Note:** Your cell phone may also prompt you to give SYNC 3 permission to access information.

 **Phone**

After pairing your phone, you can access more phone-dependent features:

- ▶ **Recent Call List:** Displays a list of your recent calls and allows you to place a call by selecting an entry from the list. You can also sort the calls by selecting from the drop-down menu at the top of the screen:
  - All
  - Incoming
  - Outgoing
  - Missed
- ▶ **Contacts:** Provides all of your contacts from your phone in alphabetical order. You can also skip to a specific letter.
- ▶ Your phone's name, for example, **"Jason's Phone"**: Allows you to view and change your settings. From this menu, you can pair other devices, and set various ring tones and alerts.

- ▶ **Do Not Disturb:** Lets you send all calls directly to your voicemail. The setting also sets all ring tones and alerts to silent.
- ▶ **Phone Keypad:** Use the touchscreen keypad to dial a phone number.
- ▶ **Text Messages:** Displays all recent text messages.

**Making a Phone Call**

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button. When prompted, give a voice command.

For example, you could say **"Call Jake Smith at home"**. SYNC repeats the command back to you and dials the number.



**Note:** You can also make phone calls by giving the voice command **"Dial"**, then saying the phone number.

**Answering Incoming Calls**

Whenever you have an incoming call, the name and number of the person calling appears in your display.

Press **ACCEPT** on the touchscreen or the  phone button to answer an incoming call.

**Ending the Call**

Press and hold the  phone button.

**Text Messaging**

**Note:** Downloading and sending text messages using **Bluetooth** are cell phone-dependent features. Certain features in text messaging are speed-dependent and not available when your vehicle is traveling at speeds over 3 mph (5 km/h).

When a new message arrives, an audible tone sounds and the screen displays a pop-up with the caller name and ID, if supported by your cell phone.

**You Can Select**

- ▶ **Hear It** to have SYNC 3 read the message to you.
- ▶ **View** to see the message on the touchscreen.
- ▶ **Call** to call your contact.
- ▶ **Close** to exit the screen.

You can reply to text messages with a preset message. See the **SYNC 3** chapter in your **Owner's Manual** for details.

 **Navigation\***


Press the **Navigation\*** icon to set your destination. Select one of two ways to find your destination:

- ▶ Destination mode allows you key in a specific address or use a variety of search methods to locate where you want to go.
- ▶ Map mode shows advanced viewing that includes 2D city maps, 3D landmarks and 3D city models (when available).

Refer to the **SYNC 3** chapter in your **Owner's Manual** for complete details.

**Set a Destination**

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a point of interest (POI).

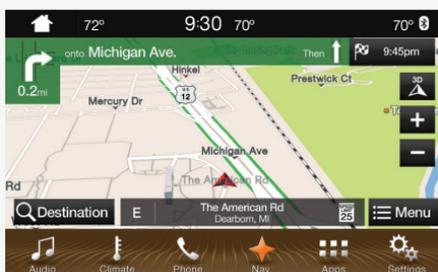

After you choose your destination, press **Start**.

The system uses a variety of screens and visible prompts to guide you to your destination.

During your route, you can press the maneuver arrow icon on the map if you want the system to repeat the previous route guidance instructions.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

**Navigation Menu**

When you are on your route, you can change your touchscreen view. To change the view, touch **Menu** on the bottom of the screen, and then select **Screen View** to choose from any of the following:

- ▶ Full Map.
- ▶ Highway Exit Info displays POI icons, including restaurants, ATMs, etc., as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- ▶ Turn List shows all of the available turns on your current route.
- ▶ Traffic List displays SiriusXM Traffic and Travel Link\* information.

 **Climate**

Touch the **Climate** icon on the touchscreen to access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger. You can use voice commands to operate the climate system by saying “**Climate set temperature 72 degrees**”. SYNC 3 makes the adjustment.

**Set Your Temperature**

- ▶ Touch the Climate icon on the touchscreen.
- ▶ Set your desired temperature by using the ▲ or ▼ buttons.

 **Audio**

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the Audio icon on the touchscreen. From here, you can easily go between all of your media sources.

**Set Your Radio Presets**

- ▶ Tune to the station and then press and hold one of the memory preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- ▶ Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

**Bring in Your Own Music**

Plug your device, such as a phone or media player, into a USB port, select **SOURCE** and then choose **USB**. Wait for the system to finish indexing your music to begin listening. You can even create random playlists by using the Shuffle function.

The USB port begins charging your device as soon as you plug it in.

 **Apps**

**Voice Control Your Smartphone Apps**

The system supports the use of certain audio apps, such as Pandora® and iHeartRadio® (U.S. only), Spotify® and Glympse® through a USB or **Bluetooth**-enabled device.

Each app gives you different on-screen options depending on the app's content. Refer to the **SYNC 3** chapter in your **Owner's Manual** for more information. For support, visit the website or call the toll-free number. See the inside back cover of this guide for details.



## Intelligent Access



**Note:** Your intelligent access key must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

**To unlock and open the driver's door,** pull a front exterior door handle.

**To lock all of the doors,** touch and briefly hold the lock sensor area on top of the door handle.

**To open the liftgate,** press the button located in the top of the liftgate pull-cup handle to unlatch the liftgate.

**Note:** The key also contains a mechanical key blade that can be used to unlock the driver door, if necessary.

## Remote Start

Remote start allows you to start the engine from outside your vehicle using your key. To start, press and then press twice within three seconds. Once inside, shift into drive (D) and go.

To switch the engine off from outside the vehicle after using your remote start, press once.

An LED on the key provides status feedback of remote start or stop commands:

**Solid green:** The remote start or extension was successful.

**Solid red:** The remote stop was successful and the engine is off.

**Blinking red:** The remote start or stop failed.

**Blinking green:** The system is waiting for a status update from the vehicle.

## Power Windows: Global Opening and Closing

You can use the intelligent access key to operate the windows with the ignition off.

Open the windows for a short time after you unlock your vehicle with the remote. After you unlock your vehicle, press and hold the remote unlock button to open the windows. Release the button once movement starts. Press the lock or unlock button to stop movement.

To close the windows, press and hold the remote lock button. Release the button once movement starts. Press the lock or unlock button to stop movement.

## Automatic Climate Control Settings

The remote start feature allows you to achieve vehicle interior comfort according to your pre-selected settings. When you set the climate control system to **AUTO** and in the information display menu remote climate setting is set to **AUTO**, it automatically adjusts the cabin temperature during a remote start, if the remote start.

In hot weather, the air conditioning automatically turns on. In cold weather, the heat automatically turns on. See the **Climate Control** chapter of your **Owner's Manual** for more details.

## MyLincoln Mobile™\*

This smartphone-compatible app combines vehicle service, client support and driver convenience features.

For more details, visit [support.lincoln.com/mylincolnmobile](http://support.lincoln.com/mylincolnmobile).


As you approach or leave your vehicle, key areas of your vehicle automatically adjust, including the following personalization features.

## Welcome Lighting

As you approach your vehicle, select exterior lighting illuminates. You can switch this feature on and off in your information display. See the **Information Display** chapter in your **Owner's Manual** for details.

## Auto-folding Exterior Mirrors\*

Automatically folds the exterior mirrors toward the glass when you place the transmission into park (P), switch off the ignition, exit and lock the driver's door. Auto-folding mirrors unfold and return to their original position automatically after you unlock your vehicle, and then open and close the driver's door.

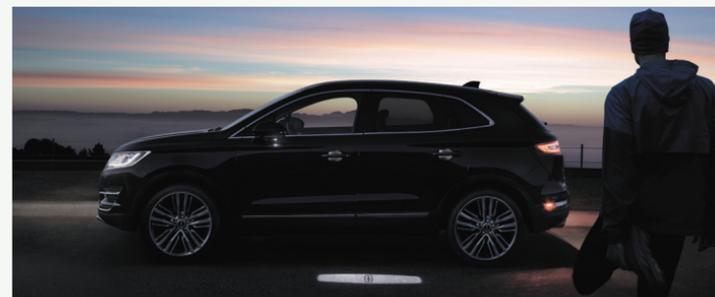

You can fold the mirrors on demand by pressing the power-folding mirror control located on the door. The control will light and the mirrors will fold in toward the glass. Press the control again to unfold the mirrors. The control light will turn off.

## Interior Lighting

Select interior lighting and ambient lighting including the push button start light as you enter your vehicle. Once you start your vehicle, the information display and the touchscreen also light.

## Easy Entry

Automatically recalls the driver seat and the power tilt and telescoping steering wheel positions when you push the keyless start ignition button.

## Easy Exit

Moves the driver seat rearward up to 2 inches (5 centimeters). Additionally, the power tilt and telescoping steering wheel moves to the full up position when the transmission is in park (P) and you switch off the keyless start ignition. The driver seat and steering column return to their previous positions when you push the keyless start ignition button.

**Note:** You must have your intelligent access key with you for these features to work.



**Power Liftgate****To Open Using the Outside Liftgate Button**

1. Unlock the liftgate with the intelligent access key or power door control. If the intelligent access key is within 3 feet (1 meter) behind the liftgate, the liftgate unlocks when you press the liftgate release button.
2. Press the button in the top of the liftgate pull-cup handle.
3. Allow the power system to open the liftgate after pressing the button.
4. To close, press and release the button.

**To Open Using the Intelligent Access Key**

Open or close the liftgate with your intelligent access key by pressing the  button twice within three seconds. A tone sounds when the liftgate opens. You can also open or close the liftgate from inside the vehicle by pressing the  button on the instrument panel.

**Hands-free Liftgate Operation\***

1. Make sure you have your intelligent access key within 3 feet (1 meter) of the liftgate.
2. Move your foot under and back from the rear bumper, similar to a kicking (front-to-back) motion. Do not move your foot sideways or the sensors may not detect the motion.

**Note:** In vehicles that have the towing package, kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the hitch.

**Obstacle Detection\***

When you use the power open or close feature and the liftgate detects a problem, warning tones sound and the liftgate stops.



\*if equipped

**The Liftgate Does Not Power Open or Close When**

- ▶ It detects an object in its opening or closing path.
- ▶ The ignition is on and the transmission is not in park (P).
- ▶ You are traveling at speeds at or above 3 mph (5 km/h).

**Note:** Entering the vehicle when the liftgate is closing could cause the vehicle to bounce and activate obstacle detection.

**Setting the Liftgate Open Height**

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.

**To Program a New Height**

1. Open the liftgate.
2. Stop the liftgate movement by pressing the control button on the liftgate when it reaches your desired height. When the liftgate stops moving, you can also move it manually to the height you desire.
3. Press and hold the control button on the liftgate until you hear a tone, indicating that your programming of the liftgate height is successful.

The next time you use the power feature to open the liftgate, it opens to its newly programmed height.

To change the programmed height, repeat the process above.

\*if equipped

**Built-in Storage**

- ▶ Cargo tie-downs, in key areas of the rear cargo area, fold out of the way when not in use.
- ▶ Utility tray, on the outboard side of the driver seat: store a wet (or dry) umbrella within easy reach.
- ▶ Toll-ticket holder, between the headliner and the sun visor hinge: slide your toll ticket in the space provided.
- ▶ Rear under-floor storage helps secure items and keep them out of sight.



## Lincoln Drive Control\*

This feature intelligently integrates chassis and powertrain systems for personalized ride comfort, steering, handling, powertrain response and sound. Choose between two default settings or customize your own.

You can configure which of the Drive Control modes are active when your vehicle is in drive (D) or in Sport (S). The configuration remains active until modified from the main menu on the information display.

- ▶ **Comfort:** Provides lower steering efforts and a more fluid suspension.
- ▶ **Normal:** Delivers an engaging drive experience with confident handling.
- ▶ **Sport:** Increases handling and control with a sporty feel.

## Active Park Assist with Parallel Parking, Perpendicular Parking and Parallel Park Out Assist

**Active Park Assist** detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) while you control the accelerator, transmission selector and brakes. The system visually and audibly instructs you to park your vehicle.

To use active park assist, press the button located on the right side of the shifter.

For perpendicular parking, press the button twice.

To stop the parking procedure, grab the steering wheel or press the control again.

**Park Out Assist** determines the clearance to the front and rear of your vehicle and automatically steers your vehicle out of a parallel parking space (hands-free) while you control the accelerator, transmission selector and brakes. The system visually and audibly instructs you to enter traffic.

See the **Parking Aids** chapter of your **Owner's Manual** for more details.

**Note:** The driver is always responsible for controlling the vehicle, supervising the system, and intervening, if required.

## Rear View Camera

This system provides a video image of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

## Adaptive Cruise Control\*

Automatically adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can set the gap distance between your vehicle and the vehicle in front of you by pressing the  and  buttons on the steering wheel.

**Note:** Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to the **Cruise Control** chapter of your **Owner's Manual** for safety information, details and limitations.

## SelectShift® Automatic Transmission

The transmission gives you the ability to manually change gears, if you like. To use SelectShift, press drive (D). Use the paddle shifters, located on the steering wheel, to manually select gears. Pull (+) to upshift, pull (-) to downshift. The system stays in manual control until you make another shift button selection.

## BLIS® (Blind Spot Information System) and Cross Traffic Alert\*

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. The Cross Traffic Alert feature warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and Cross Traffic Alert display a yellow indicator light in your exterior mirrors and the Cross Traffic Alert also sounds tones and displays messages to warn you from which direction vehicles are approaching. Refer to the **Driving Aids** chapter in your **Owner's Manual** for more information.

**Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to the **Owner's Manual** for safety information, more details and system limitations.



\*if equipped



## Lane Keeping System\*

This system offers drivers features to help them stay within their lanes, Alert, Aid and Alert + Aid.

A forward-facing camera in the rearview mirror reads lane markings. Should the vehicle drift out of its lane without the driver using a direction indicator, the system can provide one or both of the following:

- ▶ **Alert:** Sends vibration pulses to the steering wheel.
  - ▶ **Aid:** Provides steering torque to help direct the driver to steer the vehicle back into its lane.
- Alert + Aid:** Provides both vibration pulses and steering torque to help the driver stay in their lane. To switch this system on or off, use the control on the end of the direction indicator.

## Front Parking Aid\*

This system sounds an audible warning tone if there is an obstacle near the vehicle's front bumper. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency. The front sensors automatically activate when the transmission selector is in any position other than park (P) and the vehicle speed is below 6 mph (10 km/h). See the **Parking Aids** chapter in your **Owner's Manual** for complete information.

## Auto Hold

Auto Hold can assist you when stopping at traffic lights or while in traffic jams by holding the brakes when you stop the vehicle. Press the **Auto Hold** button on the right-hand side of the touch screen to switch the system on. The **Auto Hold** button lights. When the system is on and actively holding the vehicle, **AUTO HOLD** displays in the instrument cluster.

When you press the accelerator pedal, Auto Hold automatically releases the brakes. In some situations, Auto Hold may apply the electric parking brake and illuminate the brake warning lamp in the instrument cluster.

Auto Hold turns off when you power down your vehicle, or you can switch the feature off manually by pressing the **Auto Hold** button. Switch Auto Hold off if you are towing a trailer or having the vehicle towed.

## Easy Fuel® System



### When Fueling Your Vehicle

1. Put your vehicle in park (P) and switch the ignition off.
2. Open the fuel filler door. Slowly, fully insert the fuel filler nozzle into the fuel system. Leave the nozzle inserted fully until you are done pumping your fuel.
3. Wait at least 10 seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.

**Note:** When using a portable fuel container, do not use aftermarket funnels, as they do not work with the Easy Fuel system and may cause damage. Instead, use the plastic funnel included with your vehicle.

The fuel funnel is in the rear of the vehicle, in the spare wheel storage tray. Properly clean the funnel after each use or dispose of it properly.

### Automatic Engine Shutdown

Your vehicle has a feature that automatically shuts down the engine if it has been idling for an extended period of time. The ignition also turns off in order to save battery power. You can override this feature temporarily by pressing the brake or accelerator pedal, or by pressing **OK** or the **RESET** button in your information display. Refer to the **Information Displays** chapter of your **Owner's Manual** for more details.

### Towing Your Vehicle

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to **Towing the Vehicle on Four Wheels** section in the **Towing** chapter of your **Owner's Manual** for more information.

### Fuel Tank Capacity/Fuel Info

Your vehicle has a 16.2 gallon (61.3 liter) fuel tank. We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Do not use ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

### Tire Pressure Monitoring System

Your vehicle has a tire pressure monitoring system that lights a low tire pressure warning light in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Wheels and Tires** chapter of your **Owner's Manual** for more information.



### Auto-Start-Stop\*

The system helps reduce fuel consumption by automatically shutting off and restarting the engine when stopped. If conditions are correct Auto-Start-Stop turns off the engine in drive (D) when you press the brake pedal and automatically restarts the engine when you press the brake or the accelerator pedal. Press the control (A) to override this feature. It resets at each engine start. Refer to the **Unique Driving Characteristics** chapter of your **Owner's Manual**.

### Location of Spare Tire and Tools

Your spare tire and tools are located beneath the carpeted load floor in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the **Changing a Road Wheel** section in the **Wheels and Tires** chapter of your **Owner's Manual**.



\*if equipped

### Rear Window Buffeting

When just one of the windows is open, you may hear a pulsing noise. Lower the opposite window until the noise subsides.

### Configurable Daytime Running Lamps\*

When you start your vehicle with your headlamp control in the autolamps position , the configurable daytime running lamps turn on automatically when you are driving. You can configure the daytime running lamps **ON** or **OFF** using your information display controls. See the **Lighting** chapter in your **Owner's Manual** for complete information.

## Comfort

### Climate Controlled Front Seats\*



To use, press the heated or the cooled seat symbol on the touchscreen to cycle through the various settings and off. Warmer or cooler settings are indicated by more lights. The climate controlled seats operate only when the engine is running.

### Heated Steering Wheel\*

Your vehicle may come with a heated steering wheel. Press the icon in your touchscreen to turn this feature on and off.

### Rear Heated Seats\*

The rear heated seat controls are on the rear of the center console. To use them, press the heated seat button to cycle through the various heat settings and off. Warmer settings are indicated by more indicator lights. The rear heated seats operate only when the engine is running.

### Tilting Head Restraints

You can adjust the front-row head restraints by pulling up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust/release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more releases it to the upright position.

**Note:** Do not attempt to force the head restraint backward after it is in a tilted position. Instead, continue tilting it forward until the head restraint releases to the upright position.

### Second-row Seat Functionality

#### Fold the Seatback Down

Fold the outboard head restraints and lower the center head restraint first. With the seat empty, pull the lever up to fold the seatback forward. Pull the seatback upward to unfold the seatback.

#### Recline the Seatback Down

With the seat occupied, pull the lever up to recline the seatback.

### Moonroof

To open the moonroof, press the  open button. It stops short of the fully opened position. To open the moonroof fully, press the  open button again. To close, press the  close button. To vent the moonroof, press the  vent button.

The sunscreen automatically opens with the moonroof, but if the moonroof is closed, you can open the sunscreen by pressing the  open button. To close it, press the  close button.



\*if equipped

## Commonly Used SYNC® 3 Voice Commands

Press the voice button  on your steering wheel and then say:



### Basic Commands

- ▶ Main menu
- ▶ Go back
- ▶ Cancel
- ▶ List of commands
- ▶ Next page
- ▶ Previous page
- ▶ Help



### Climate

- ▶ Climate set temperature to <# of degrees>
- ▶ Climate help



### Phone

- ▶ Phone list of commands
- ▶ Pair phone
- ▶ Call <name> on cell/at home/at work
- ▶ Dial <phone number>
- ▶ Listen to text messages (phone-dependent feature)
- ▶ Phone help



### Apps

- ▶ List mobile apps
- ▶ Find new apps



### Audio

- ▶ AM <530-1710>
- ▶ FM <87.9-107.9>
- ▶ **Bluetooth** audio
- ▶ CD
- ▶ USB
- ▶ Sirius <0-233>
- ▶ <Sirius channel name>
- ▶ Help



### Navigation\*

- ▶ Navigation list of commands
- ▶ Find an address/POI/intersection
- ▶ Destination <nearest POI category/previous destination/home>
- ▶ Cancel route
- ▶ Detour
- ▶ Repeat instruction
- ▶ Show route
- ▶ Where am I?
- ▶ Zoom <in/out>
- ▶ SiriusXM Traffic and Travel Link\*
  - Show <traffic/weather map/fuel prices/5 day forecast>
  - Help

Some services may not be available in your area. For additional support, refer to your the **SYNC 3** chapter of your **Owner's Manual**, visit the website or call the toll-free number.

For **U.S. customers:** Visit [owner.lincoln.com](http://owner.lincoln.com) or call **1-800-521-4140** (select Option 1 or 2 for language, then press 3).

For **Canadian customers:** Visit [syncmyride.ca](http://syncmyride.ca) or call **1-800-387-9333** (select Option 1 or 2 for language, then press 3).

\*if equipped