



Love life as it is

Contact us if you have any questions:



Belifehome@outlook.com




401-300-0032

9AM-5PM (CDT) WEEKDAY

Assembly as shown below


Align the main body, extension rod and the cleaning tool as shown and insert until they "click". To remove any attachments/ accessories, press and hold the button, and pull to remove.

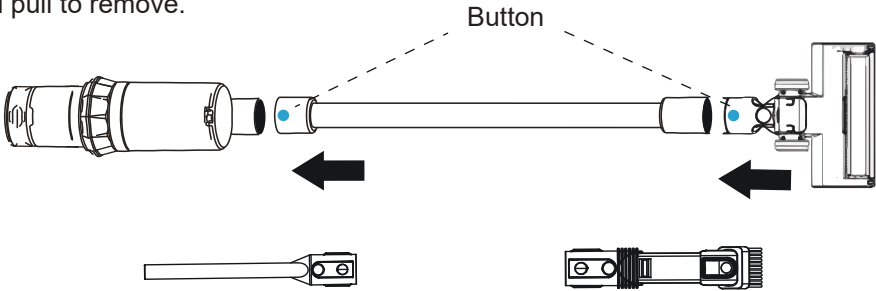

NOTE: All attachment included are compatible with the main body and the extension rod.


Insert battery

Slide in the slot rail to load the battery.

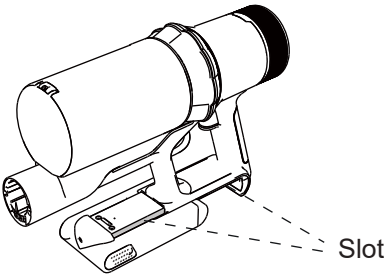


Turn on the vacuum cleaner



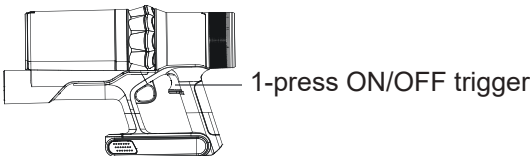

1. Pull the ON/OFF trigger to turn on.
2. Pull the same trigger to turn off.

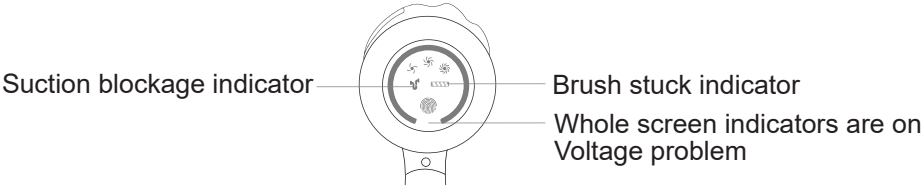

Troubleshooting




Digital Display Panel



Display	Problem	Suggested Solutions
	Suction blockage	Clean filter regularly. <ul style="list-style-type: none"> Remove hair and foreign objects from the brush. Remove compressed hair strains from the bearing. Refer to the maintenance section in our instruction manual. Check and remove any foreign object in the floor brush, extension rod, main body air inlet and dirt bin. Please follow instructions on page 3-4 to clean up and keep the HEPA filters free from blockage.
	Brush stuck	<ul style="list-style-type: none"> Remove any foreign objects that cause the brush to cut off power automatically. if none foreign object is found(it may have dropped off), restart the vacuum.
	Voltage problem	<ul style="list-style-type: none"> This problem is caused by defective battery. Please contact our customer service for battery replacement.
	The screen not light up after a few seconds when fully charged	<ul style="list-style-type: none"> This problem is caused by defective battery. Please contact our customer service for battery replacement.


NOTE: If you have any other questions, please contact us and we will solve them for you.

Mode suggested

	Eco Mode	<ul style="list-style-type: none"> 40min runtime, Suitable for hair and dust on wood floor or tile.
	Normal Mode	<ul style="list-style-type: none"> 30min runtime, Suitable for fine dust and hair on low pile carpet.
	Hyper Mode	<ul style="list-style-type: none"> 10-15min runtime, Suitable for dog food, coffee beans and other large particles on low pile carpet.


One Click Empty

Cleaning frequency: After every use.

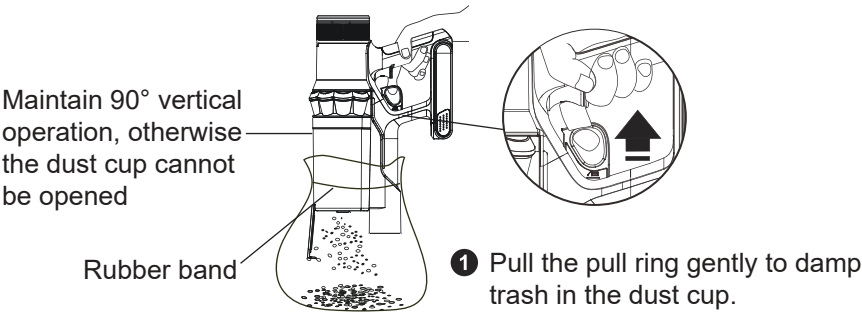

Cleaning the cyclone unit


Cleaning frequency: Whenever needed.

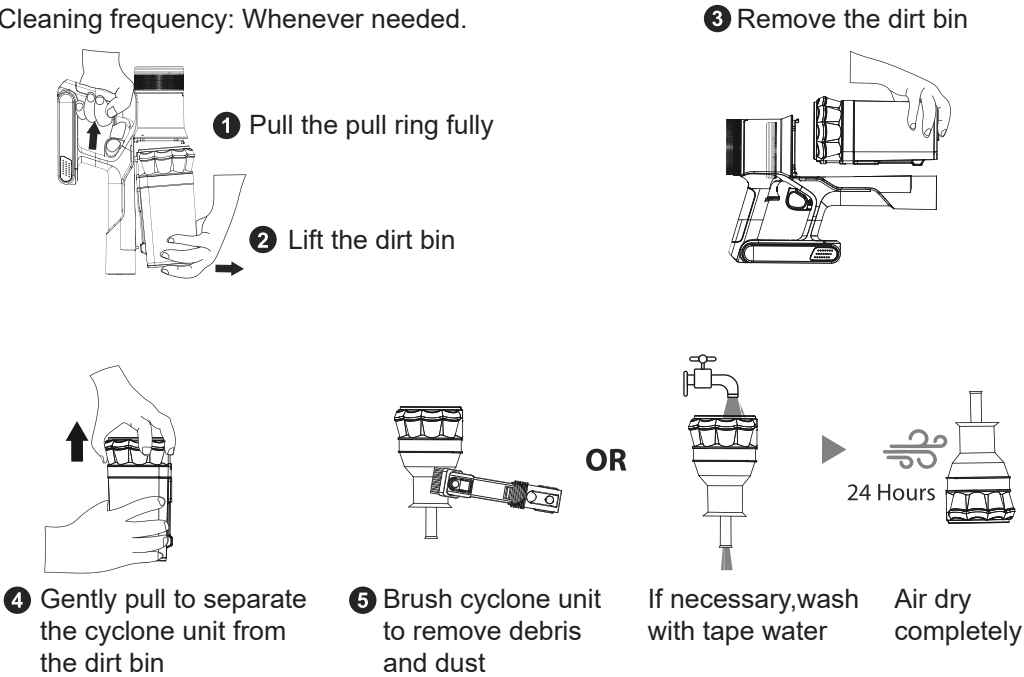


WARNING! Never attempt to disassemble the sealed cyclone unit.

Cleaning the HEPA filter

Cleaning frequency: 3-6 months or whenever airflow is weak.

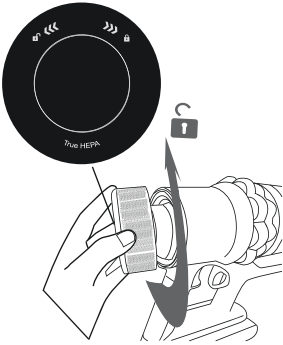


- 1 Turn the HEPA filter counter-clockwise to remove

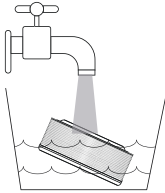

- 2 Wash with tape water



 
24 Hours

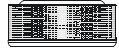


- 3 Dry completely

Cleaning the pre-motor filter

Cleaning frequency:1-2 months or whenever airflow is weak.

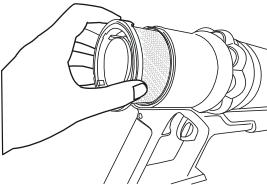


- 1 Remove HEPA filter first, then gently pull out the pre-motor filter

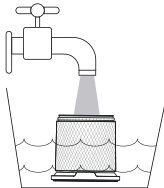

- 2 Wash with tape water, hand wash with soap if necessary



 12 Hours

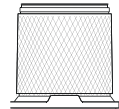


- 3 Dry completely

WARNING!



- 1.DO NOT brush any part of the porous filtration material.
- 2.DO NOT soak any filter in water for more than 10 minutes.
- 3.DO NOT wash any other part of the vacuum except the spcecified filters assembly.

Cleaning the brush and bearing

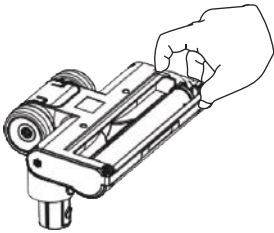


1 Pull to release brush locking clip


2 Remove the brush locking clip

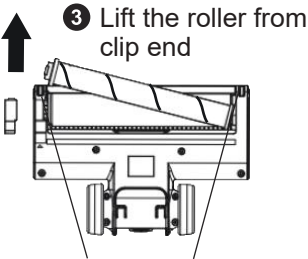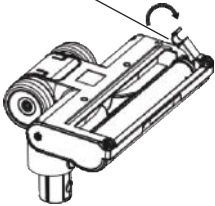


4 Remove debris on two small brush wheels with tweezers

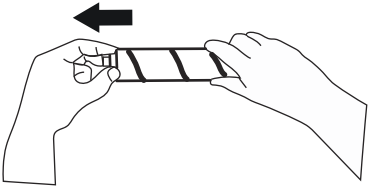

5 Gently pull to remove the brush bearing cap

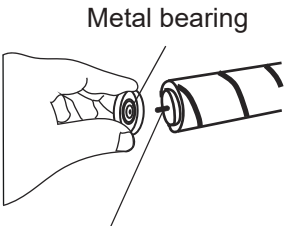

6 Remove debris on the shaft

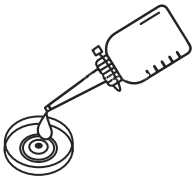

7 Apply lubricating oil or "WD40" onto the metal bearing occasionally