 
 
 
 
 
 
 
 


 


Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 DVR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step /
 Pause	 Pause / Step / Freeze



 
 
 
 
 
 
 
 
 
 
 


Original	Replacement	Original	Replacement
	BAND		Shift + Play /
	Play		Play / Slow
	PTY		Shift + Stop /
	Stop		Stop / Hold
	Preset -		Shift + I<< / Preset-
	I<<		I<< / Preset-
	Preset+		Shift + >>I / Preset+
	>>I		>>I / Preset+
	Tune-		Shift + << /
	<<		<< / Tune-
	Tune+		Shift + >> /
	>>		>> / Tune+
	Auto / ALC /		Subtitle / EQ
	1		1
	Standard		Smart / List
	2		2
	Adv. Surr.		Eject / Surround
	3		3
	+ Favorite		Fav / Marker / PC
	Audio / THX		Sound / Title
	4		4
	Signal Sel.		TV/Radio /
	MCACC		Zoom / Size
	5		5
	6		6
	CH. Level		Text / Goto
	Disp / Auto		Display / Media
	7		7
	Speakers		Shift + Audio / Lang I/O
	Dimmer		Shift + Mute / Dimmer
	8		8
	9		9
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat



[illegible]

 


Original	Replacement
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 DVR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Replacement
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step /
 Pause	 Pause / Step / Freeze





Original	Replacement	Original	Replacement
	BAND		Shift + Play /
	Play		Play / Slow
	PTY		Shift + Stop /
	Stop		Stop / Hold
	Preset -		Shift + I<< / Preset-
	I<<		I<< / Preset-
	Preset+		Shift + >>I / Preset+
	>>I		>>I / Preset+
	Tune-		Shift + << /
	<<		<< / Tune-
	Tune+		Shift + >> /
	>>		>> / Tune+
	Auto / ALC /		Subtitle / EQ
	1		1
	Standard		Smart / List
	2		2
	Adv. Surr.		Eject / Surround
	3		3
	+ Favorite		Fav / Marker / PC
	Audio / THX		Sound / Title
	4		4
	Signal Sel.		TV/Radio /
	MCACC		Zoom / Size
	5		5
	6		6
	CH. Level		Text / Goto
	Disp / Auto		Display / Media
	7		7
	Speakers		Shift + Audio / Lang I/II
	Dimmer		Shift + Mute / Dimmer
	8		8
	9		9
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat



[illegible]