

Operation Manual

Outdoor Power Socket

62874–62876

wiltec



Illustration similar, may vary depending on model

Read and follow the operating instructions and safety information before using for the first time.

Technical changes reserved!

Due to further developments, illustrations, functioning steps and technical data can differ insignificantly.

Updating the documentation

If you have suggestions for improvement or have found any irregularities, please contact us.



The information contained in this document may alter at any time without previous notice. It is prohibited to copy or spread any parts of this document in any way without prior written allowance. All rights reserved.

The WilTec Wildanger Technik GmbH cannot be held accountable for any possible mistakes in this operating manual, nor in the diagrams and figures shown.

Even though, the WilTec Wildanger Technik GmbH has undergone biggest possible efforts to ensure that the operating manual is complete, faultless, and up to date, mistakes cannot be entirely avoided.

If you should find a mistake or wish to make a suggestion for improvement, we look forward to hearing from you.

Send an e-mail to:

service@wiltec.info

or use our contact form:

<https://www.wiltec.de/contacts/>

The most recent version of this manual in various languages can be found in our online shop via:

<https://www.wiltec.de/docsearch>

Our postal address is:

WilTec Wildanger Technik GmbH
Königsbenden 12
52249 Eschweiler
Germany

To return orders for exchange, repair, or other purposes, please use the following address. Attention! To allow for a smooth execution of your complaint or return, it is important to contact our customer service team before returning the goods.

Returns Department
WilTec Wildanger Technik GmbH
Königsbenden 28
52249 Eschweiler

E-mail: **service@wiltec.info**

Tel: +49 2403 55592-0

Fax: +49 2403 55592-15



Introduction

Thank you for purchasing this quality product. **To minimise the risk of injury we urge that our clients take some basic safety precautions when using this device. Please read the operation instructions carefully and make sure you have understood its content.**

Keep these operation instructions safe.

General description

This socket is intended for household use. It meets the requirements for splash protection (protection class IP44). This product is not suitable for use on construction sites or in other environments with demanding operating conditions.

Safety information and instructions

- Upon receiving the product, ensure that no parts are damaged or missing. Before using the device, carefully read the operating instructions, especially the safety information.
- This product should only be connected to a grounded socket.
- The socket must be installed in a stable location and in either a horizontal or vertical position.
- Ensure that the socket is not installed in a recess; rain could cause water to enter the socket, which must be avoided.
- The socket must be installed at least 0.5 m away from any water source.
- This socket is designed to be splash-proof.
- If you need to move the socket, it must first be disconnected from the power supply.
- If the casing of the product is damaged (e.g., due to an impact) and the product no longer meets the IP44 protection rating, it must not be used further.
- The outlet should preferably be used in a vertical position. If installed in a horizontal position, check for water ingress before each use. If water has entered the outlet, do not use it.
-


Operation

- Connect the product's cable to the socket.
- Turn on the appropriate socket switches and select the desired function.
- When the socket switch is set to "I," the socket is on (powered). When the socket switch is set to "O," the socket is off.

Technical data

Power consumption (W)	3680
Mains voltage	220–240 V / 50 Hz
Protection class	IP44
Socket type	Schuko, Type F (German Schuko socket), CEE 7/3
Material	Stahl (pulverbeschichtet)

Assembly

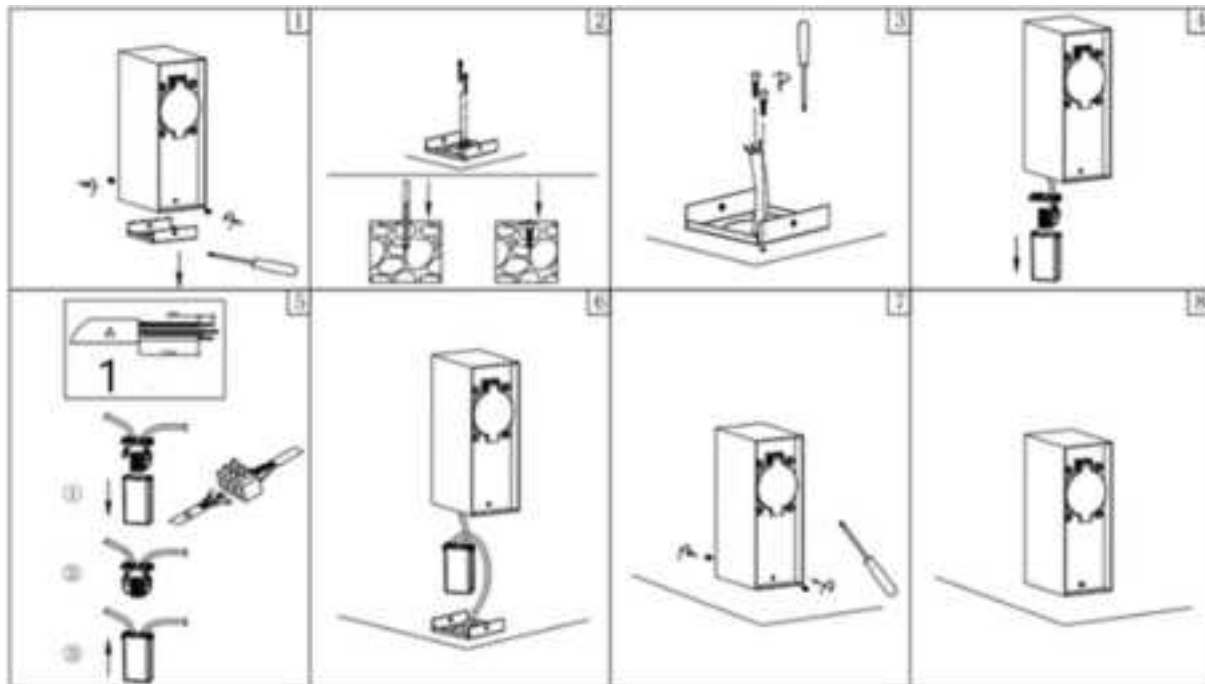

№	Name
1	Power supply 3 × 1.5 mm cable

Disposal regulations

EU guidelines regarding the disposal of scrap electric appliances (WEEE, 2012/19/EU) were implemented in the law related to electrical and electronic equipment and appliances.

All WilTec electric devices that fall under the WEEE regulations are labelled with the crossed-out wheeled waste bin logo. This logo indicates that this electric equipment must not be disposed with the domestic waste.

The company WilTec Technik GmbH has been registered in the German registry EAR under the WEEE-registration number DE45283704.

Disposal of used electrical and electronic appliances (intended for use in the countries of the European Union and other European countries with a separate collection system for these appliances).

The logo on the article or on its packaging points out that this article must not be treated as normal household waste but must be disposed to a recycling collection point for electronic and electrical waste equipment. By contributing to the correct disposal of this article you protect the environment and the health of your fellow men. Environment and health are threatened by inappropriate disposal.



Material recycling helps reduce the consumption of raw materials.

Additional information on recycling this article can be provided by your local community, municipal waste disposal facilities, or the store where you purchased the article.

Address:
WilTec Wildanger Technik GmbH
Königsbenden 12 / 28
D-52249 Eschweiler

Important notice:

The reprint or reproduction, even of excerpts, and any commercial use, even in part, of this instruction manual require the written permission of WilTec Wildanger Technik GmbH.