



TAGRY



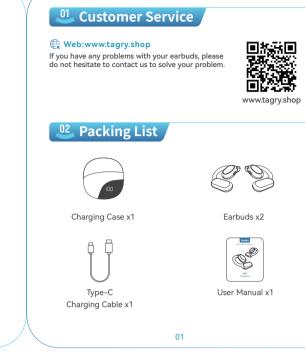

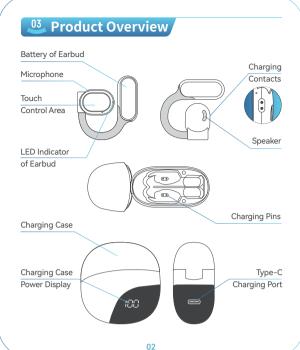

O4 First Time Using

1. Prior to first use, please ensure to remove the protective film from the

2. Insert the earbuds into the charging case and connect both the earbuds and the charging case to a power source using the provided Type-C charging cable. Allow them to charge for at least 10 minutes, especially if they haven't been used for an extended period. It is crucial not to remove the earbuds from the case while they are being charged.

⁰⁵ Correct Wearing

Please refer to the diagram below to ensure the correct positioning of the earbuds for optimal comfort:



Adjust the earbuds to the most comfortable position once they are properly inserted.

Observation Specifications

Model No · K08

Input: 5V --- 1A

Charging Case Capacity: 400mAh 3.7V, 1.48Wh Earbuds Capacity: 85mAh 3.7V, 0.315Wh

Bluetooth Version: Bluetooth 5.3

Earbuds Battery Life: 13.5hours on single charge Transmition Range: 33ft/10m

⁰⁷ Maintenance

Care for earbuds

Please clean your earbuds regularly using a pointed cotton swab for optimal performance and hygiene.

a. Refer to the image right for instructions on how to clean the charging contacts regularly.

b. Refer to the image right for instructions on how to clean the protective grille regularly.

regularly using a pointed cotton swab.

Care for Charging Case

Regular cleaning of both the charging contacts and the protective

grille will help maintain the quality and functionality of your earbuds.

1. Please ensure to regularly charge your K08 charging case using the

Input: DC 5V

Additionally, it is recommended to clean the charging pins of the case

Regular charging and cleaning of the charging pins will help maintain

• What should I do if earbuds do not charge when I put earbud into

A 1. First, ensure that the charging case has sufficient power. If not, please

and the pins inside the charging case for any dirt or dust. If you notice any

buildup, use a pointed cotton swab dipped in alcohol to clean the charging

2. If the case has enough power, carefully inspect the charging contacts

the functionality and performance of your K08 charging case.

included Charging Cable and a charger (not included).

Pairing and Connection

Stereo Mode

Open the charging case and take both earbuds out. The earbuds will automatically enter the pairing mode.

a. During pairing mode, the LED indicator light on the earbuds will flash red and blue alternately.



b. If your earbuds are in the standby state, waiting to connect but fail to do so within 5 minutes, they will automatically power off. In such cases, you can manually power them on by tapping and holding each earbud for 2 seconds.



the audio is clear and consistent.

2. Test the earbuds by playing a downloaded song or video to check if

1. Access the Bluetooth settings on your device.


From the list of available devices. select "K08" to initiate the connection.

Once successfully connected. you will hear a prompt saying "connected."

To connect your earbuds to your device, please proceed with the

Mono Mode

To use only one earbug follow these steps: 1. If you wish to use a single earbud, simply take out one

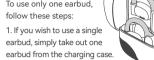

2. To transition from using both earbuds to using only one earbud, follow these steps: When you want to switch from using both earbuds to using only one earbud, place one of the earbuds back into the charging case.




⁰⁹ Friendly Reminder

After the initial pairing, the K08 earbuds will remember the first device they were paired with. When you take out the earbuds from the charging case and your first device is nearby, they will automatically reconnect to it. To pair the earbuds with a new device, you can follow either of the two methods below:

User Manual

If the initial device is out of range or more than 33 feet (10 meters) away, simply take out the earbuds and pair them with the new device. If the initial device is within range, refer to the diagram below to disconnect the earbuds from it. Then, take out the earbuds and pair them with the new device.

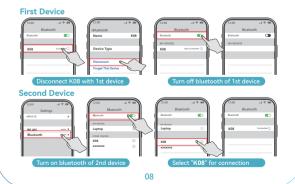

Smart Touch Control

Exit Voice Assistant

Music Control Play/Pause Double tap R/L earbud Previous Music Track | Triple tap on "L" earbud Next Music Track Triple tap on "R" earbud Long tap on "R" earbud Volume Up Volume Down Long tap on "L" earbud Voice Assistance Triple tap on "R" or "L" earbud (Pause music first)

Phone Calls Control Double tap on "R" or "L" earbud Answer/End Call Long tap on "R" or "L" earbud for 2s

Triple tap on "R" or "L" earbud

Method 1: Just pick up earbud form charging case Method 2: Long tap on earbud for 2s Method 1: Just place earbuds back into charging case Power off Method 2: Long tap on earbud for 5s (this method just for earbud has disconnected with device)

How to Reset

1. Take both earbuds out of the charging case.

2. Ensure that both earbuds are disconnected from any devices.

3. Simultaneously touch the R (right) and L (left) earbuds five times at the same time.


12 How to sync volume with Android Devices?

1. Find "Settings" on your phone

2. Enable "Bluetooth"

3. Pairing and connect with your "K08" 4. Then click"set" button on the right of "K08" on bluetooth list


5. Then enable "Sync volume with phone"

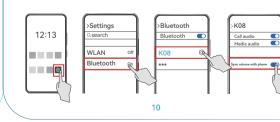

13 Charging

Earbuds Charging

1. Just place earbud into charging case, and then earbud is being charged. The indicator light of earbud is keeping red, once earbud fullly charged, red light will disappear.

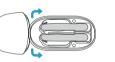

Charging Case Charging


Fully dry off the charging cable and the USB port before charging.

Use a certified charger and the USB C cable we provided to prevent

Please use the provided USB C cable to connect the charging case to the power supply





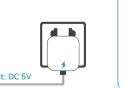

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

- -- Regrient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference

that may cause undesired operation.

15 FAQ

charge the case first.

Why earbuds disconnected with device or sound is cut in/out

A Please note that encountering connectivity issues does not necessarily indicate a problem with the earbuds themselves. It could be due to factors related to the connected device and the surrounding environment. Bluetooth signals can be affected by obstacles such as walls, pillars, home appliances. Wi-Fi signals, and more. To ensure a stable connection, we recommend avoiding such obstructions. To address this issue, please try the following

1. Make sure to fully charge your earbuds and reset them as described earlier. Then, re-pair them with your device.

Charging Pin

3. Verify the performance of the earbuds by connecting them to another Bluetooth device in a different environment to see if they function properly.

Why am I unable to adjust the volume of the earbuds by tapping and holding either the left or right earbud?

A Please note that this doesn't necessarily mean there is an issue with the earbuds. Our K08 earbuds are setting at "when you pause music, you can not adjust volume via long tap on either earbud". If you still want to adjust volume at this status, there are 2 methods below

Method 1: Adjust volume via the "Volume Button" on your phone.

Method 2: Please play music again, and then you can adjust volume via long tap on right or left earbud.

If neither of the methods proves effective, please contact us via support@tagry.shop for replacement.

Earbuds can not pair with my new device, why?

A Please make sure that the K08 headphones are disconnected from your previous paired device before pairing them with your new device, and ensure that the K08 headphones have sufficient battery.

Please ensure that your new device has Bluetooth functionality.

If both of the above conditions are met, but the K08 headphones still cannot connect to your new device, please follow the steps below to reset your K08:

a) Take out both K08 earbuds from the charging case.

b) After removing the earbuds, make sure they are not connected to any device, then click both earbuds five times simultaneously. c) After completing the above steps, place both earbuds back into the

charging case, then take them out again. At this point, both earbuds have been reset. Please proceed with the pairing process to connect them to your device.

If you still cannot connect your K08 headphones to your new device after resetting, please scan the QR code to contact us, and we will assist you in resolving the issue.

Sound of earbuds is so low, how to fix it?

A Please ensure that both your headphone volume and your phone volume are set to the maximum level. Please verify that your headphone volume and your phone volume are


synchronized. If your phone volume and headphone volume are synchronized and set to the maximum level, it indicates that the grille is dirty. Please refer to the

diagram right and use a pointed cotton swab (not

If the sound remains low despite following the above steps, please scan the QR code to contact us, and we will assist you in resolving the issue.



included) to clean the grille.

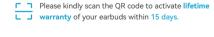

K08说明书 尺寸:81*96mm

材料:108g铜版纸,不过膜