



Wi-Fi Digital Photo Frame

User Manual



Wi-Fi Digital Photo Frame

Features:

- Email photos and video clips to your Kogan Frame
- Search & send video clips from Photobucket, Facebook, Picasa and more!
- 800 x 600 high resolution screen with 'touch border' navigation design
- Share photos and short videos with family and friends far away

LCD Display: 8-Inch LCD screen (800 X 600 pixels)

Communications: Internal 802.11b/g (WEP64, WEP128)

Interface: MMC/SD/MS card slot; USB 2.0 client

Memory Size: In-built FLASH memory 256MB with up to 500 photos stored online plus more with Photobucket.

Remote Control : for PC-less easy setup and convenience

RTC -powered automatic shutdown feature for increasing reliability and saving energy

Power Source: External AC Adapter (Input:AC100~240V 50/60Hz 0.6A,Output:DC12V 1A)

Weight: 1.4 Kgs

Initial Setup Instructions

 
■ Before Set-Up

Please ensure you have the following items available before beginning set-up.

- Your Kogan Wi-Fi Digital Frame, along with the power supply and USB cable.
- An operational Wi-Fi network with an internet connection with known SSID (network name), authentication type and the corresponding encryption key (WEP).


■ STEP 1:

Power up your Kogan Wi-Fi Digital Frame by plugging in the power cord to a 240V wall socket. Your Kogan Wi-Fi Digital Frame will light up with the Kogan loading screen. Please wait while the frame configures.

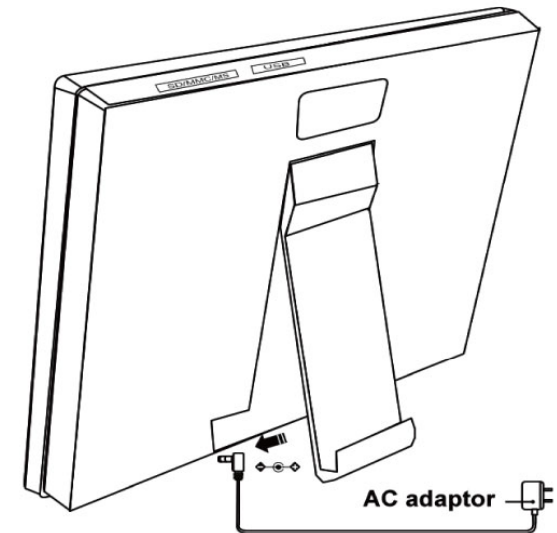


■ STEP 2:

 If your frame cannot locate a Wi-Fi signal, it will show a message indicating that no Wi-Fi network is connected. Press the **Enter** button on your Remote Control with the **Scan again** option highlighted.

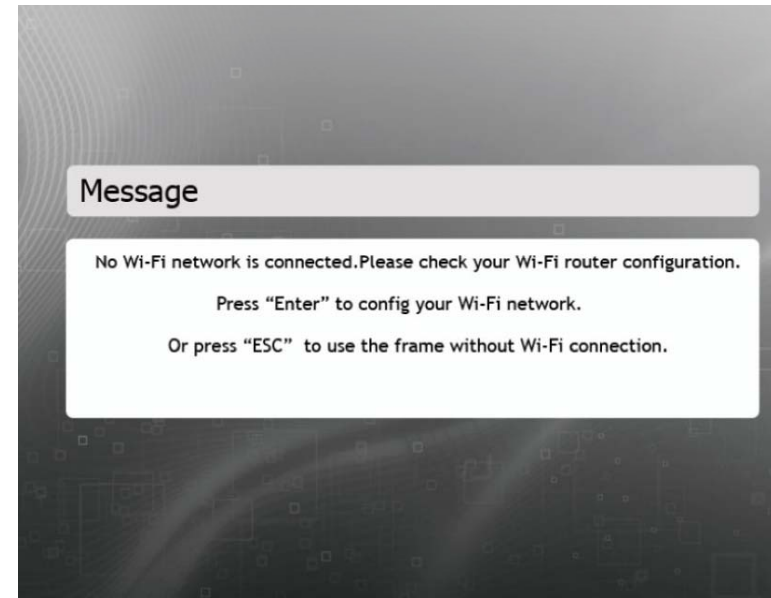

■ STEP 3:

 The frame will scan for any available Wi-Fi networks automatically. Select your specified Wi-Fi network, and then press **Enter**:

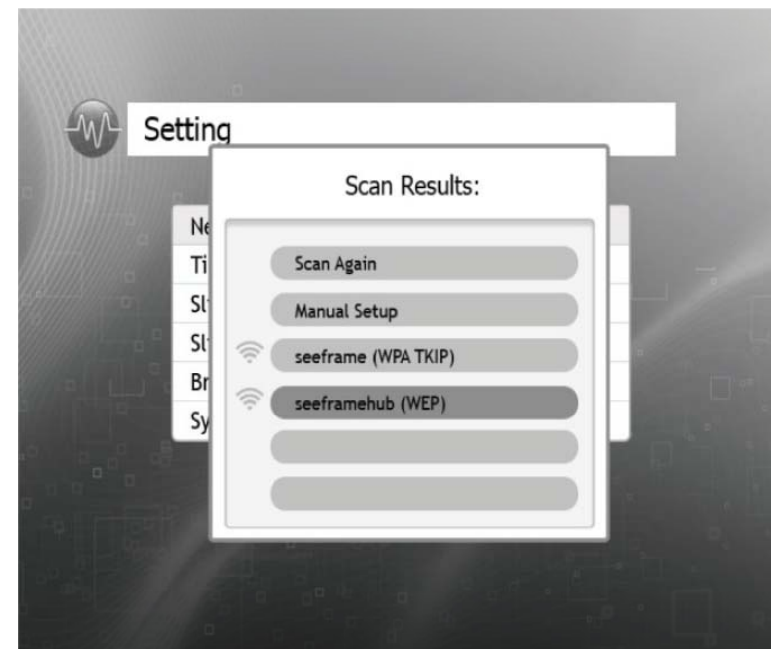

■ STEP 4:

Please enter your password by pressing the virtual keyboard buttons displayed on the screen. Once you have done this, press **Enter**.



BKSPC : Backspace - to selectively delete any just entered information.

CLR : Clear - to delete all entered information.

MODE : Mode - changes the mode of characters/ numbers/symbols.

< > : Adjusts the cursor position left or right.

■ STEP 5:

Once the Wireless Network has been connected, the following message will be displayed on the frame:

(this is an example with username: saturday8)



*Congratulations! You have now completed the set-up process.
You are ready to start enjoying your Kogan Wi-Fi Digital Photo Frame.*

Uploading Photos to your Kogan Wi-Fi Frame

Using the automatically generated username and password, you can log into www.see-frame.com to begin uploading photos onto your Kogan Wi-Fi Digital Photo Frame. Usernames and passwords can be changed upon log in.



CONNECTING WI-FI EMAIL & RSS FRAMES

[Home](#) [Help](#)

Get Photos Sent by Emails

- ✓ Create an unique and easy to recall email address
- ✓ Directly from mobile phones and personal computers
- ✓ Ask no extra efforts from senders
- ✓ Anti-spam design



Get Photos From Popular Photos Sites

- iPhoto
- Flickr
- Webshots
- Picasa
- Photobucket
- MSN Space
- Gallery2
- Smugmug
- AOL Pictures



Our service pulls photo RSS from all over the Web and send them to your frame on schedule

Manage Your Registered Frame

UserName:

Password:

[Forgot your password?](#)

☐ Remember Me

Virtual Demo

Download a desktop widget and explore the features now!

 
Wi-Fi Configuration Tool

- ☐ Windows Vista, XP, 2000(SP4)
- ☐ Mac OS X 10.3.9 or later

User Manual


- ☐ Starting Frame Quick Setup
- ☐ eStarting Frame Feature
- ☐ SeeFrame Feature & Services

Once you have entered your username and password, you will be greeted with the below screen. Click on **My Account** → **Modify Account** to change username and password.

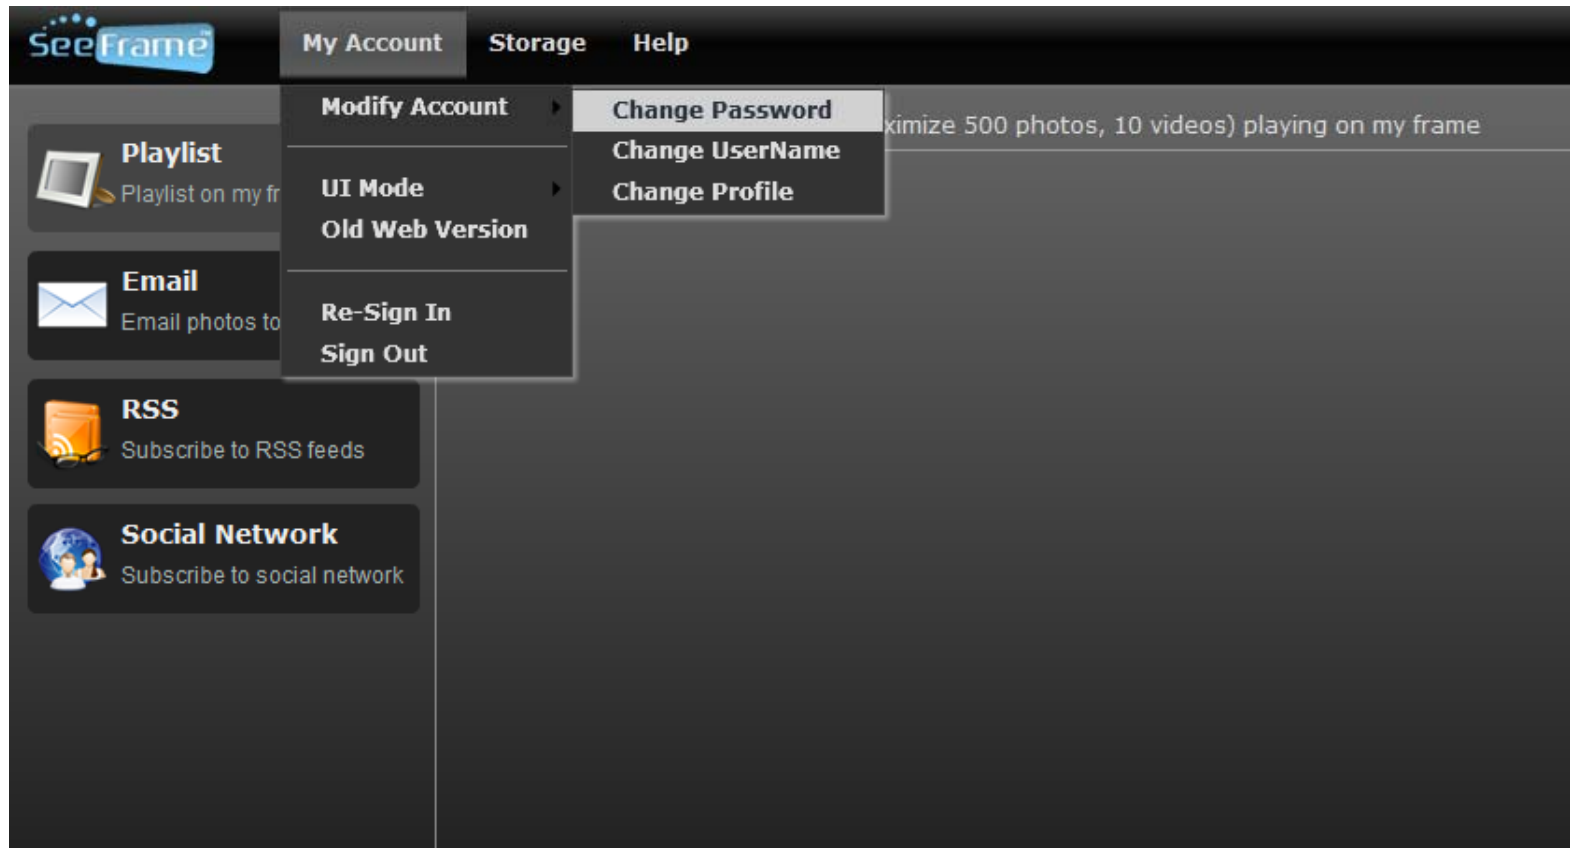


On the right-hand side, click **Upload** to upload pictures and video to your frame from a local PC.

 
On the top right-hand side, click **Upload** to begin uploading pictures and videos to your Kogan Frame from your computer.

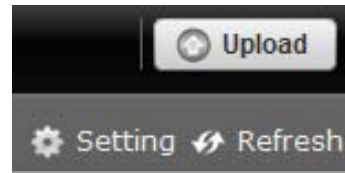

 
The following window will open. Click **Choose Files to Upload**.

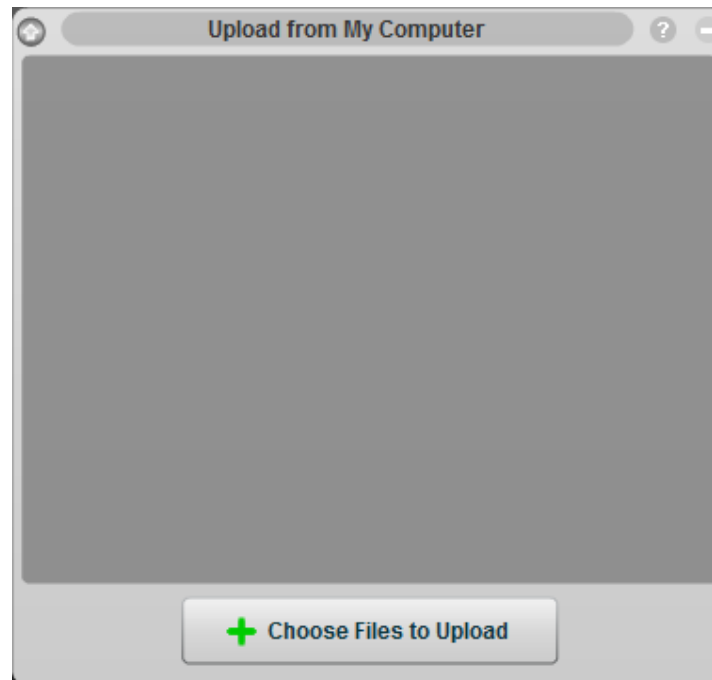

 
Choose the items which you wish to upload from your computer, then press **Open**.

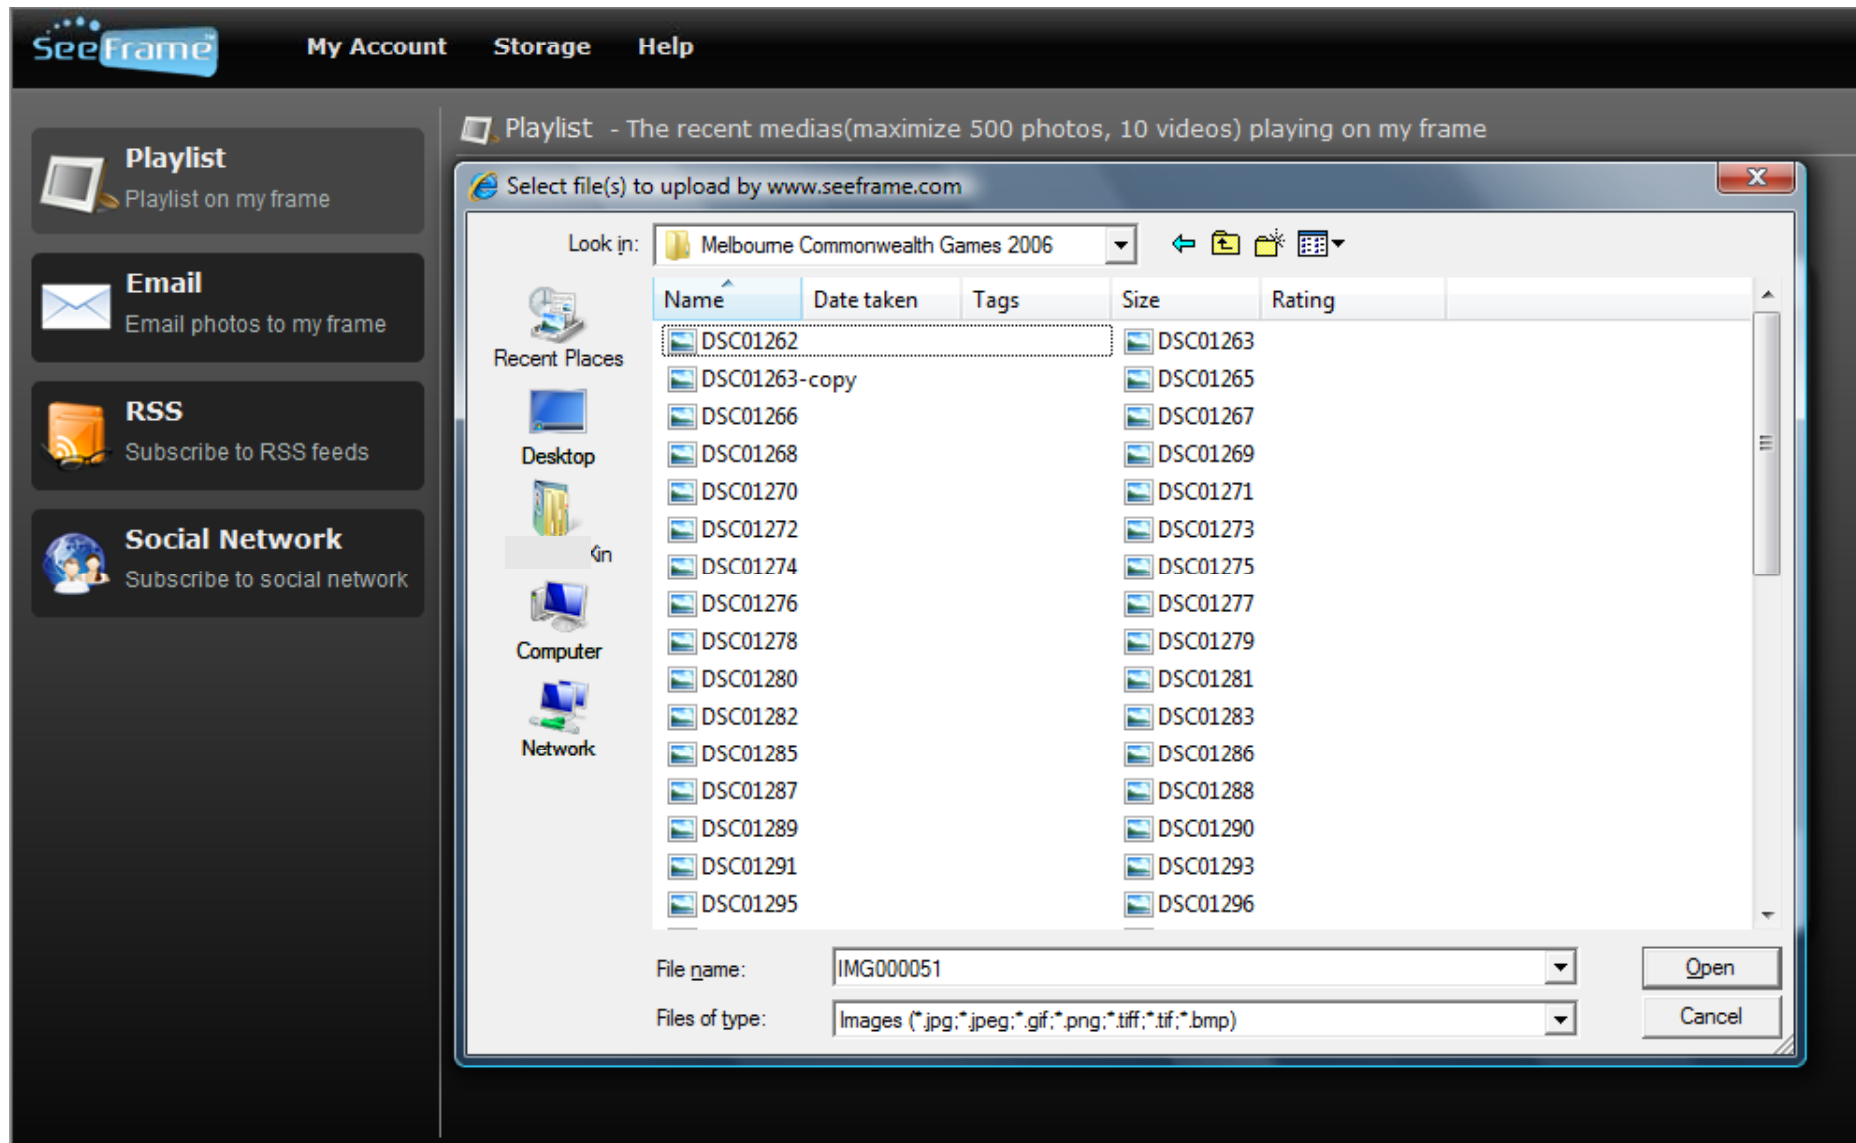

 Every Kogan Frame has a unique email address. Send pictures or videos to this address from any computer and these will be uploaded to the frame in minutes!

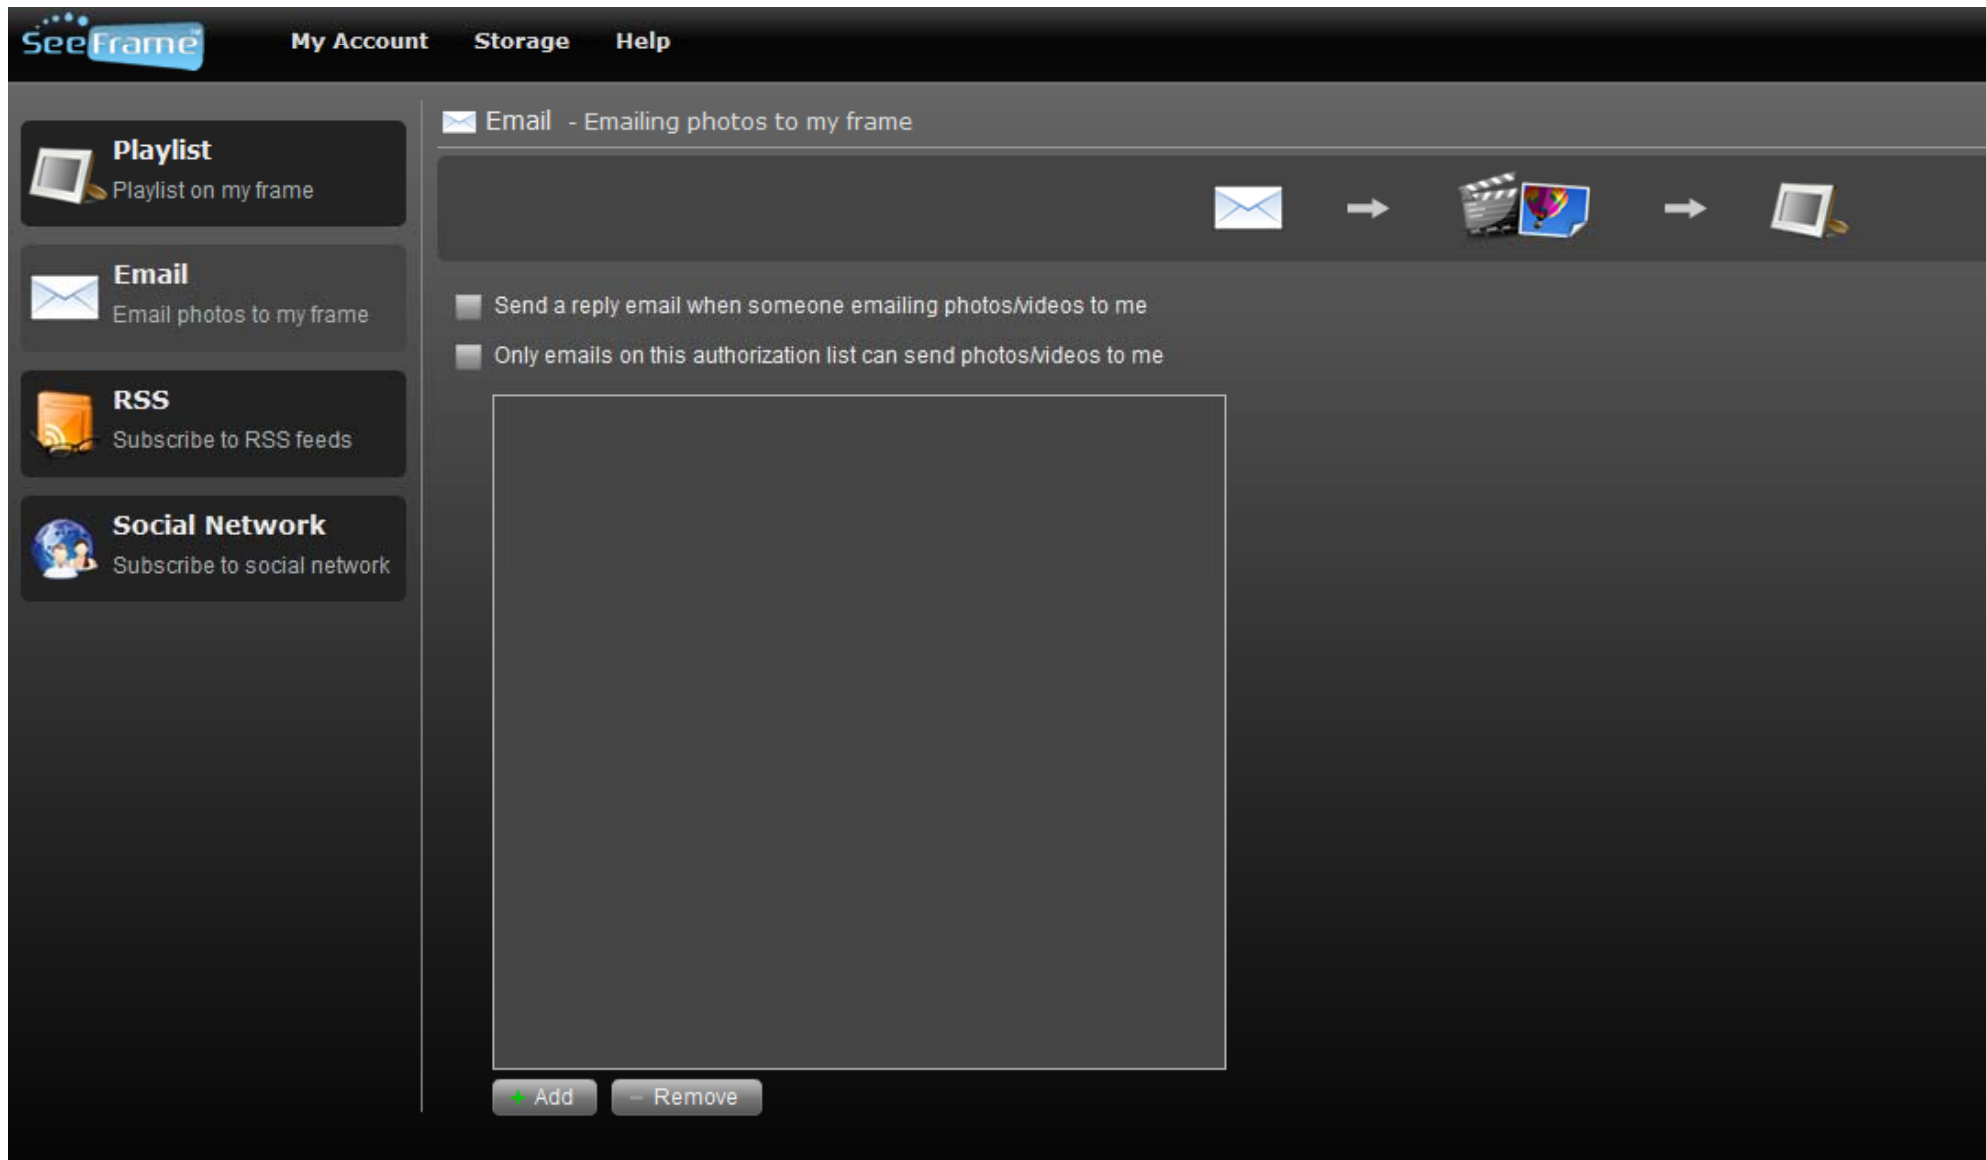

 Alternatively, you can subscribe to RSS feeds to upload the latest photos and videos directly to your Kogan Frame.

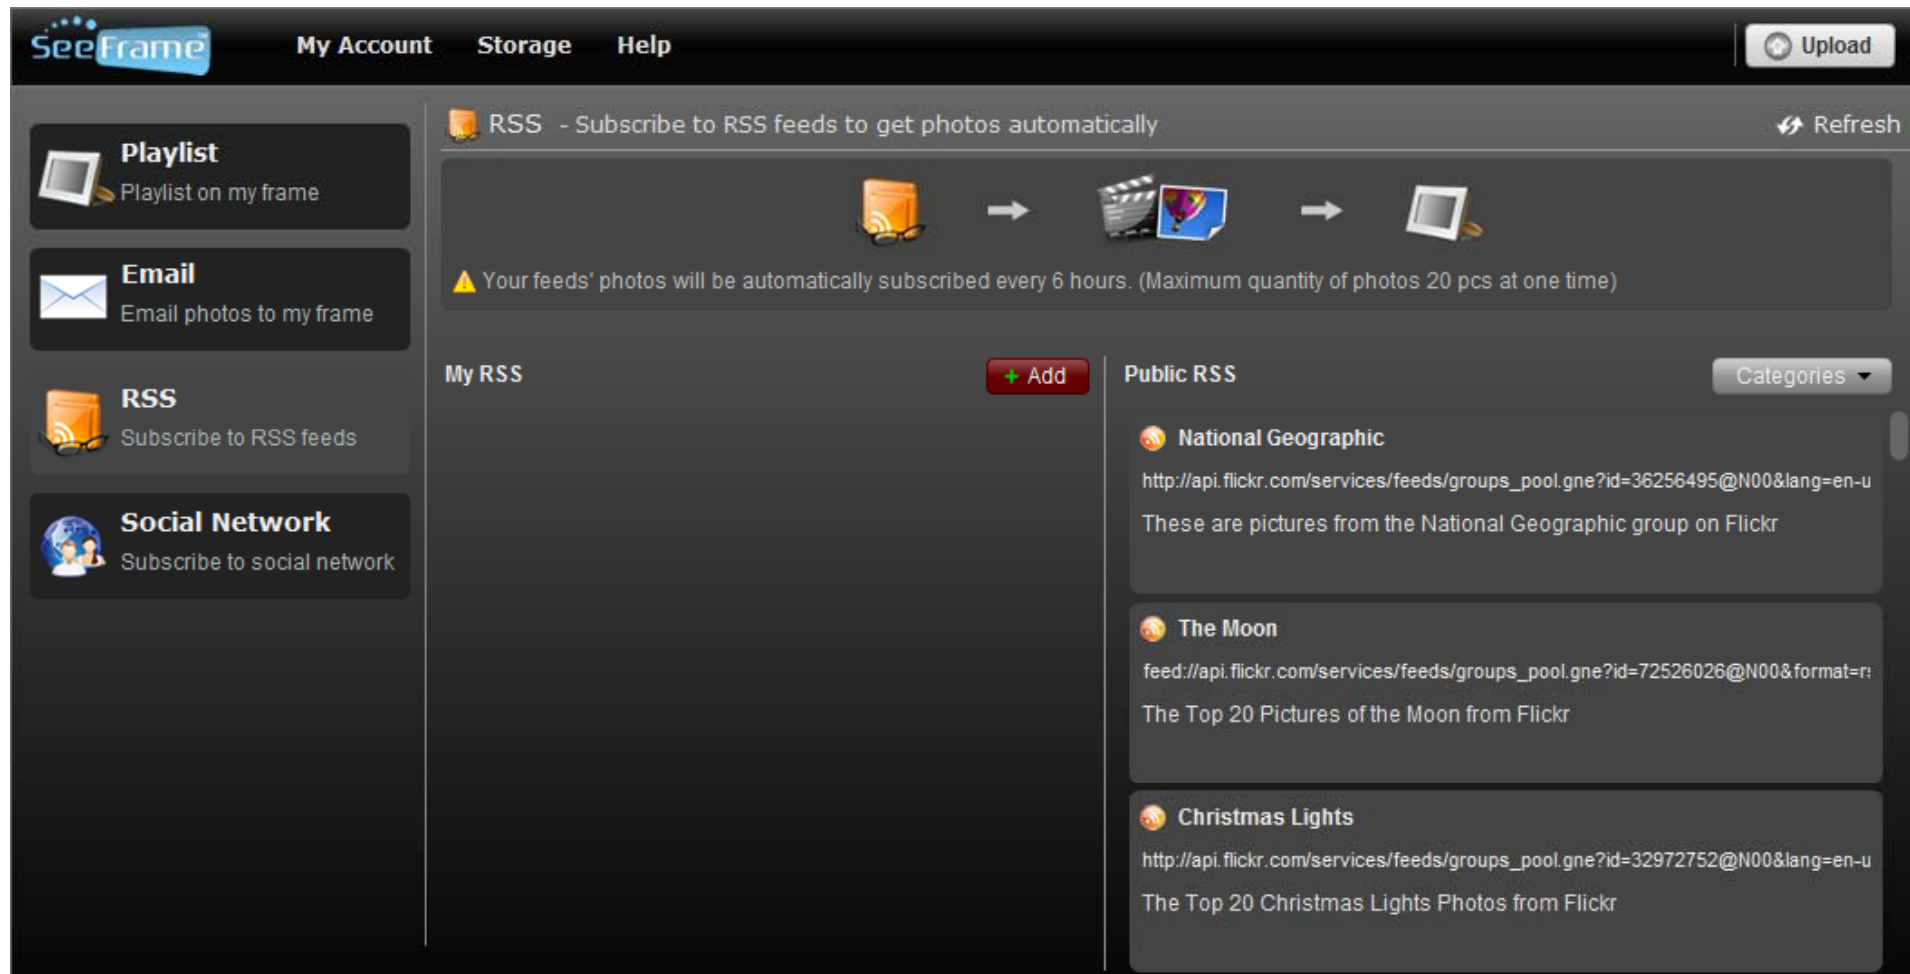

Click on various public RSS feeds to the right of the screen to subscribe automatically.

For example, to subscribe to the National Geographic RSS feed, simply click on **Subscribe to** in the window.

The screenshot shows the SeeFrame website interface. The top navigation bar includes the SeeFrame logo, links for 'My Account', 'Storage', and 'Help', and an 'Upload' button. The left sidebar contains four main sections: 'Playlist' (with a sub-link 'Playlist on my frame'), 'Email' (with a sub-link 'Email photos to my frame'), 'RSS' (with a sub-link 'Subscribe to RSS feeds'), and 'Social Network' (with a sub-link 'Subscribe to social network'). The main content area is titled 'RSS - Subscribe to RSS feeds to get photos automatically' and includes a 'Refresh' button. A central dialog box titled 'Subscribe to Photos/Videos RSS/Gallery/Atom Feeds' is open, displaying a form with the following fields: 'Feed Url' (containing a Flickr API URL), 'Title' (containing 'National Geographic'), and 'Description' (containing 'These are pictures from the National Geographic group on Flickr'). At the bottom of the dialog are 'Subscribe to' and 'Cancel' buttons. Below the dialog, a list of RSS feeds is visible, including 'The Top 20 Pictures of the Moon from Flickr', 'Christmas Lights' (with a sub-link to a Flickr API URL), and 'New York City'.

SeeFrame™ My Account Storage Help Upload

Playlist Playlist on my frame

Email Email photos to my frame

RSS Subscribe to RSS feeds

Social Network Subscribe to social network

RSS - Subscribe to RSS feeds to get photos automatically Refresh

Subscribe to Photos/Videos RSS/Gallery/Atom Feeds

Feed Url

Title

Description


Subscribe to Cancel

The Top 20 Pictures of the Moon from Flickr


Christmas Lights
http://api.flickr.com/services/feeds/groups_pool.gne?id=32972752@N00&lang=en-u
The Top 20 Christmas Lights Photos from Flickr

New York City

 To connect to albums located on Social Networks, click on the **Social Network** tab on the left-hand side. Your Kogan Frame will then be automatically uploaded with these photos.

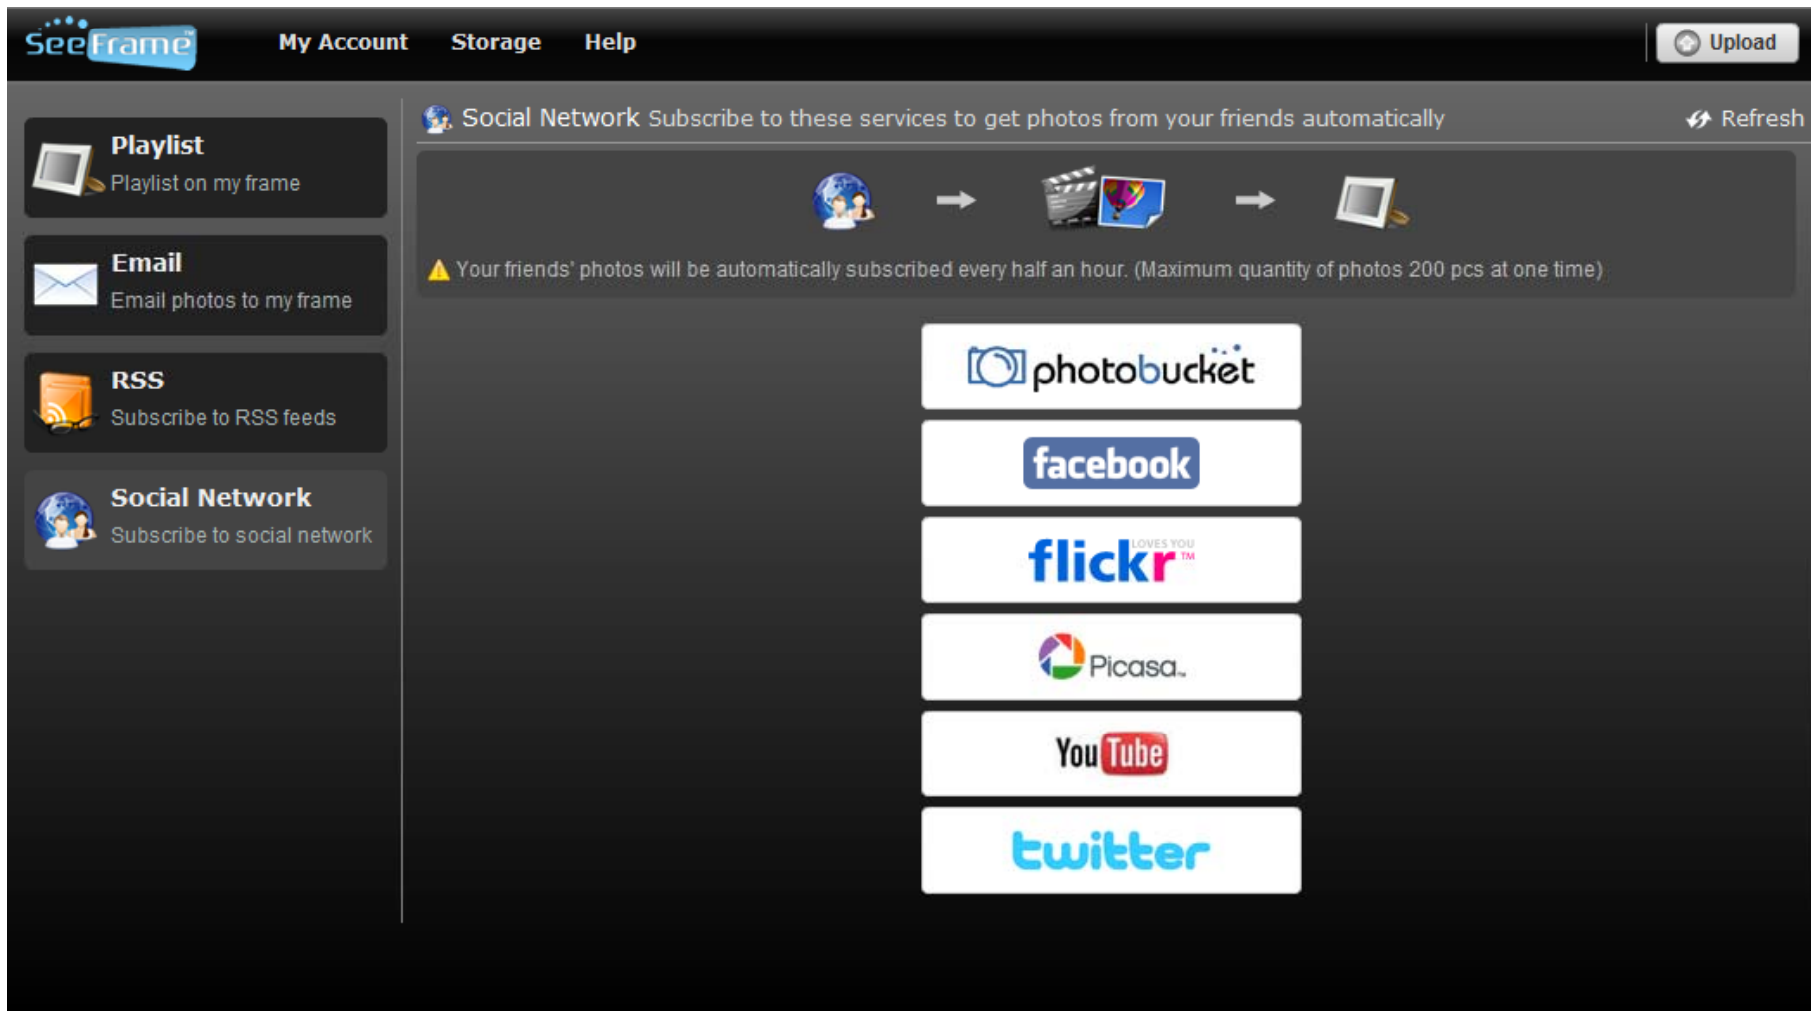

 For example, to upload an album from Facebook, simply click on the **Facebook** logo.

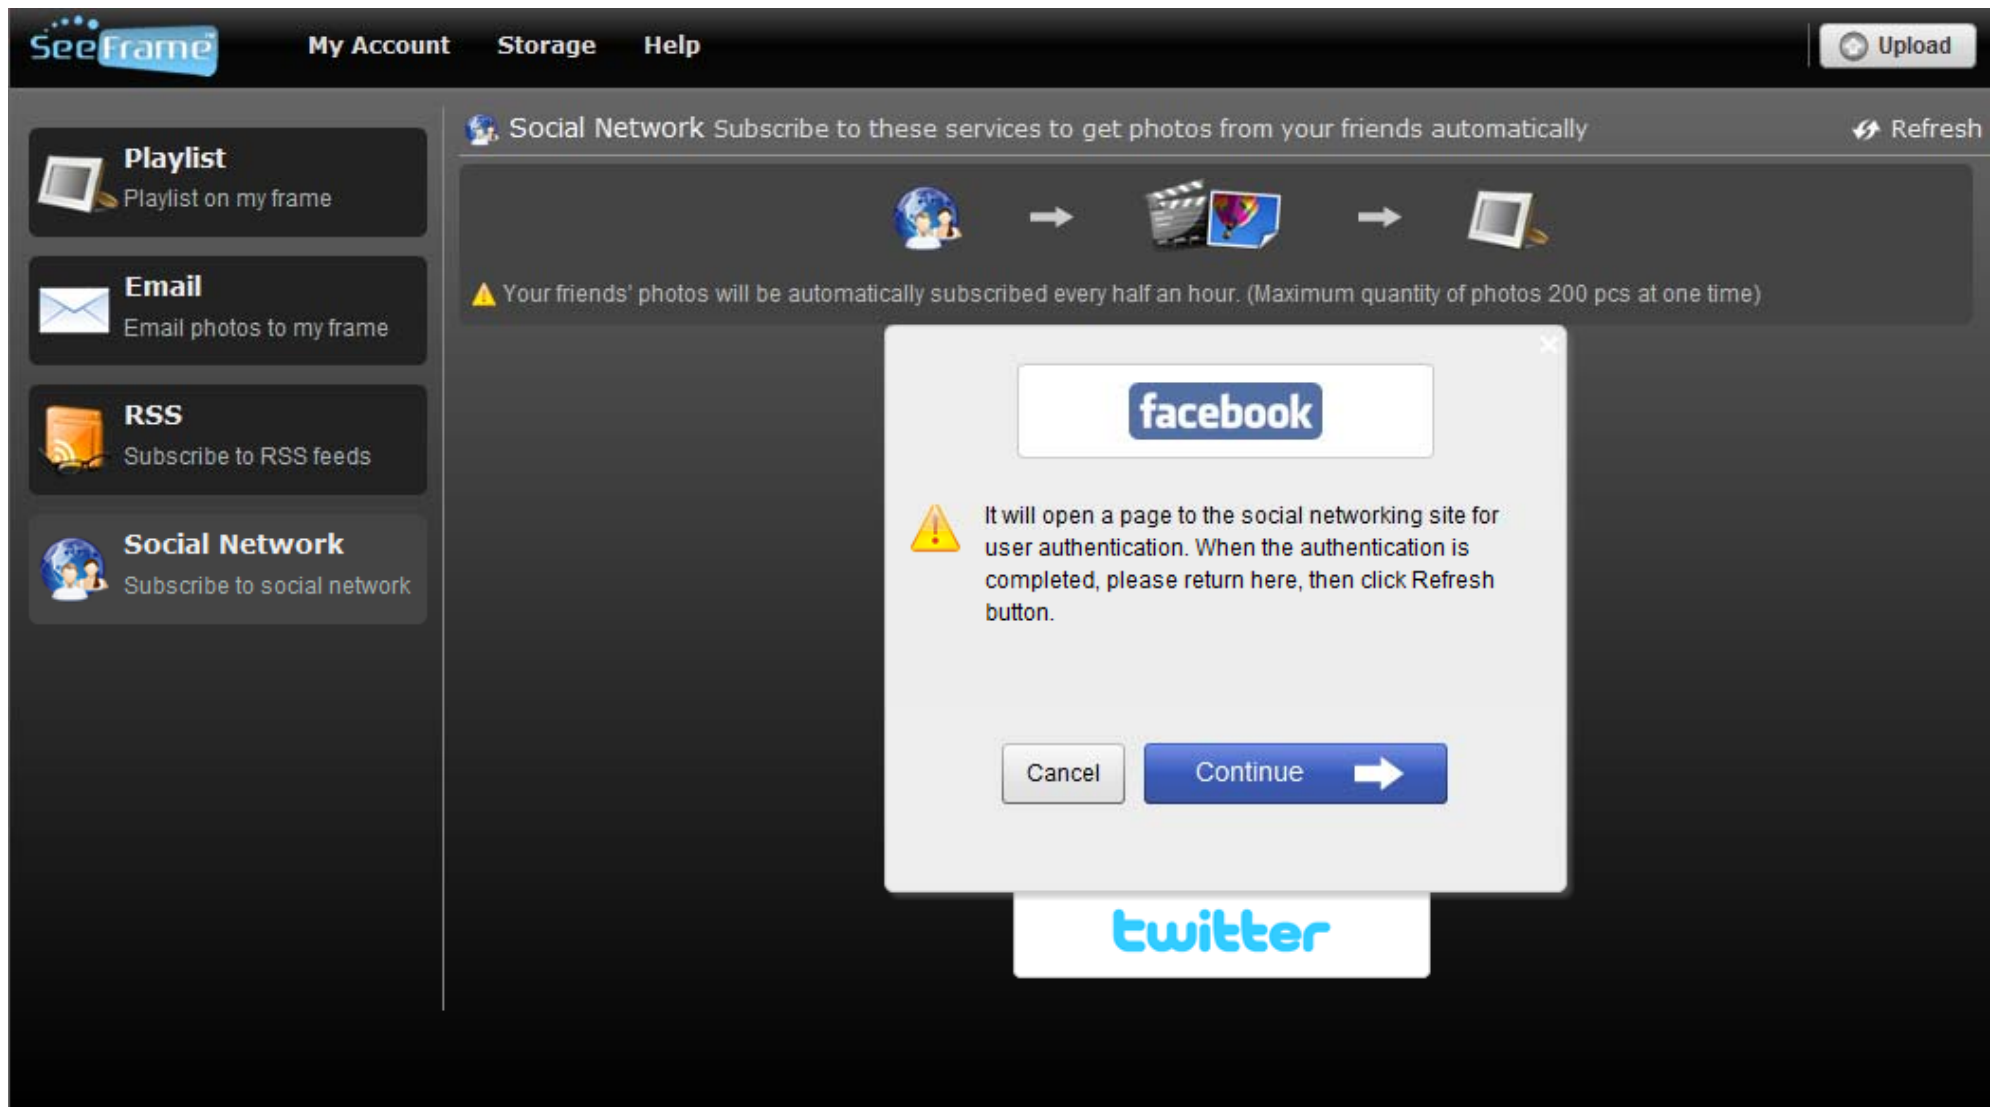

By pressing **Continue**, Seeframe will automatically take you to the Facebook login site.

Enter your Facebook details and click **Log in**

facebook

Sign Up

Facebook helps you connect and share with the people in your life.

Facebook Login

Seeframe Live

Log into Facebook to enjoy the full functionality of [Seeframe Live](#). If you don't want this to happen, go to the normal [Facebook login](#) page.

Email:

Password:

 
Log in

or [Sign up for Facebook](#)

[Forgotten your password?](#)

By proceeding, you are allowing Seeframe Live to access your information and you are agreeing to the [Facebook Terms of Use](#) in your use of Seeframe Live.


The pictures on Facebook will be downloaded to your Kogan Frame automatically. Return to See frame and click **Refresh**.

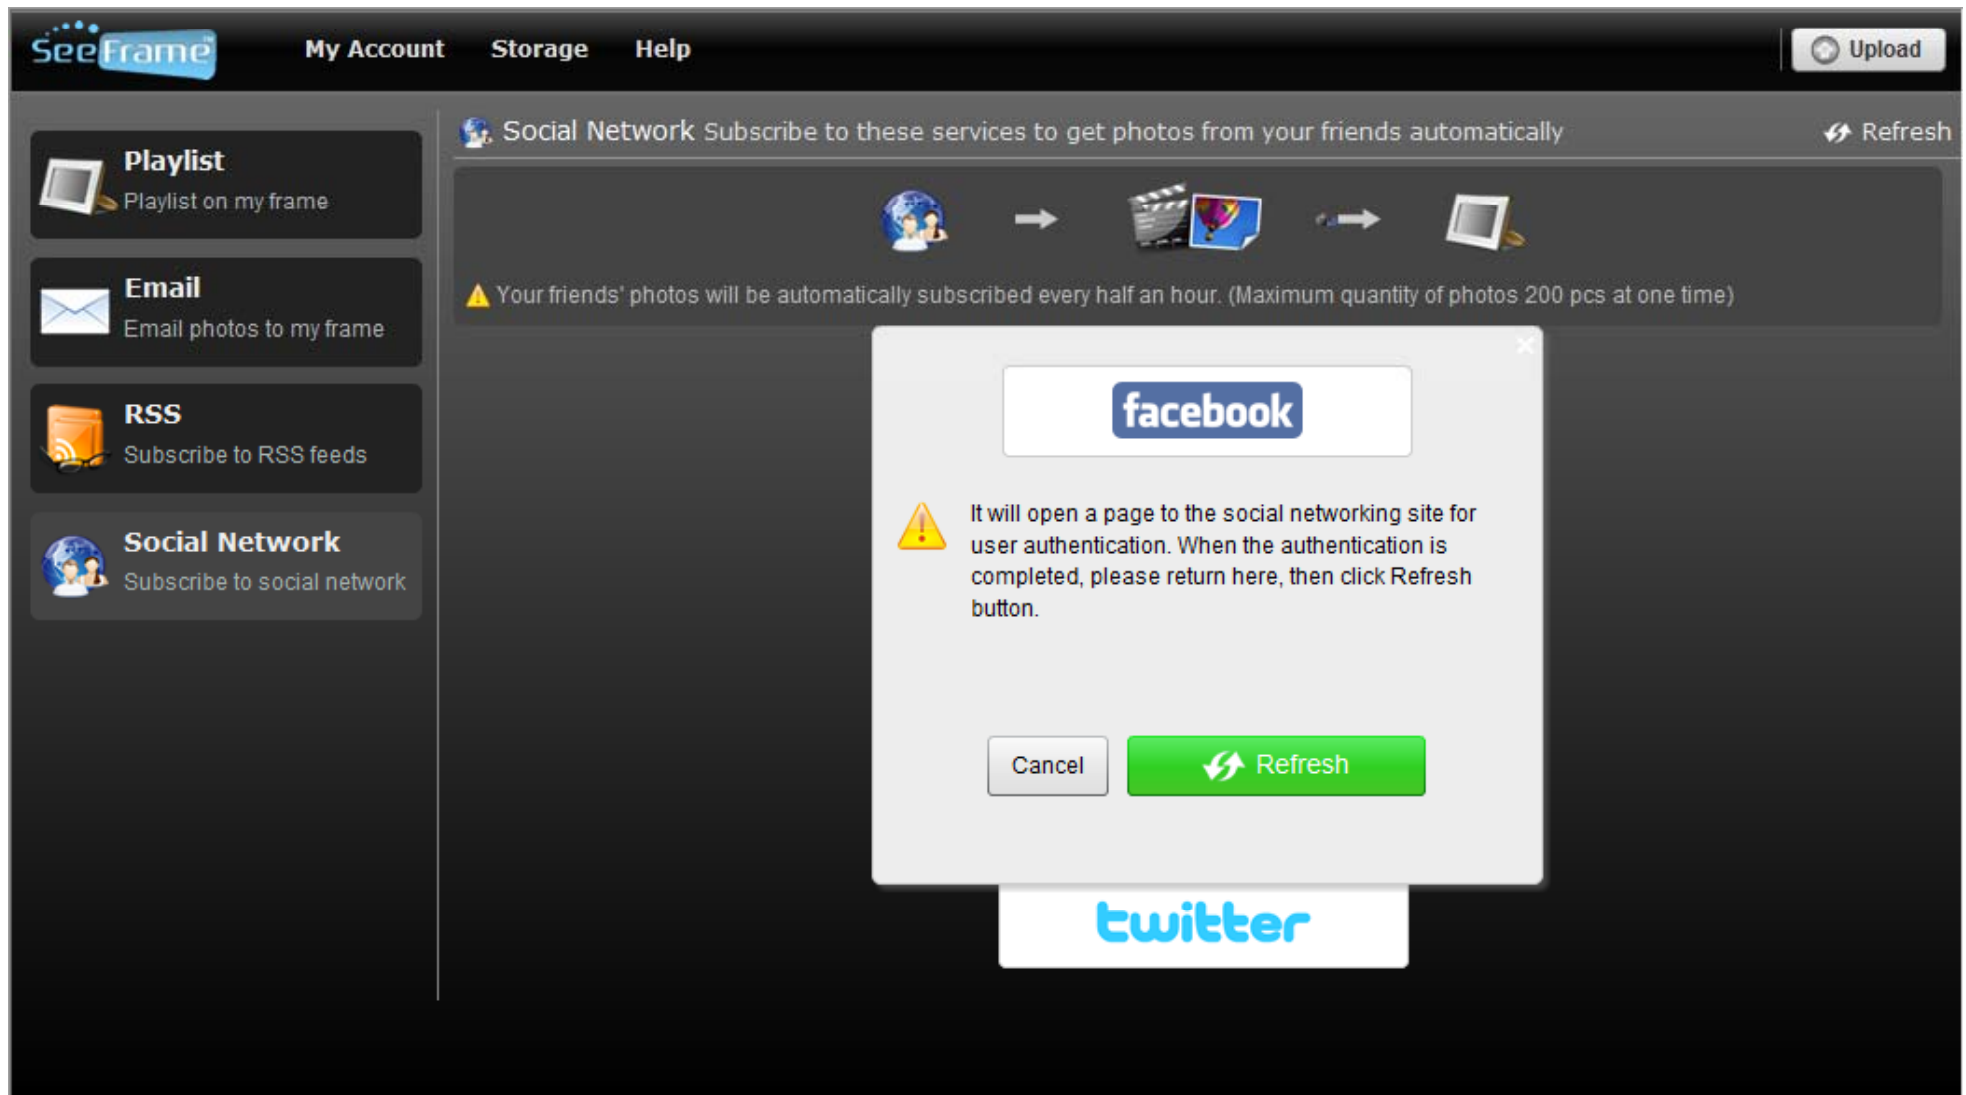

Once you have successfully added your Account, a green tick will be displayed next to the service.



 
For more functions, you can enter the advanced options.
From **My Account**, select **UI Mode** → **Advanced**

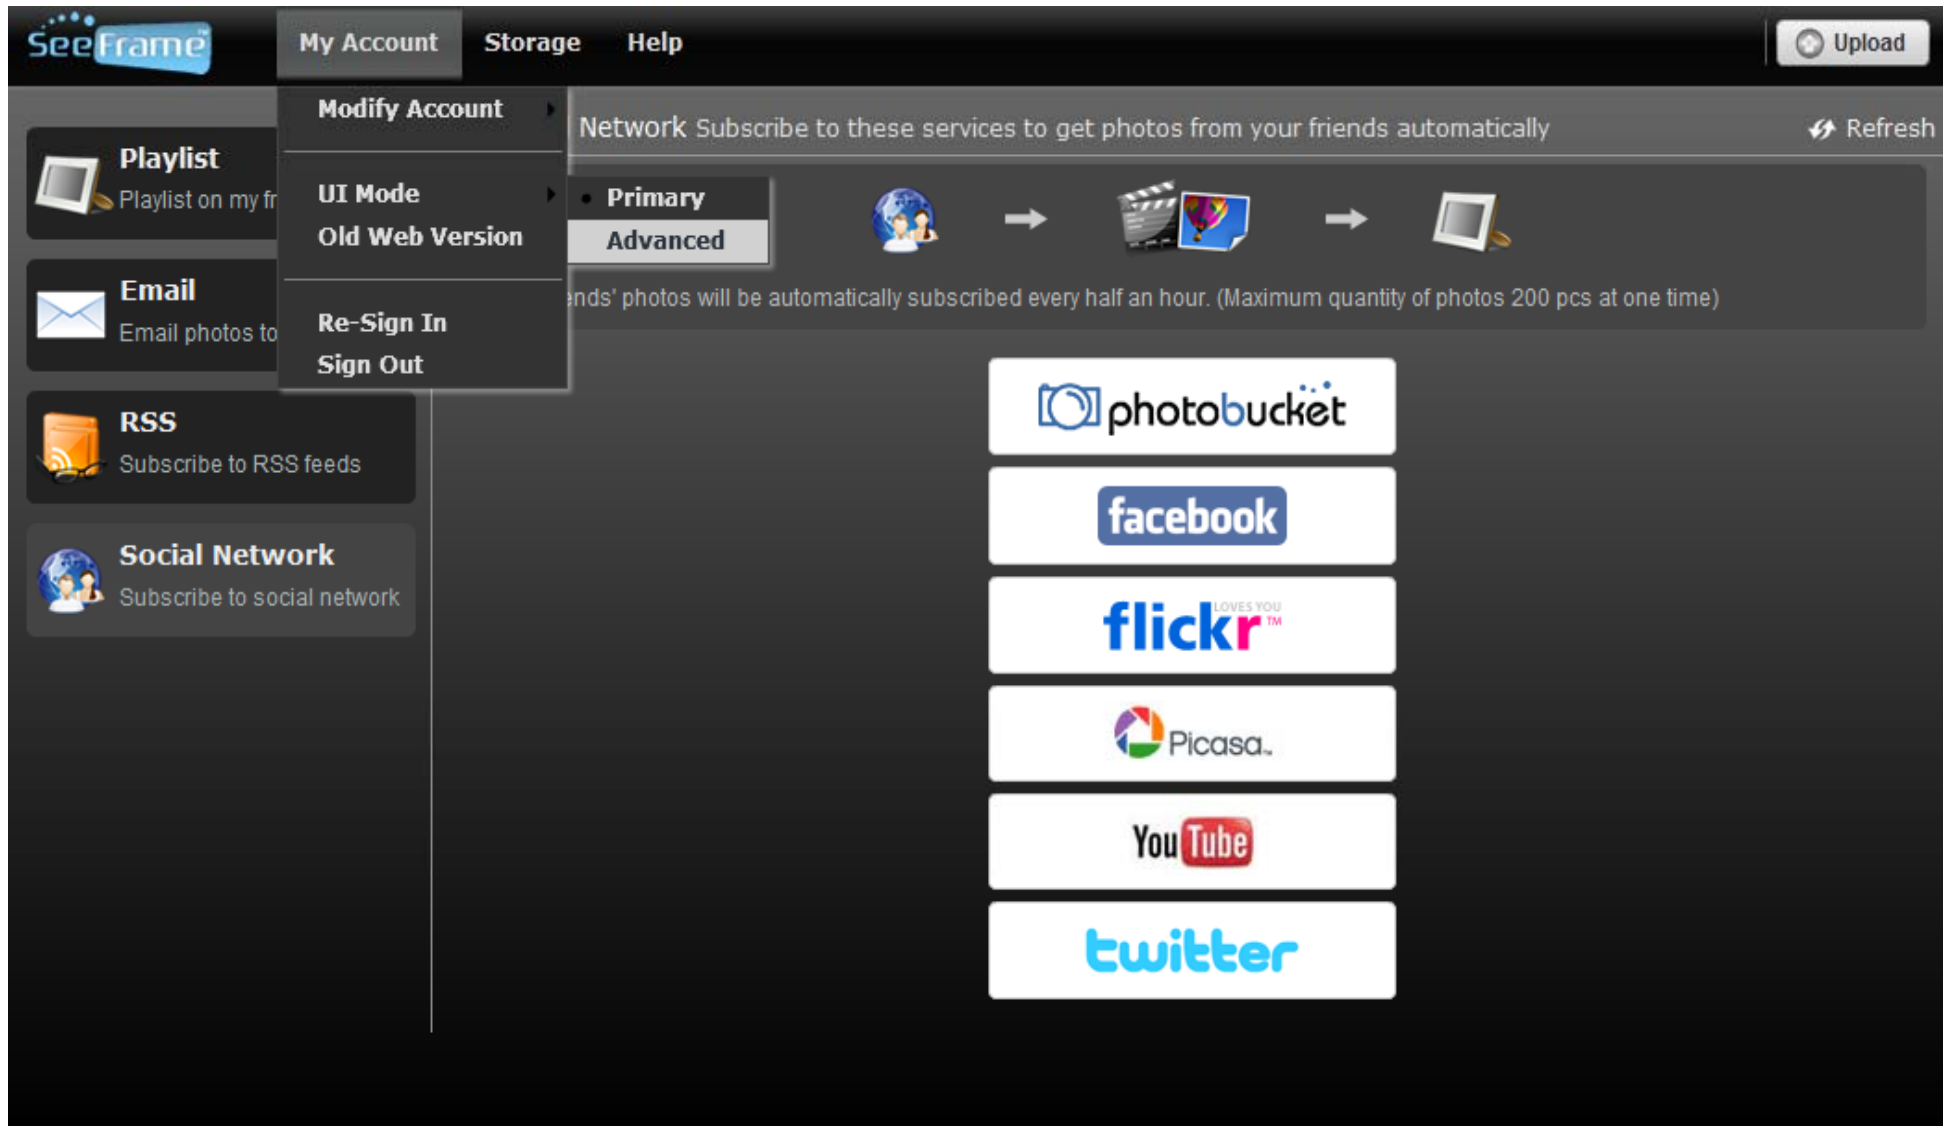

Entering Advanced Mode will open up an interface allowing more functions. Click **Help/Videos** to open various flash tutorials which teach you how to use the SeeFrame interface.





 The Flash tutorials are comprehensive yet simple to use. They can be repeated for your convenience.

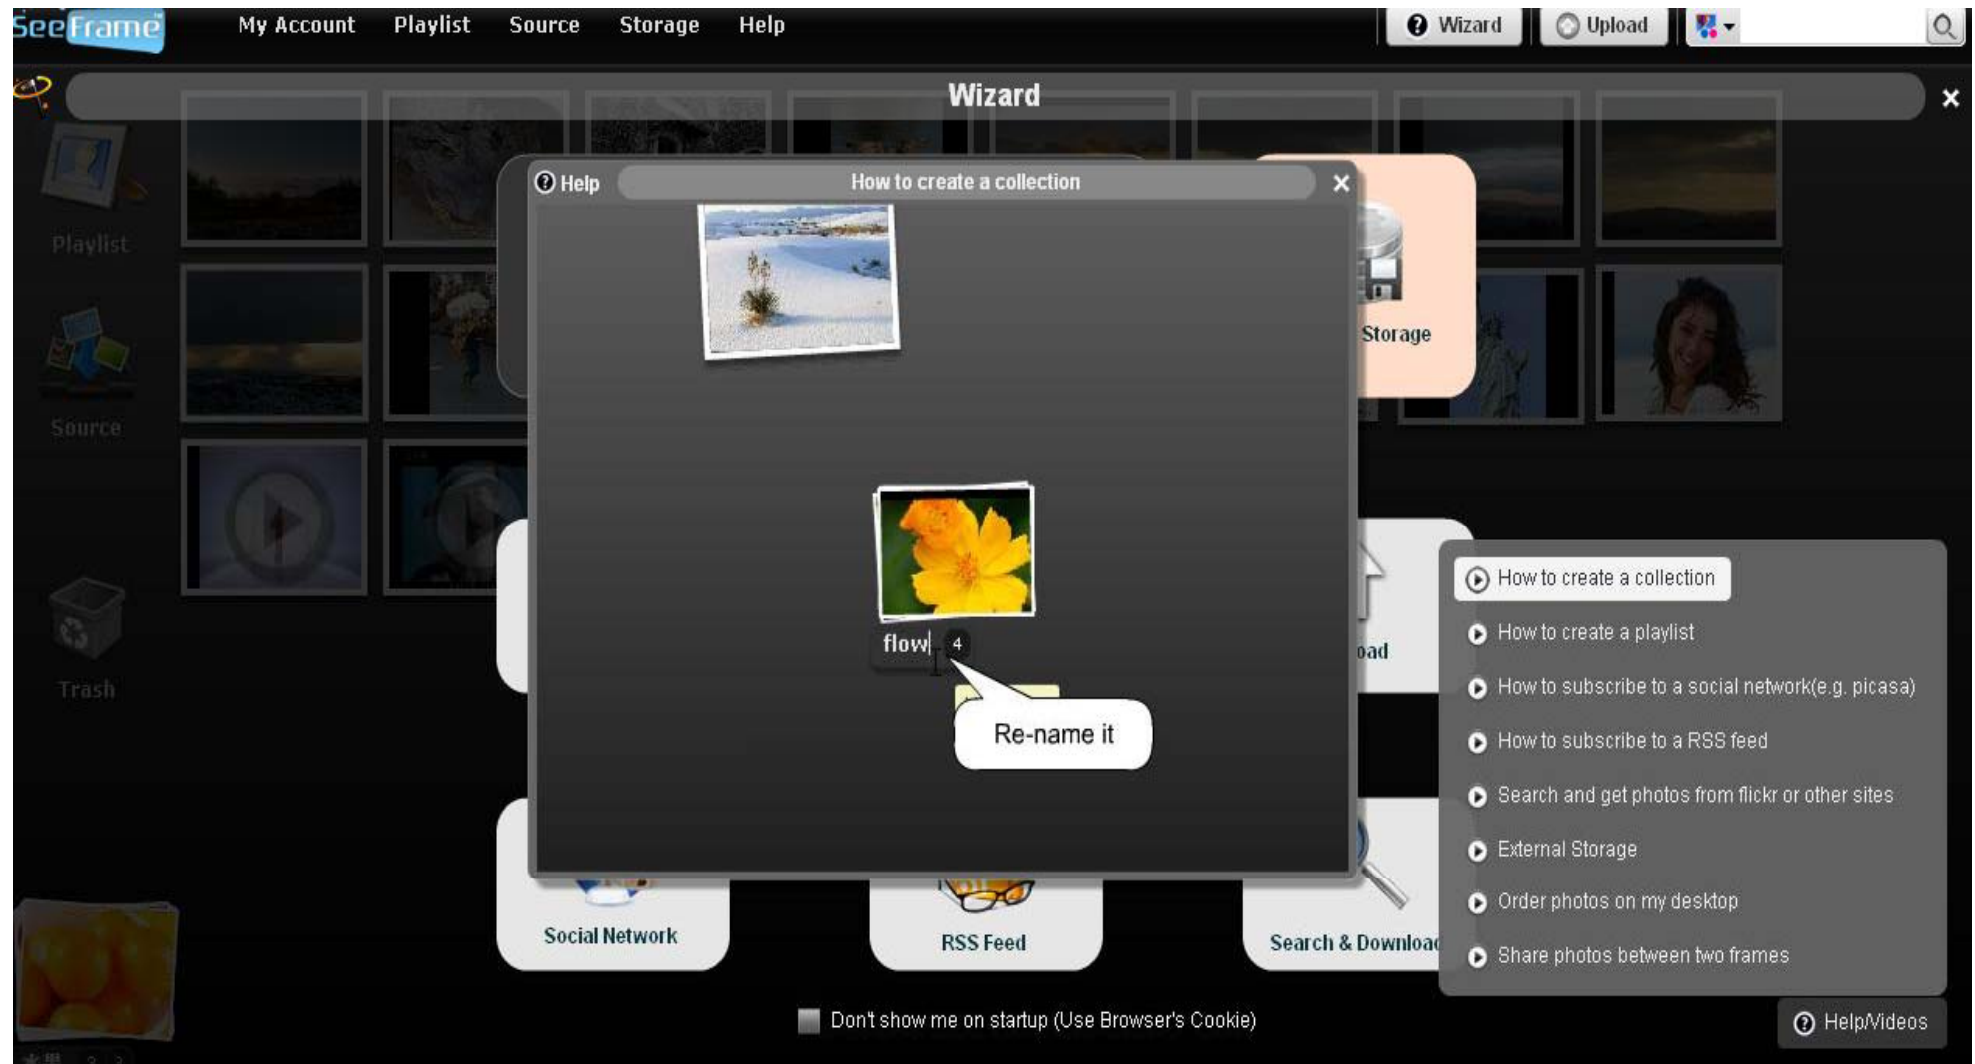


Your Kogan Frame can support various playlists. Click on **Manage Playlists** to edit your photo playlists.

  You can choose to play specific photos one after the other in cycle, or certain photos on specific days.

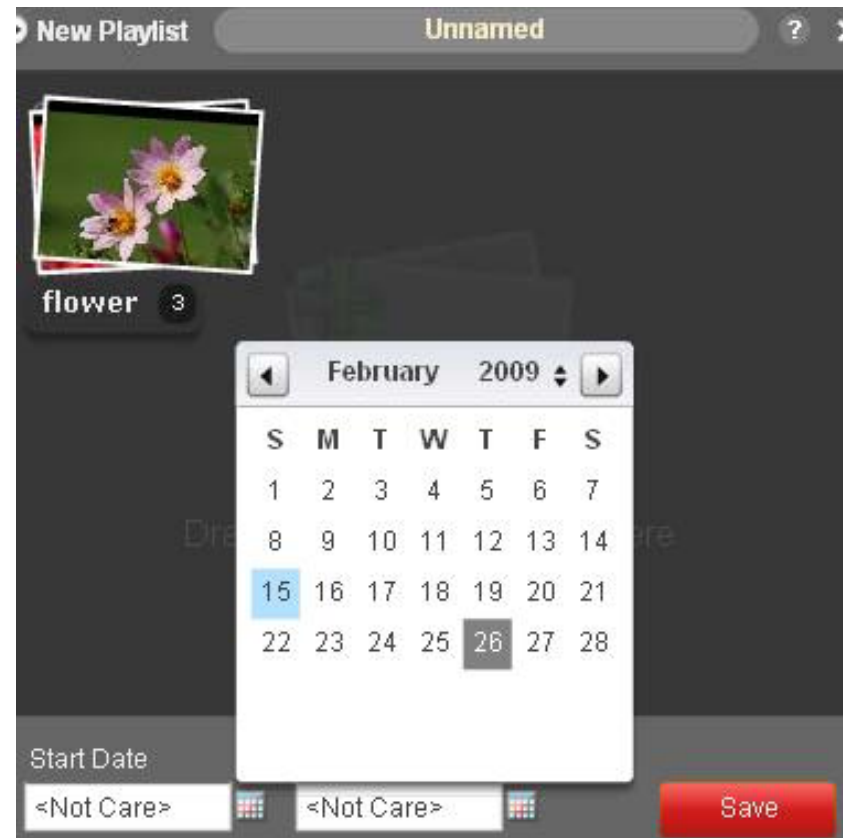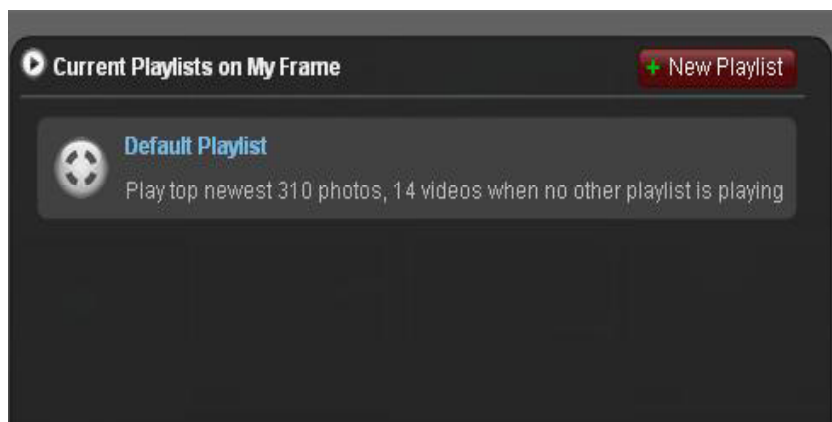

 To upload photos from Social Network sites such as Flickr, search for your desired photos. Then choose your photos and drag them into the main interface where they will then be uploaded to your frame.

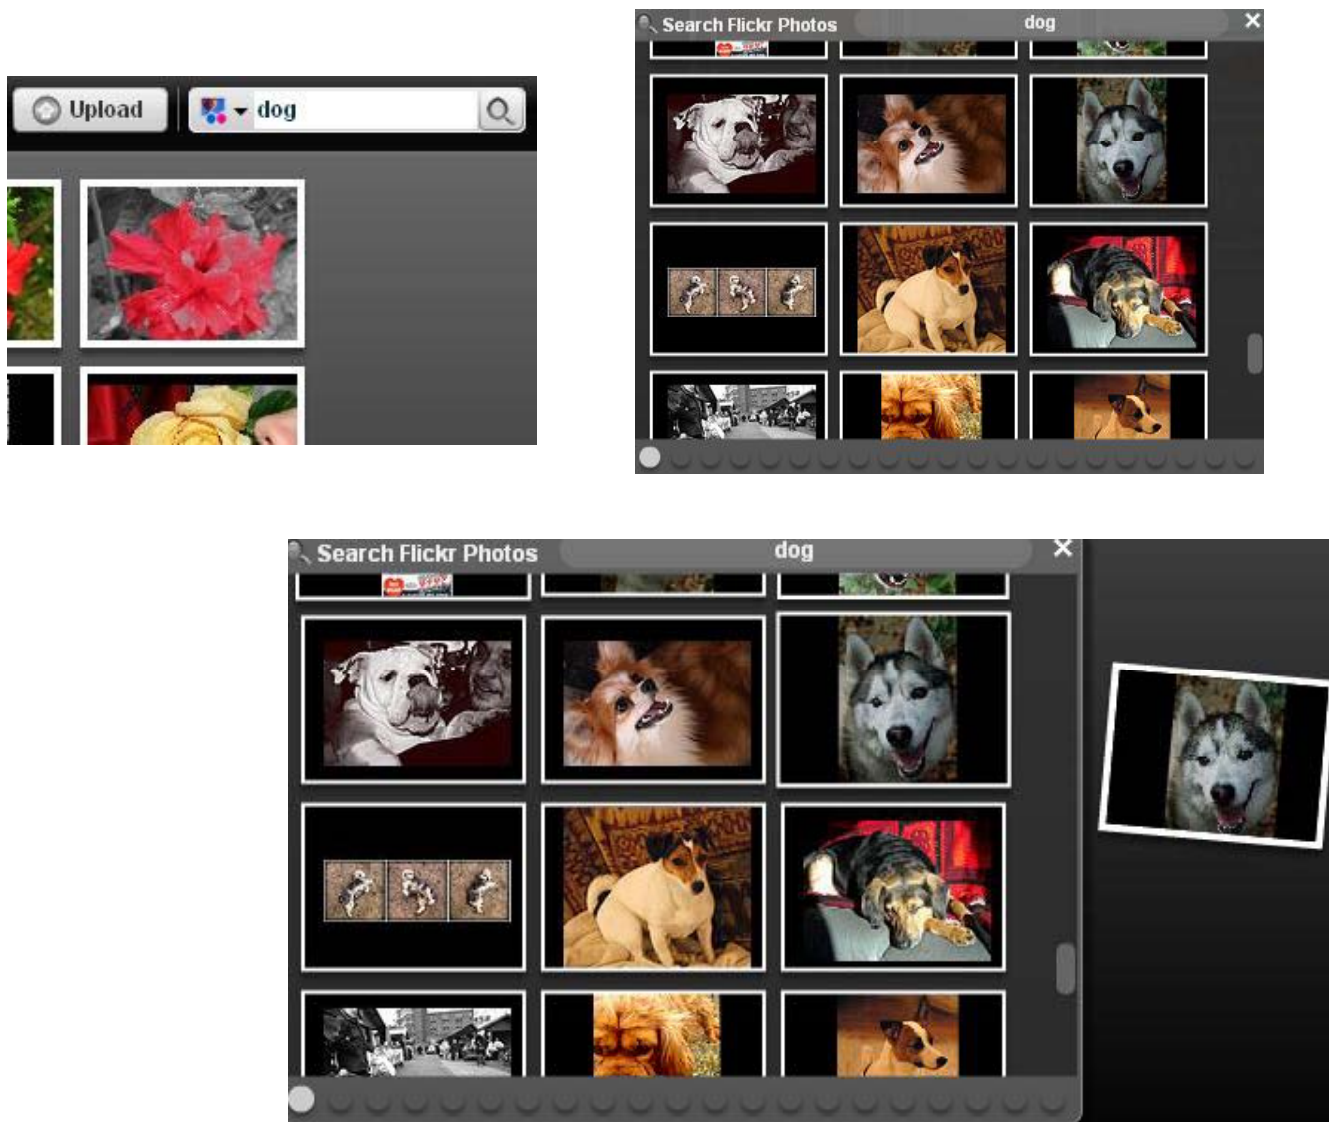

Your Kogan Wi-Fi Digital Photo Frame allows you to enjoy your favourite photos from the comfort of your own home conveniently and easily via Wi-Fi.



kogan