

 **BREAKFRESH**
PREMIUM TOASTER LINE


INSTRUCTION MANUAL



TOASTER 4 SLICE

TT-BF13

www.zline-world.com

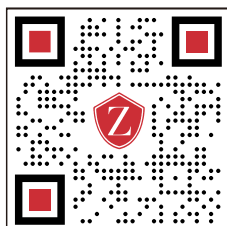

Thank you for buying **BreakFresh** - Toaster by **TurboTronic®**.

Kickstart your morning breakfasts with fresh toast or perfectly warmed bagels with the **TT-BF13** - 4 slice wide slots for all kinds of bread, features 6 settings for selection, allowing you to control different degrees of toasting. Multifunctional roasting with Stop / Reheat / Defrost functions. Self-centering slot guides, and intelligent heating technology to deliver even toasting every time!

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS.

When using electrical appliance, basic safety precautions should always be followed, including the following:

Read this user manual carefully, before you use the appliance, and keep it safely for future reference. When using electrical appliances, basic safety precautions





1. Check that the mains voltage corresponds with the rating of the appliance before operating.
1. 2.Do not touch hot surfaces-Use handles or knobs.
2. To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
3. Do not leave any appliance unattended while it is operating.
4. Close supervision is necessary when any appliance is used by or near children or infirm persons.
5. Unplug from outlet when not in use or before cleaning.
6. Allow to cool before putting on or taking off any parts.
7. Do not aerate the appliance with a damaged cord or plug, or after the appliance has been damaged in any manner.
8. If the supply cord or appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
10. Do not use outdoors.
11. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
12. To disconnect-remove the plug from the outlet.
13. Do not pull plug out by the cord.
14. Do not use this product for anything other than intended use.
15. This product is intended for household use only.
16. No liability can be accepted for any damage caused by noncompliance with these instructions or any other improper use or mishandling.

17. Use the toaster without bread for the first time. There will be some smoke at first; this is normal.
18. The toaster reaches very high temperatures, particularly in the area of the openings for the bread.
19. Bread may burn. Therefore, this toaster must not be used near or below curtains and other combustible materials.
20. Do not place the cable or any other object over the bread openings whilst the toaster is in operation.
21. Do not attempt to dislodge food while the toaster is in operation.
22. Toasting lever must be in the 'UP' position before attaching or disconnecting the plug from wall outlet.
23. Do not insert metal objects or other utensils into the toaster, as this will cause an electric shock or cause a fire.
24. Do not leave the toaster unattended whilst in operation.
25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised
26. Keep the appliance and its cord out of reach of children less than 8 years.
27. The surfaces are liable to get hot during use.
28. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
29. The door or the outer surface may get hot when the appliance is operating




CAUTION:

The appliance becomes HOT during operation!

| | |
|---|--|
|  | Indicates to read and review instructions to understand operation and use of product. |
|  | Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored. |
|  | Take care to avoid contact with hot surface. Always use hand protection to avoid burns. |
|  | For indoor and household use only. |

DESCRIPTION

1. Bread slots
2. Toast lever
3. Stop button/Stop
4. Warm button/Reheat
5. Thaw button/Defrost
6. Toaster darkness control / 1 to 6
7. Crumb tray
8. Bun warmer

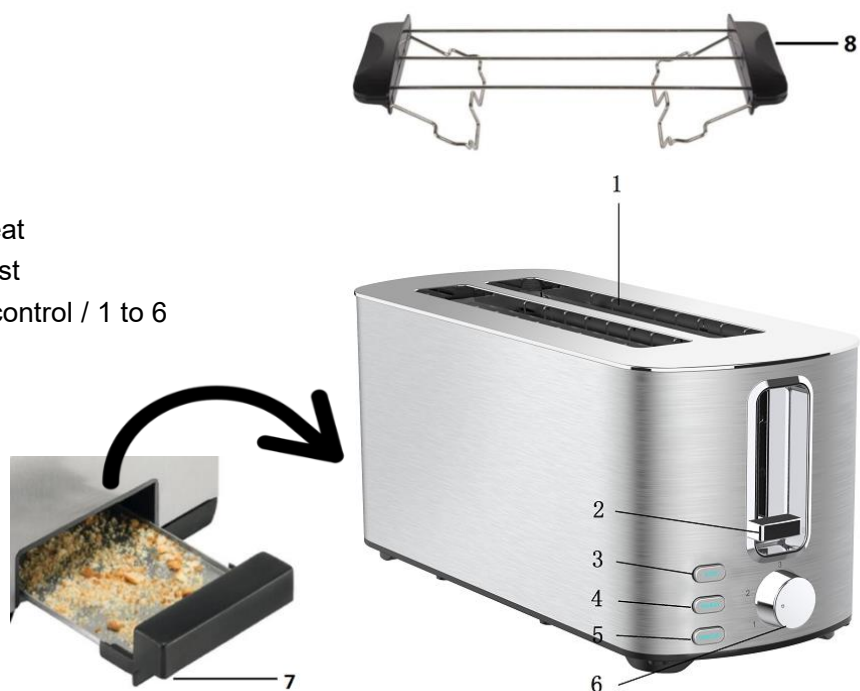

TECHNICAL SPECIFICATIONS

Power rating: 1180-1400W, 220-240V~ ,50/60 Hz

Power cord: Approx. 75 cm

Housing: Stainless steel

Features: 2 slot automatic toaster

4 functions: Toast, Reheat, Defrost, Stop

All buttons with pilot light

Self-adjusting bread carriage for uniform toasting

Automatic cut-off

Removable crumb tray

Cable storage

TIPS FOR IDEAL TOASTING RESULTS

1. Different types of bread have varying moisture content. Therefore, the same toast darkness setting can produce different results.
2. For bread that is slightly dry, use a lower toast darkness setting.
3. For fresh bread or whole grain bread, use a higher toast darkness setting.
4. Bread with an irregular surface requires a higher toast darkness setting.
5. Thick bread slices need more time for toasting; it may even be necessary to toast
6. the bread a second time.
7. When toasting raisin bread, remove all raisins from the surface, since otherwise they could burn.
8. If you toast only one slice, please select a low toast darkness setting.

9. If you toast several slices one after the other, the bread will be somewhat darker at the same toast darkness setting.
10. To toast frozen bread, waffles, etc. Please use the thaw button.

BEFORE USING THE APPLIANCE FOR THE FIRST TIME

1. Remove all packaging materials and any transport safety devices.
2. Confirm that all accessories mentioned have been supplied.
3. Clean the toaster with a damp cloth.
4. Confirm that all components are properly assembled and the appliance is placed firmly.
5. Make sure that there is enough space between the toaster and the wall or other appliances, as the toaster will become hot during operation.
6. Connect the appliance to the mains supply by means of the lead cable (220-240 V~, 50/60 Hz).
7. Before using the toaster for the first time, you will have to perform a toasting process without bread. Press the toast levers on both toaster parts down until they latch into place.
8. When the toasting is finished, the toast levers automatically jump up. You may now start toasting bread.

OPERATION - TOASTING

1. Prepare the toaster as described in chapter "Before first use".
2. Put the slices of bread into the slots of toast chamber.
3. Select the desired toasting grade using the roasting grade selector. The adjustment is continuous, corresponding level 1 to light toasting and level 6 to dark toasting. The toast will be golden brown when you adjust the selector to a medium toasting grade.
4. Push the toast levers down until they latch into place. The indicator light for "Stop" lights up and the toasting process starts.
5. You may interrupt the toasting process at any time pushing the button "Stop".
6. When the selected toasting grade is achieved, the bread is ejected automatically. The appliance will be shut off.

OPERATION - WARMING

1. Place the bread slices in the slots in the toasting chamber.
2. If you wish to warm up rolls, place the bun warmer on the toaster so it is level and then place the rolls on top. To fold the bun warmer again, gently press the left and right brackets to the outside, so that the holders can engage.
3. Press the toast lever down until it locks into place.
4. Then press the button "Reheat" right away.
5. The bread or roll is warmed with-out being toasted.

6. You can interrupt the warming cycle any time by pressing the “Stop” button.
7. After completion of the warming cycle the bread is automatically ejected. The appliance shuts off automatically.
8. Please note that you cannot set the toast darkness when using the warming function.

OPERATION - THAWING

The thawing function first thaws out the bread and then toasts it, which means that the thawing cycle lasts somewhat longer than the normal toasting cycle.

1. Place the bread slices in the slots in the toasting chamber.
2. If you wish to thaw up rolls, place the bun warmer on the toaster so it is level and then place the rolls on top.
3. Press the toast lever down until it locks into place.
4. Select the desired toast darkness setting.
5. We recommend the following toast darkness settings:
LOW for bread from the refrigerator or thin frozen bread slices.
MEDIUM for frozen waffles or rolls
HIGH for thicker frozen bread slices and for rolls and thick toast slices.
6. Then press the button “Defrost” right away.
7. The bread or roll is thawed and toasted.
8. You can interrupt the cycle any time by pressing the “Stop” button.
9. After completion of the thawing cycle the bread is automatically ejected. The appliance shuts off automatically.

CLEANING AND CARE

1. Allow the appliance to cool before cleaning it.
2. Before cleaning, always turn off the appliance and unplug it from the power supply.
3. Do not immerse the appliance and power cord in water or other liquids or wash them
1. in the dishwasher.
4. Wipe off the toaster with a damp cloth and a little dish washing detergent. Do not use any abrasive scouring agents, steel wool, metal objects, hot cleaning agents or disinfectants, since they can damage the appliance.
5. To remove stuck bread slices, unplug the toaster and turn it over and shake lightly.
2. Never attempt to remove stuck bread slices with sharp or pointed tools or silverware.
6. Remove crumbs and any small pieces of bread from the crumb tray regularly. To do this, pull the crumb tray on the side all the way out and empty it. Wipe the crumb tray with a damp cloth, then dry it thoroughly and push it back into the appliance.
7. The appliance must be completely dry before you use it again.

DISPOSAL OF OLD ELECTRICAL APPLIANCES



The European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

LIMITED WARRANTY

Limited Warranty applies to purchases made from authorized retailers of **TurboTronic®**. **TurboTronic®** Warranty coverage applies to the original owner and to the original product only and is not transferable.

TurboTronic® warrants that the unit shall be free from defects in material and workmanship. Limited Warranty apply only when it is used under normal household conditions and maintained according to the requirements outlined in the Owner's Guide, subject to the following conditions and exclusions:

ANY WARRANTY OR AFTER PURCHASE SERVICE, SHOULD BE WITH A THIRD-PARTY COMPANY, FROM WHICH YOU PURCHASED THE PRODUCT. TURBOTRONIC® PROVIDES THE WARRANTY ONLY TO OUR THIRD-PARTY SUPPLIERS. SINCE THIS PRODUCT IS NOT PURCHASED DIRECTLY FROM TURBOTRONIC® BUT THROUGH ONE OF OUR THIRD-PARTY SUPPLIERS, ANY ISSUE AFTER THE PURCHASE, CUSTOMER SERVICE OR RECEIVING THE WARRANTY SHOULD BE ONLY / DIRECTLY THROUGH THE THIRD-PARTY SUPPLIERS FROM WHICH YOU PURCHASED THE PRODUCT.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in **TurboTronic®** sole discretion, will be repaired or replaced
2. **TurboTronic®** reserves the right to replace the unit with one of equal or greater value.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending vessels, lids, cups, blades, blender bases, removable pots, racks, pans, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.

2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by **TurboTronic®**. These defects include damages caused in the process of shipping, altering, or repairing the **TurboTronic®** product (or any of its parts) when the repair is performed by a repair person not authorized by **TurboTronic®**.
6. Products purchased, used, or operated outside Europe.

Illustrations may differ from actual product.

We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

TurboTronic® and **Z-Line®** are registered trademarks of **Z-GLOBAL B.V.B.A®**.

PRINTED IN PRC