


Quick Installation Guide

L2/L3 Superic Industrial Switch

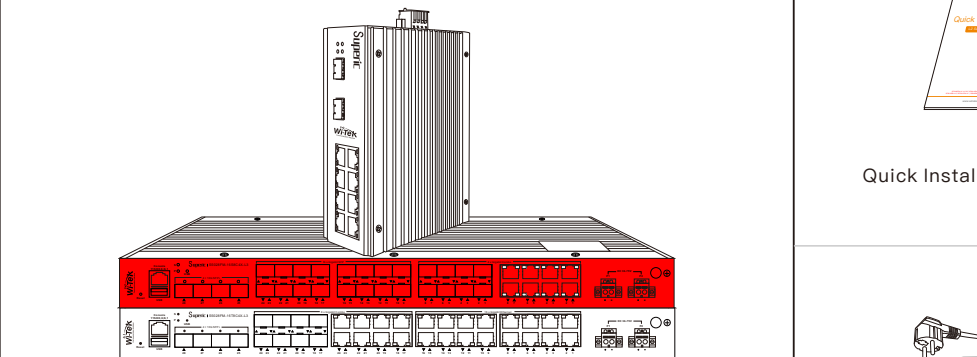


SP3006FM-L2 V1/V2 | SP3010FM-L2 V1/V2 | SP3012FM-L2 V1/V2 |
SP3018FM-L2 | SP5012FM-L2 | S5028FM-16T8C4X-L3 | S5028FM-16S8C4X-L3


www.wireless-tek.com

1. Packing Content


Switch x 1

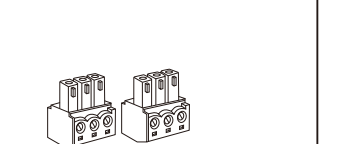


Quick Installation Guide x 1

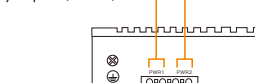

Phoenix Terminal x 2
(For S5028FM-16T8C4X-L3 S5028FM-16S8C4X-L3)

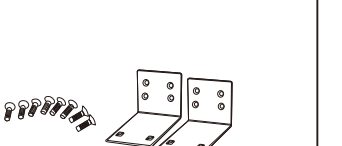

Power Cord x 1
(For S5028FM-16T8C4X-L3 S5028FM-16S8C4X-L3)

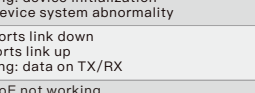


Mounting Accessories
(For S5028FM-16T8C4X-L3 S5028FM-16S8C4X-L3)

2. Appearance Overview


SP3006FM-L2 V1/SP3006FM-L2 V2

• Front Panel

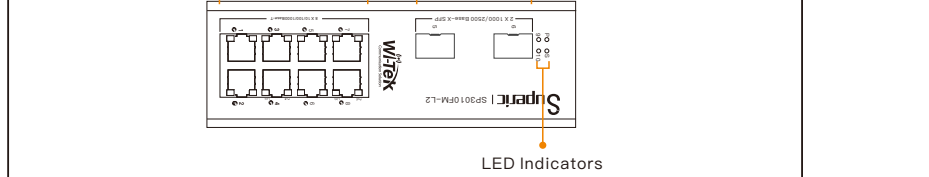

LED Indicators
For Hardware V1: Port 1-4 support 802.3af/at PoE output
For Hardware V2: Port 1-2 support 802.3af/at/bt PoE output,
Port 3-4 support 802.3af/at PoE output

• Side Panel

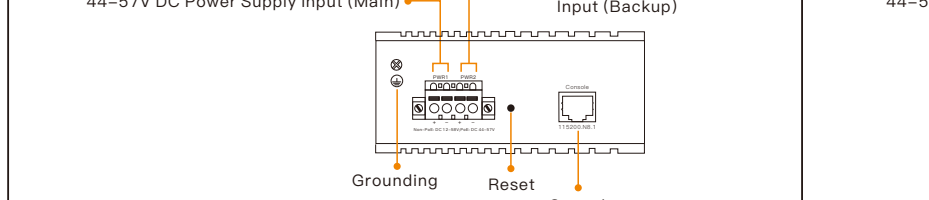


• LED indicator and button

LED Indicators&Button	Description
P	Off: the device is power off or failed Green On: the device power on is normal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
Link	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE	Off: PoE not working On: PoE working
5, 6 (Fiber ports indicators)	Off: ports link down Green On: ports link up Green Blinking: data on TX/RX
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting


SP3012FM-L2 V1/SP3012FM-L2 V2

• Front Panel

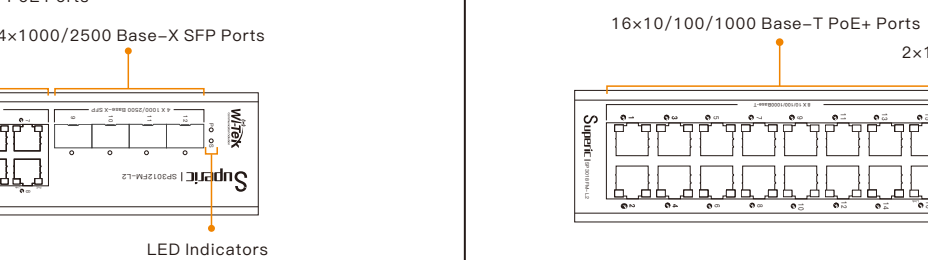

LED Indicators
For Hardware V1: Port 1-8 support 802.3af/at PoE output
For Hardware V2: Port 1-2 support 802.3af/at/bt PoE output,
Port 3-8 support 802.3af/at PoE output

• Side Panel

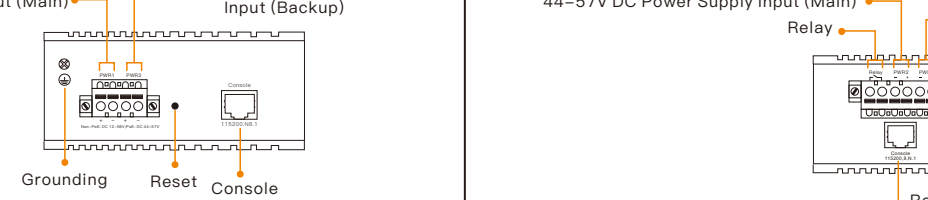


• LED indicator and button

LED Indicators&Button	Description
P	Off: the device is power off or failed Green On: the device power on is normal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
Link	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE	Off: PoE not working On: PoE working
9, 10 (Fiber ports indicators)	Off: ports link down Green On: ports link up Green Blinking: data on TX/RX
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting


SP3018FM-L2

• Front Panel

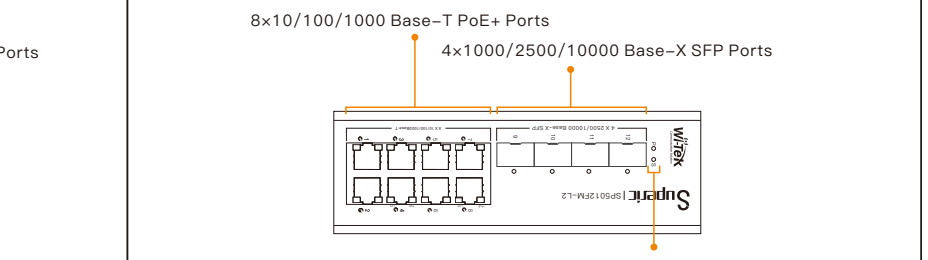

LED Indicators

• Side Panel

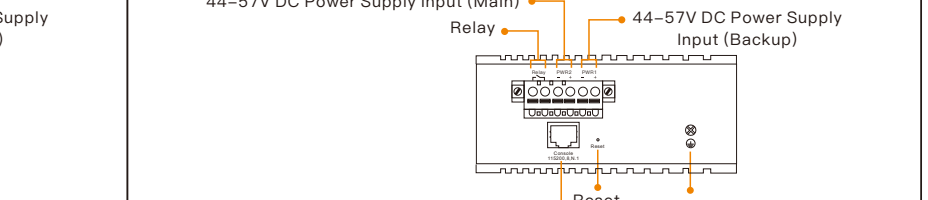


• LED indicator and button

LED Indicators&Button	Description
P	Off: the device is power off or failed Green On: the device power on is normal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
Link	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE	Off: PoE not working On: PoE working
17, 18 (Fiber ports indicators)	Off: ports link down Green On: ports link up Green Blinking: data on TX/RX
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting


SP5012FM-L2

• Front Panel

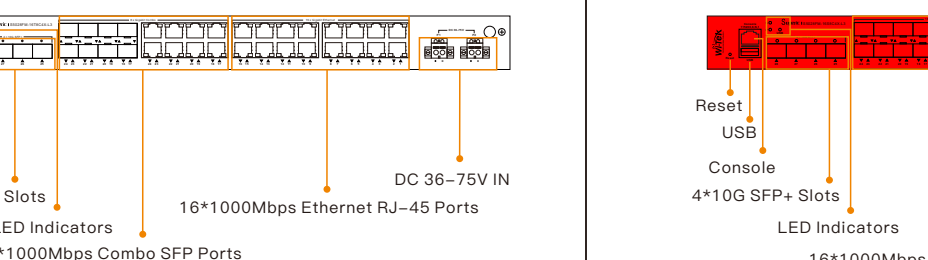

LED Indicators

• Side Panel

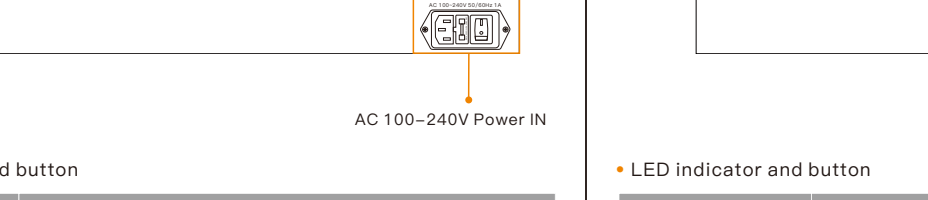


• LED indicator and button

LED Indicators&Button	Description
P	Off: the device is power off or failed Green On: the device power on is normal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
Link	Off: ports link down On: ports link up Blinking: data on TX/RX
PoE	Off: PoE not working On: PoE working
9-12 (Fiber ports indicators)	Off: ports link down Green On: ports link up Green Blinking: data on TX/RX
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting


S5028FM-16T8C4X-L3

• Front Panel

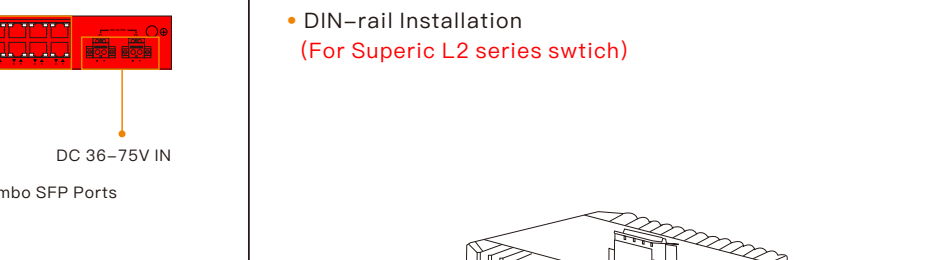

LED Indicators
8*1000Mbps Combo SFP Ports

• Back Panel

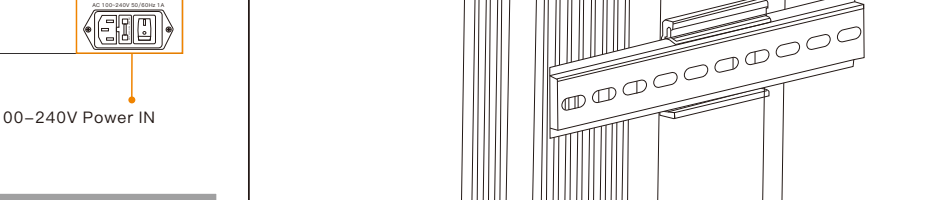


• LED indicator and button

LED Indicator&Button	Description
P	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
USB	On: USB flash drive is detected by device Off: USB flash drive not insert or not detected by device
Copper ports indicators	Green on: Port connected Blinking: data on TX/RX Off: Port disconnected
Copper speed indicators	Yellow on: The port is connected with 1000Mbps speed Off: The port is connected with 10/100Mbps speed
Fiber Indicators	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting


S5028FM-16S8C4X-L3

• Front Panel

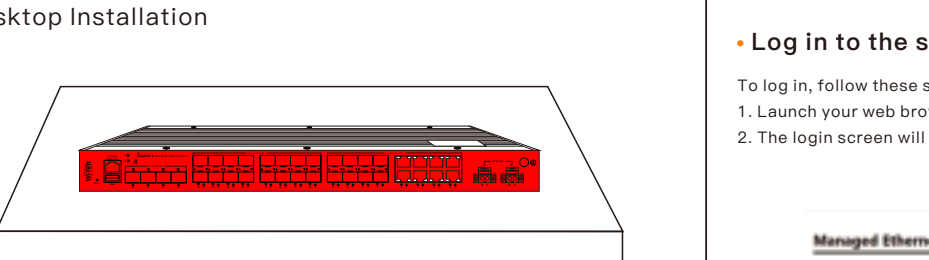

LED Indicators
16*1000Mbps SFP Ports

• Back Panel

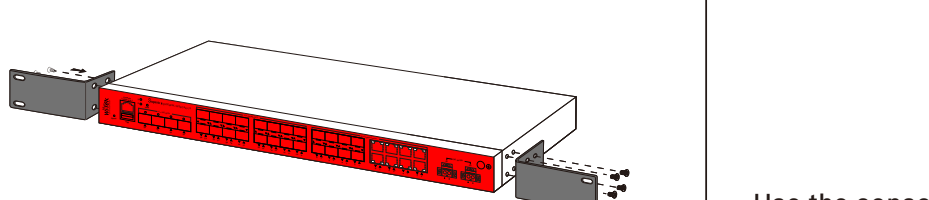


• LED indicator and button

LED Indicator&Button	Description
P	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
USB	On: USB flash drive is detected by device Off: USB flash drive not insert or not detected by device
Copper ports indicators	Green on: Port connected Blinking: data on TX/RX Off: Port disconnected
Copper speed indicators	Yellow on: The port is connected with 1000Mbps speed Off: The port is connected with 10/100Mbps speed
Fiber Indicators	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting


S5028FM-16S8C4X-L3

• Front Panel

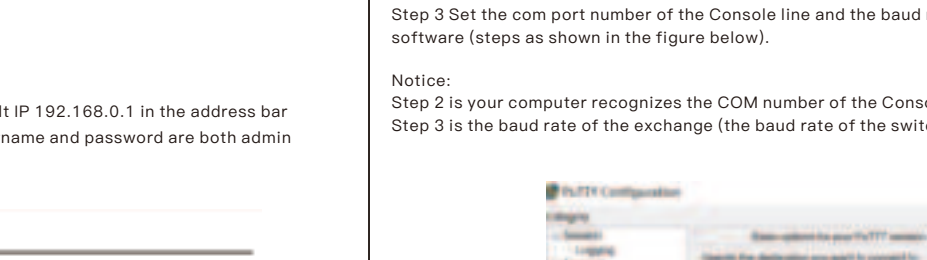

LED Indicators
16*1000Mbps SFP Ports

• Back Panel

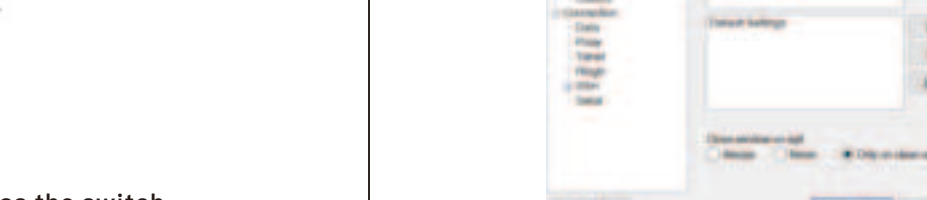

• LED indicator and button



LED Indicator&Button	Description
P	On: The switch is powered on Off: The switch is powered off or power supply is abnormal
S	On: device on normal operation Blinking: device initialization Off: Device system abnormality
USB	On: USB flash drive is detected by device Off: USB flash drive not insert or not detected by device
Copper ports indicators	Green on: Port connected Blinking: data on TX/RX Off: Port disconnected
Copper speed indicators	Yellow on: The port is connected with 1000Mbps speed Off: The port is connected with 10/100Mbps speed
Fiber Indicators	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset Button	By pressing the button over 5s, the switch will be restored to the original factory default setting

3. Installation

• Desktop Installation



• Rack-Mount Installation

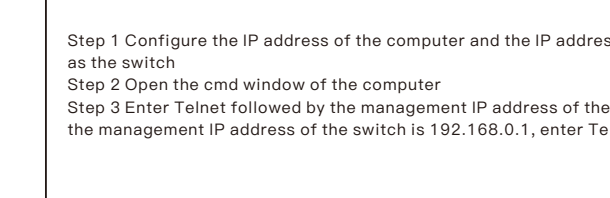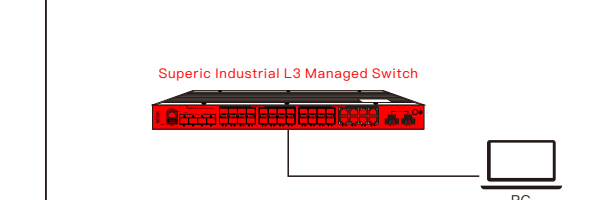

4. Management

• Log in to the switch locally

To log in, follow these steps:
1. Launch your web browser, you type the default IP 192.168.0.1 in the address bar
2. The login screen will appear. The default username and password are both admin



• Use Telnet to log in to the CLI mode of the switch



Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

• If the product defects within three months after purchase, we will provide you with a new product of the same model.
• If the product defects within the three-year warranty period, we will provide professional maintenance service.
• Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
• Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Wireless-Tek Technology Limited
Address: Building 3, Units 1801-1807, 1812,
Huagang Era Plaza, Tangwei Community,
Fuhai Street, Bao'an District, Shenzhen City,
Guangdong Province, China.
Website: www.wireless-tek.com
Tel: 86-0755-32811290
Email: sales@wireless-tek.com
Technical Support: tech@wireless-tek.com