



LET'S GET  
STARTED



# Smart Home Controller

EN | Instruction Manual





## TABLE OF CONTENTS

1.0 PRODUCT DESCRIPTION .....	4
1.1 Intended use .....	4
2.0 IN THE BOX.....	5
3.0 WARNING NOTICES.....	6
3.1 Explanation of symbols .....	6
3.2 Safety instructions .....	6
4.0 INDICATORS AND CONTROLS .....	7
4.1 Product overview .....	7
5.0 INSTALLATION AND SETUP.....	8
5.1 Installing the Smart Home Controller .....	8
5.2 Downloading the app .....	9
5.3 Configuring the Smart Home Controller .....	10
5.4 Adding further devices .....	10
5.5 Adding more smartphones/tablets .....	10
6.0 FIXING .....	11
6.1 Wall mounting .....	11
7.0 MAINTENANCE AND CARE .....	12
8.0 PRODUCT DETAILS .....	13
8.1 Technical data .....	13
8.2 Declaration of conformity .....	14
8.3 Faults in radio operation .....	14
8.4 Open-Source-Software .....	14
8.5 Environmental protection and disposal .....	14
9.0 FURTHER INFORMATION .....	15

Dear customer,

Congratulations on purchasing your Bosch Smart Home Controller. It is the basic component for making your home smarter.

With the Bosch Smart Home Controller, you will be able to network all of your Bosch Smart Home products digitally. And, thanks to the Bosch Smart Home app, you will be able to control them conveniently from anywhere. For a safe life, comfortable heating and an optimal living environment.

We hope you enjoy your new product.

Yours, the Bosch Smart Home Team


## 1.0 PRODUCT DESCRIPTION

As the heart of the system, the Smart Home Controller bundles all information and coordinates the communication between the Bosch Smart Home components. And, thanks to the Bosch Smart Home app, you will be able to control them conveniently from anywhere. Your Smart Home Controller is updated automatically so that it remains up to date at all times. All system data is saved locally in the device, thus ensuring that your data remains secure.

 
### 1.1 Intended use

The product may only be used indoors with Bosch Smart Home original components and recommended partner products.


- ▶ Follow the safety instructions and the directions in this manual and the Bosch Smart Home app to ensure that the product is set up correctly.
- ▶ Please note the details in the Technical Data section (see p. 13).
- ▶ Avoid dust, moisture, vibrations, constant sun or other sources of heat radiation, cold and mechanical stress.

 Do not modify the product in any way. Any other use is considered unintended use. We will not assume liability for any resulting damage.

## 2.0 IN THE BOX

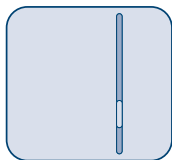


Controller

 

Wall mount



 2 dowels,  
2 screws

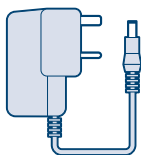

Power cable



Network cable



To operate the Smart Home Controller and, therefore, network all Bosch Smart Home products, you will need the app, an internet connection and a standard WLAN router with a free LAN port.

## 3.0 WARNING NOTICES

### 3.1 Explanation of symbols



**Warning.**  
This alerts you to danger.



**Info.**  
Indicates important information.

### 3.2 Safety instructions



**Fire hazard due to electric current!**  
If the electrical connection is not used as intended, there is a risk of fire. Only use the product with the original power cable.



The device may only be connected to an easily accessible mains socket. In case of danger, the mains plug must be pulled out of the socket.



The device is not a toy! Do not allow children to play with it. Do not leave packaging material lying around carelessly. Plastic foils and small parts can become dangerous toys for children.



 
Due to external circumstances such as a break in radio communication with the Smart Home Controller, it cannot always be guaranteed during remote or automated appliance control that commands are actually executed or the correct appliance status is displayed in the app and on other Smart Home display devices (e.g. a Twist). This may result in damage to property and/or injury.

In this case:


- Please ensure as far as possible that no one is at risk during remote operation or automated control.
- Please exercise particular caution when setting up or adjusting a remote or automated control and regularly check the desired operation mode.

## 4.0 INDICATORS AND CONTROLS

### 4.1 Product overview

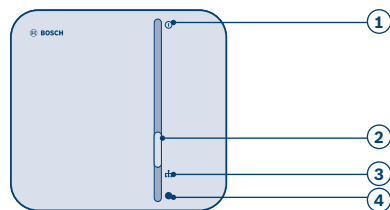

Front side

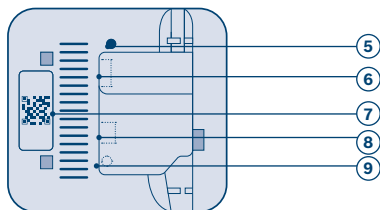 


Rear side

Item	Part	Explanation
1	Power LED	Operating status indicator (on/off)
2	Function button	For making settings
3	Network LED	Network connection indicator
4	Cloud LED	Internet connection indicator
5	System button	For resetting the device
6	USB port	Port for USB connection
7	QR code	Scan for device identification
8	Network connection	Connection to a LAN network
9	Power connection	Connection to the power supply

## 5.0 INSTALLATION AND SETUP
 
### 5.1 Installing the Smart Home Controller

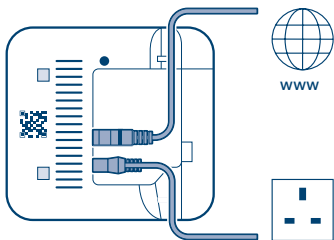

Insert the network cable into the Smart Home Controller and into a free LAN port on your WLAN router. Now use the power cable to connect the controller to the plug socket. After the device starts, the LEDs show the initialization status using flash codes (see table).

**i** When you connect the Smart Home Controller to the internet for the first time, it will automatically search for software updates. If an update is required, it will be downloaded automatically by the Smart Home Controller and installed. This process may take up to 30 minutes. The Smart Home Controller can be commissioned during this period.

Blink codes during initialization and normal operation	
Status	LED state
Start	All three LEDs are lit up red for a few seconds
Start-up	Power LED flashes white: The device is starting up
	Power LED is lit up white: The device has started up
	Power LED flashes red: Start-up failed
Establish network connection	Network LED flashes white: Device is searching for a network connection
	Network LED lit up white: Network connection has been established
	Network LED flashes red: Network connection failed
Establish connection to Bosch Cloud	Cloud LED flashes white: Update is downloaded from the Bosch Cloud <sup>1)</sup>
	Cloud LED is lit up white: Remote access via the Bosch cloud is established
	Cloud LED flashes red: Bosch cloud connection failed

<sup>1)</sup> After initialization, the cloud LED flashes when data is being exchanged via the tunnel connection.



## 5.2 Downloading the app

 
- i** Before you start  
Make sure that you download the Bosch Smart Home app. You will need it for the entire installation, configuration and control.

For Android devices	For Apple iOS devices
<ul style="list-style-type: none"><li>▶ Load up Google Play</li><li>▶ Search for “Bosch Smart Home”</li><li>▶ Select the “Bosch Smart Home app”</li><li>▶ Tap “Install”</li></ul>	<ul style="list-style-type: none"><li>▶ Load up the App Store</li><li>▶ Search for “Bosch Smart Home”</li><li>▶ Select the “Bosch Smart Home app”</li><li>▶ Tap “Get”</li></ul>


- i** **WLAN access required**  
To set up the controller, you must have the Bosch Smart Home app on your mobile devices and be within range of the WLAN network router.

- ▶** For assistance with installing your Bosch Smart Home Controller, you may also refer to the explanatory video on our website: [www.bosch-smarthome.com/installation](http://www.bosch-smarthome.com/installation)


### 5.3 Configuring the Smart Home Controller

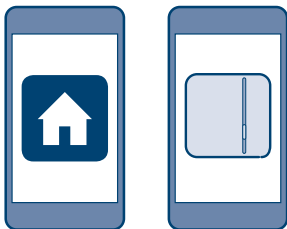

 The Smart Home Controller must be the first device in your system that you connect with the app. Afterwards, you can connect additional Bosch Smart Home products and expand your system. Start the app and wait until it has detected the Smart Home Controller.

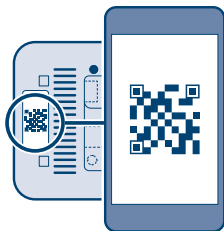

The app will prompt you to scan the QR code on the product. You will find the QR code on the rear side of the Smart Home Controller.

 From this point, the app guides you through the installation process.

### 5.4 Adding further devices

 
Once the Smart Home Controller has been completely installed, you can add further products to your Bosch Smart Home system through the app.

To do this, follow the instruction manual for the relevant device.

### 5.5 Adding more smartphones/tablets

If you would like to use the Bosch Smart Home System on other mobile devices, the app must also be installed on these mobile devices. Then open the app and follow the instructions.

## 6.0 FIXING

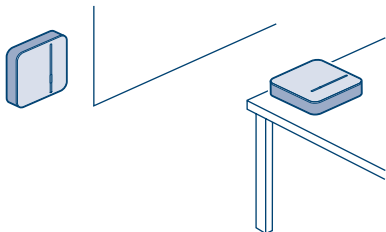


The Smart Home Controller can be used lying flat or mounted on the wall.

### 6.1 Wall mounting



 When choosing a mounting location and when drilling, pay attention to potential electrical lines and/or supply lines that could be behind the wall.


To mount your Smart Home Controller on the wall, use the wall mount provided. The dowels and screws required are also included in the box.

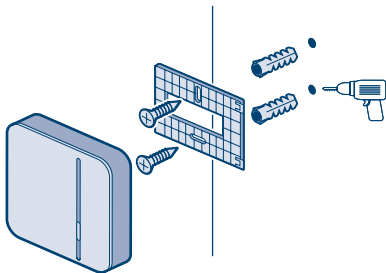

- ▶ Hold the wall mount at the required location on your wall, and mark the positions for the drill holes.
- ▶ Drill the holes and place the plugs in the holes.
- ▶ Fit the wall mount and screw it tight.
- ▶ Now attach the Smart Home Controller to the wall mount so that you hear it click in place.

## 7.0 MAINTENANCE AND CARE

The product is maintenance-free. Repairs should only be performed by qualified persons. Clean the product with a soft, clean, dry, and lint-free cloth. Do not use cleaning agents containing solvents.

 Incorrect handling (see notes on intended use) or non-observance of hazard warnings may compromise the protection afforded by the device.

## 8.0 PRODUCT DETAILS

### 8.1 Technical data

Device type name	Home Controller AA
Article number	8-750-000-163
Power input	Typical: 400 mA Max.: 1.2 A
Receiver category	SRD category 2
Radio frequency	868.3 MHz/869.525 MHz/2.4 GHz
Max. transmission power	10 mW
Radio range in free-field conditions	> 100 m
Duty Cycle	At 868.3 MHz < 1% per h At 869.525 MHz < 10% per h
Connections	Power supply, USB, LAN (Ethernet, RJ45)
Protection class	IP30
Ambient temperature	+5 °C to +40 °C
Humidity	15% to 85%
Software class	Class A
Dimensions (W × H × D)	135 mm x 120 mm x 35 mm
Weight	190 g

## 8.2 Declaration of conformity

Hereby, Robert Bosch Smart Home GmbH declares that the radio equipment type Bosch Smart Home Controller is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:  
[www.bosch-smarthome.com/conformity](http://www.bosch-smarthome.com/conformity)



## 8.3 Faults in radio operation

Faults in radio operation (e.g. due to electric motors or defective electrical devices) cannot be ruled out. The radio range inside buildings may differ greatly from the radio range in free-field conditions. Apart from the transmission power and the receiver characteristics, environmental influences such as humidity and structural characteristics may also influence radio operation.

## 8.4 Open-Source-Software

Bosch Smart Home relies on open-source software in order to control the products. You have two means of obtaining the comprehensive license information:

- Directly from the Smart Home Controller: Insert an empty USB stick in the port on the rear side of the device. The licence information, as well as other product information, will be saved to the stick automatically.
- Online at [www.bosch-smarthome.com/open-source-software](http://www.bosch-smarthome.com/open-source-software)

## 8.5 Environmental protection and disposal

Electrical and electronic equipment that is no longer usable must be separated from other waste and recycled in an environmentally friendly manner (Waste Electrical and Electronic Equipment Directive). To dispose of electrical and electronic equipment, use your country-specific return and collection systems.



## 9.0 FURTHER INFORMATION

You can find more detailed information on operating and maintaining the Smart Home Controller in the online FAQ at

[www.bosch-smarthome.com/faq](http://www.bosch-smarthome.com/faq)

You will also find all contact details on the rear side of this document.



### Sale and transfer

Before you transfer or sell your device, delete your personal information. To do this, reset the device to its factory settings (see online FAQ).

 Robert Bosch Smart Home GmbH  
Schockenriedstraße 17  
70565 Stuttgart, Germany

 0808 1011 151\* (United Kingdom) and  
1800 200 724\* (Ireland)

\* Freephone service

Mon – Fri 7 am – 8 pm  
Sat / Sun 8 am – 6 pm

 [service@bosch-smarthome.com](mailto:service@bosch-smarthome.com)

05/2020 8-750-001-357 V001