

## ROCKSTEADY® STADIUM SUBWOOFER 1 YEAR LIMITED WARRANTY

Rocksteady Corp. ("Rocksteady®") warrants this Product (including any accessories) against manufacturer defects in material or workmanship as follows:

1. For a period of one year from the date of original purchase if this Product is determined to be defective, Rocksteady® will repair or replace the Product, at its option, at no charge, subject to shipping and handling charges.

2. To obtain warranty support contact Support@RocksteadyAudio.com. As part of the warranty service you must take the Product, or deliver the Product freight prepaid, in either its original packaging or affording an equal degree of protection, to any factory Rocksteady® Service facility or to a Fulfillment Center. See below for additional information.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, water damage, shock/drop damage, misuse, abuse, negligence, commercial use, or modification of any part of the Product, including the antenna. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, attempted repair by anyone other than a facility authorized by Rocksteady® to service the product.

This warranty does not cover Products sold AS IS or WITH ALL FAULTS, or consumables (such as batteries). Lithium Ion batteries will degrade over time, meaning their storage capacity decreases with use. Therefore, the battery performance of Rocksteady® Stadium products is not covered in this warranty. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the unit is within the Warranty period must be presented to obtain warranty service. This warranty is invalid if the factory applied serial number has been altered or removed from the Product. This warranty is valid only in the United States. For warranty supported outside the United States [USA] please contact Support@RocksteadyAudio.com, shipping and/or other expenses may be incurred.

REPAID OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ROCKSTEADY® SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. NOTE: WHILE IN STADIUM MODE, YOUR SIGNAL IS BEING BROADCAST AND CAN BE HEARD USING ANY COMPATIBLE SPEAKER WITHIN RANGE. THIS SPEAKER HAS NO MICROPHONE, BUT YOUR TRANSMITTING SOUND WILL NOT BE PRIVATE.

Contact Us at Support@RocksteadyAudio.com

## FCC REGULATORY COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**Supplier's Declaration of Conformity:** 47 CFR § 2.1077 Compliance Information • Unique Identifier Trade Name: Rocksteady, Model No. RCKSTD-SWFR-020

**Responsible Party:** U.S. Contact Information: Rocksteady Corp. • 5405 Alton Pkwy, Suite 5A-201, Irvine, CA 92604 USA • 1-949-215-9224



FCC ID: 2AVIJRCKSTD-SW



Rocksteady®  
**STADIUM**  
SUBWOOFER



## SET-UP VIDEOS

 
Visit our YouTube Page  
for Tips & Tricks!

### INCLUDED WITH YOUR ROCKSTEADY® STADIUM SUBWOOFER:


1 ROCKSTEADY® STADIUM SUBWOOFER • CARRYING STRAP • 1 HIGH-SPEED CHARGING CABLE  
1 AUXILIARY CABLE • 1 QUICK CHARGER

## VISUAL DETAILS

Top View

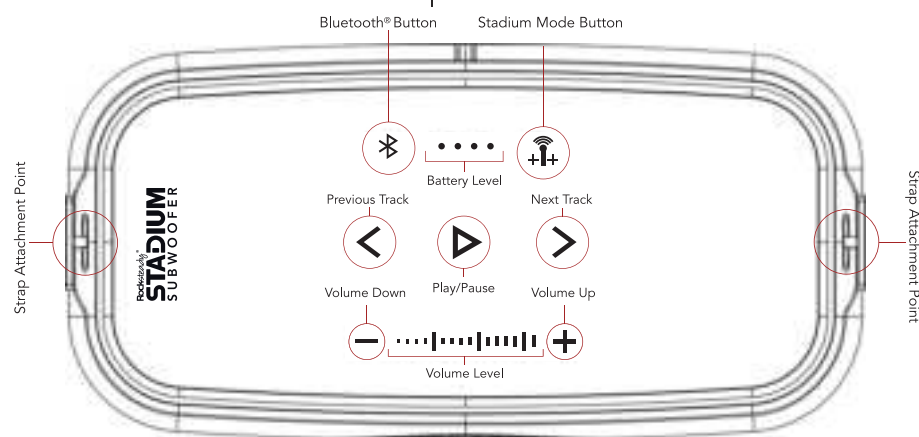

Rear Panel

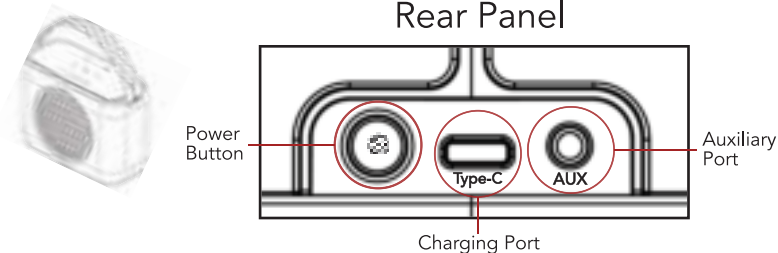 


## TECHNICAL SPECIFICATIONS

### GENERAL

Bass Driver	130mm
Bass Radiator	170mm x 115mm
Total Output Power	30W
Maximum Sound Pressure Level	94dB SPL @ 1m
Frequency Response	30HZ - 350KHZ
Signal to Noise Ratio	≥ 86dB
Battery Type	Lithium-Ion Polymer (3.7V, 15000MAH)
Main Input Voltage	5V/2.4A DC
Aux	3.5mm stereo jack
Dimesions	220mm x 162mm x 110mm
Weight	2.15 kg

### BLUETOOTH®

 Version	5.0
Transmitter Frequency Range	2402-2480MHz
Transmitter Power	≤10dBm
Transmitter Modulation	GFSK, π/4 DQPSK, 8DPSK

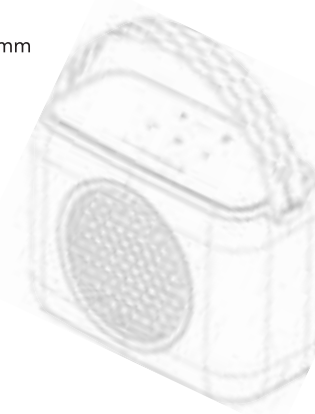

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Rocksteady® is under license. Other trademarks and trade names are those of their respective owners.

Rocksteady®  
**STADIUM**

Contact us at [Support@RocksteadyAudio.com](mailto:Support@RocksteadyAudio.com)

## BASIC OPERATIONS



### ON/OFF

Hold power button for 1 second. You will hear the Rocksteady® Tone.



### VIEWING BATTERY LEVEL

Tap the volume (+/-) at any time to see the battery level (displayed in 25% increments).



### BLUETOOTH® PAIRING

The subwoofer is in pairing mode when the Bluetooth® button is blinking. Tap the Bluetooth® button to enter pairing mode at any time. On your device, select "Rocksteady-Sub-[followed by four digits]" to connect. To disconnect from a device, tap the Bluetooth® button. Hold the Bluetooth® button for 3 seconds to forget all previously paired devices. Note: The auxiliary cable must be removed for Bluetooth® pairing.



### AUXILIARY INPUT

Insert a 3.5mm cable to switch to the auxiliary input mode [remove the cable to revert to Bluetooth®]



 
### VOLUME

Tap or hold the + or - to raise or lower the volume.



### CONNECTING TO SMART DEVICES

Connect a single Host Speaker or Subwoofer to the device, then add satellite speakers or subwoofers. Adjust Audio/Video sync settings on the source device as needed.

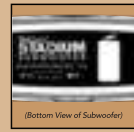

### TIP: 4-DIGIT CODE

It is helpful to write each speaker or subwoofer's 4-digit Bluetooth® code on the bottom if you have more than one.

## STADIUM MODE

1



### DESIGNATE THE HOST

Tap the Stadium Mode button on a speaker\* or subwoofer that is connected to a source device (Bluetooth® or Aux).  
*For best results, use Subwoofer as your host device.*

 
2

### TURN ON SATELLITE SPEAKERS\* & SUBWOOFERS

3

### CONNECT HOST TO SATELLITES

Tap Stadium Mode button on additional speakers or subwoofers to designate them as Satellites.

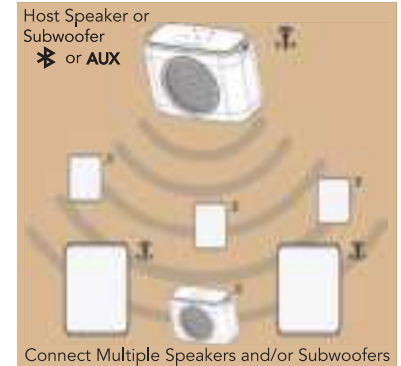

**IMPORTANT:** Satellite Speakers connect wirelessly to the Host Speaker or Subwoofer. (The 'Host' is the only Speaker or Subwoofer connected to your source device)

## ROCKSTEADY® STADIUM SPEAKERS

\*Speakers sold separately

 


The Rocksteady® Stadium Subwoofer wirelessly connects with your Rocksteady® Stadium Speakers to create fully immersive and rich soundscapes. Connect multiple Rocksteady® Stadium Speaker and Subwoofers to enhance and to expand your listening experience.

Rocksteady®  
**STADIUM**

Contact us at [Support@RocksteadyAudio.com](mailto:Support@RocksteadyAudio.com)

## FEATURES / ADVANCED

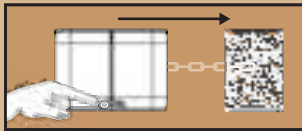

### HOW TO TURN OFF ALL SPEAKERS AT ONCE

 
Turning-Off the Host (Broadcasting) Speaker Will Turn-Off All Connected Satellite Speakers as well as the Subwoofer.



### RESET ALL CONNECTIONS

Tap and Hold the Bluetooth® button for 3 seconds to reset\* the speaker or subwoofer to factory settings.

\*Disable Stadium Mode first by tapping the Stadium button if it is illuminated or flashing.

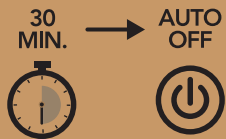

### BATTERY SAVER MODE

In Bluetooth® Mode, the Stadium Subwoofer and other connected Speakers Will Turn-Off if there is no Connection or Sound Signal after 30 minutes.

*Optimal battery level for storage is between 50% and 75%.*



### IN THE UNLIKELY EVENT THE SUBWOOFER FREEZES

Press and Hold the Power Button for 8-10 Seconds.



### SKIPPING SPEAKERS

In the event your music is skipping, alternate to a different host speaker to resolve the issue.

## SUBWOOFER PLACEMENT



### SUBWOOFER PLACEMENT

For added bass, connect a Rocksteady® Stadium Subwoofer anywhere within the array.

### SUBWOOFER AS HOST DEVICE

Assigning the Rocksteady® Stadium Subwoofer as the host will provide the best performance.

### IMMERSIVE SOUNDS

Connect 2 or more Speakers\* and 1 Subwoofer to create a full-sounding and immersive audioscape.

\*Sold separately

## SPEAKER\* PLACEMENT

### EXPERIMENT WITH SOUND

Adjust speaker placement and audio channel selections to create a custom sound experience.

### SPEAKER PLACEMENT

For optimal connectivity, place the Host Speaker or Subwoofer in the middle of the array.

### MULTIPLE ROOM SAMPLE



### 4 SPEAKERS: FULL IMMERSION



### 4 SPEAKERS: DIRECTIONAL SOUND



Rocksteady®  
**STADIUM**

Contact us at [Support@RocksteadyAudio.com](mailto:Support@RocksteadyAudio.com)