



Wireless Earbuds

PODS141*pro*



User Manual

www.zebronics.com



Dear Customer,

Thank you for purchasing **ZEB-PODS 141 PRO** (Wireless Earbuds). Please read this user manual carefully before operation & save this user manual for further reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in voiding the product's Warranty.*
- *Please charge the product with DC 5V power adapter*

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Caution:

Listening at high volumes can cause hearing impairment. Please limit your usage time at high volumes.

Features

- BT v5.4
- Active Noise Cancellation (ANC)
- Gaming mode (Low latency)
- Flash connect

- Up to 27h* Backup
- Dynamic 10mm Drivers
- Voice assistant
- Touch control
- Type-C charging
- Call function
- Built-In rechargeable battery

Specifications


Model	: ZEB-PODS 412
BT Version	: 5.4
Supported BT Profile	: HSP/HSP/A2DP/AVRCP
Drive Size	: 10mm
Speaker Impedance	: 32Ω
Playback Time	: 6.75h*
Charging Time	
Earbuds	: 50 Mins
Case	: 2 h
Talk Time	: 3 h*
Standby Time	: 150 h
Case Dimensions	: 5.5 x 2.8 x 4.5 cm (W x D x H)
Net Weight	: 38g
Country of Origin	: PRC

* at 50% Volume(ANC OFF)

Package Contents

Earbuds	: 2 U
Charging case	: 1 U
Ear tips	: 4 U
Charging cable	: 1 U
QR code guide	: 1 U

Product Representation

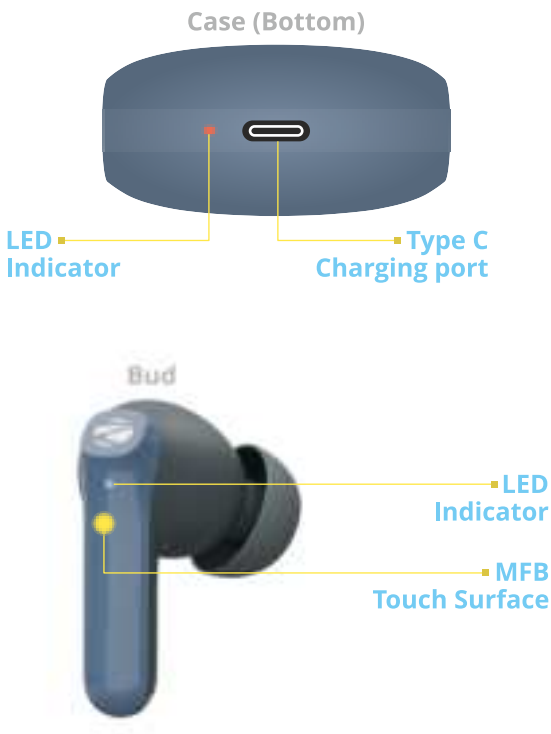

Usage Instruction:

BT Pairing Instructions:

Step 1: The ear buds enter pairing mode as soon as the buds taken out from the case.

Step 2: Both the ear buds will pair with each other within 5 seconds right after both the buds taken out from the case.

Step 3: Now open the phone's BT settings and pair the ear buds by tapping on the "**ZEB-PODS 141 PRO**" in the phone's BT list.

Ear Buds Functions

- Long Press the **MFB** for 3 seconds on the left ear bud to activate the voice assistance of the BT connected device, if your device is compatible.
- To power ON/OFF Long press both the left & right Ear bud at the same time.

During Music Playback

- Single tap the **MFB** once on either side of the ear bud to Play/Pause the music.
- Double tap **MFB** on the Left/Right side to Previous/Next track.
- Four tap the **MFB** button on the left/right side of the earbud to decrease/increase volume.

During Calls

While receiving call

- Single tap the **MFB** on either side of the earbuds to Answer/End the call.
- Press & Hold the **MFB** on either of the earbuds to reject the call.

Activating Voice Assistant

Press and hold the MFB button for 2-3 seconds on the left side to wake up the Voice Assistant from your smartphone.

Activating Gaming Mode

- Triple tap the MFB on the left side to trigger Gaming Mode.
- Triple tap again on the left side to revert to Music Mode.

ANC Mode (Active Noise Cancellation)

Press and hold the right earbud for 3 seconds to switch between mode:

- MODE 1 ►► Transparency Mode
- MODE 2 ►► ANC ON
- MODE 3 ►► ANC OFF

EQ Modes

- By default, the EQ mode will be Equalizer Mode. Triple tap the right earbud to change it into Sound Monster mode.
- Triple tap once more to switch back to default EQ mode.

Charging Instructions

Charging the Case

Connect the Type-C cable to the charging port of the charging case and connect the other end of the cable to the DC 5V adapter.

The charging case Red LED blinks and once it's fully charged constant white LED glows

Charging the Earbuds

Put the earbuds in the respective charging slot of the charging case. Once placed in the charging case, the earbuds will charge automatically.

