 


GOMETRS

Instruction Manua

Electric Portable Bidet Sprayer

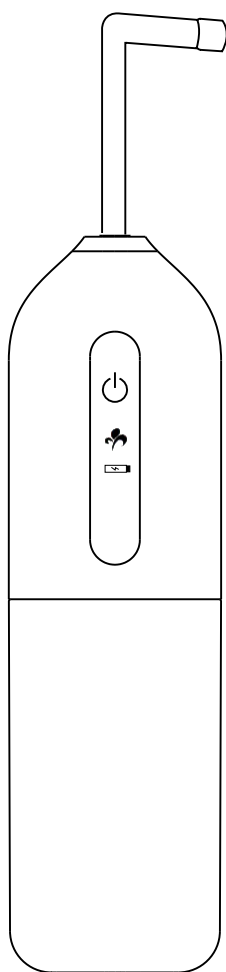

In order to avoid harm caused by misuse, please read the instruction manual carefully before using this product. And use this product strictly in accordance with the purpose stated in the instruction manual.

Product Purpose

- A. The strong pulsating water flow can completely clean up the bacteria and residues in the buttocks and private parts.
- B. The pulsating water flow can clean the buttocks and the depths of the ditch without obstacles, improving the health of the buttocks.
- C. Quick cleaning: Whether at home or traveling, it is the most effective way to quickly restore cleanliness.
- D. It helps to cultivate healthy daily cleaning habits, so that the body can always keep fresh and clean.

Attention

Danger

- A. Please read this manual carefully before use to avoid injury or damage caused by improper operation.
- B. Do not disassemble the product without authorization to avoid product damage or electric shock accidents.
- C. Do not use water above 40 degrees Celsius to wash in the water tank to avoid scalding.
- D. If the product accidentally falls into the water while charging, please unplug the power plug first and then take out the product, and wait for the water stains to dry completely recharge later.
- E. If the power cord or plug is damaged, please replace the damaged parts before use.
- F. Avoid placing the product in a high temperature place, and never throw the product into fire, the battery may explode.


Warning

- A. Do not use the product for purposes other than cleaning.
- B. Do not use the nozzle to press the buttocks or private parts hard to avoid damage.
- C. Do not immerse the product in water to avoid product damage.
- D. Do not use the product in high temperature and humid environment.
- E. Please do not continue to use the charging power cord if it is damaged.

Caution

- A. Do not use this product without installing the nozzle.
- B. Some functional cleaning liquids may be corrosive to a certain extent. Please confirm the composition of the cleaning liquid before use.
Do not use it indiscriminately.
- C. If children, the elderly or those who cannot operate this product are going to use it, please ensure that someone supervises and guides the user.
- D. Please keep it out of the reach of children and babies, and it cannot be used as a toy.
- E. Patients with hip disease or who have undergone surgery in the past 2 months, please consult a doctor first, and use it after confirmation.
- F. Do not use the strong gear to continuously wash the damaged parts of the buttocks and private parts, or the bleeding parts of the buttocks to prevent accidents.
- G. Please adjust the flushing intensity of the pulse water flow in real time according to your own situation.
- H. Do not immerse the whole machine in water, which may cause product failure or complete damage.
- I. If you do not use this product for a long time, please make sure that the water tank is dry and anhydrous, and then store it to prevent bacteria from growing.


Product introduction

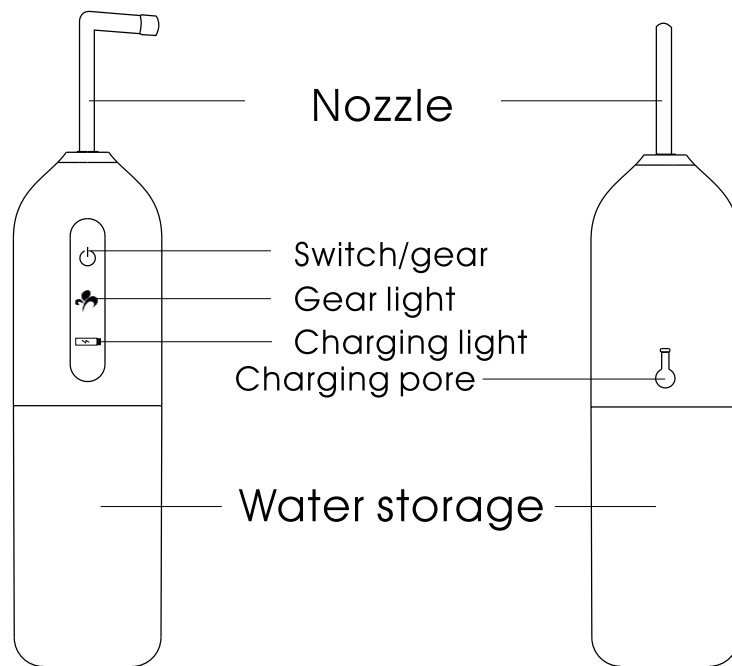


Product parameters			
Product name	Portable nursing irrigator	Product model	GP-11
Charging volt	DC 5V	Nominal voltage	DC3.7V
Rated power	3.5W	Water storage	230ml
Net weight	260g	Product size	216*65*65mm
Executive standard	GB 4706.1-2005 GB4706.59-2008		

Operation method:


- Press the power button for about 2 seconds to turn it on, the default mode is weak, and the corresponding indicator light is on.
- Short press to switch modes, the mode switches to the strong gear, and the indicator light also switches to the corresponding indicator light.
- Short press to switch the mode to the pulse gear, and at the same time, the indicator light is also switched to the corresponding indicator light, which cycles in turn.
- Long press for about 2 seconds to power off.
- The flusher will automatically shut down after working for about 2 minutes.
- When the battery of the washer is charging, the three indicator lights flash in sequence, and when the battery is fully charged, the three indicator lights are always on.

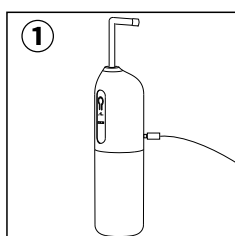


① Please fully charge the device before using it for the first time

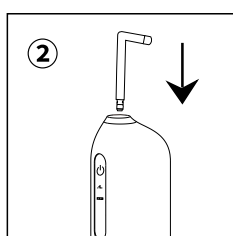


② The vertical machine completely presses the nozzle into the body to avoid water leakage during use

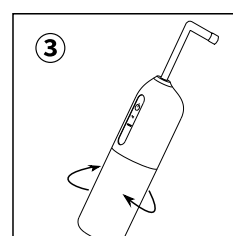


③ Rotate the water tank in one direction to remove it from the fuselage

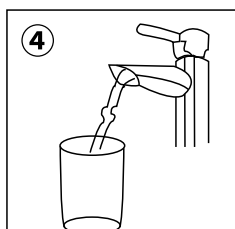

④ Add clean water or cleaning solution to the water tank according to your own usage

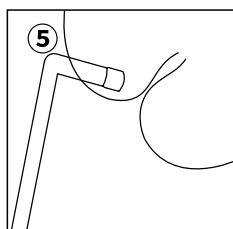

⑤ Aim the nozzle mouth at the position to be rinsed

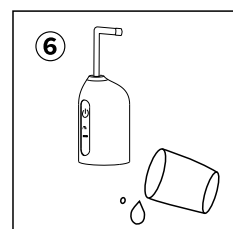

⑥ After use, remove the water tank and pour out the remaining water

The correct way of buttocks and private parts:

Choose the gear that suits you. It is recommended to start with the lowest gear for trial and gradually find the gear that suits you best.



When cleaning, aim the nozzle at the private parts and cleaning parts, so that the water flow can flow out smoothly during flushing. After choosing the gear that suits you, align and rinse from the innermost to the same direction until it is clean.

Tips for product use:

Cleaning advice: first-time users use the gentle mode for a week, and then use the normal mode after getting used to it

Press the switch button, you can use it, and pay attention to the following points when using it:

- (a) The direction of water flow is perpendicular to the cleaning part
- (b) Move slowly along the cleaning site and wash in sequence.
- (C) Nozzles for cleaning the buttocks and private parts.

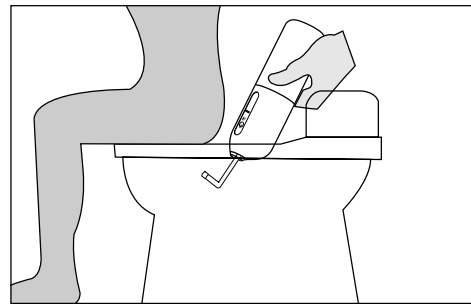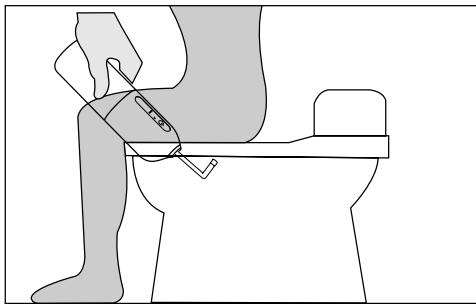

Cleaning tips:

Before turning on the switch, aim the nozzle at the cleaning part, so that the water will not splash everywhere. During use, the gears are gradually increased from weak to strong, giving the private parts a stage of adaptation, and finding a suitable gear that you can bear.

Daily maintenance:

- A. To clean this product, please wipe it with a damp cloth, and then use a dry cloth or other dry paper towels to wipe off the water stains left on the surface.
- B. It is strictly forbidden to soak the product body in water.
- C. Do not bend, stretch or distort the sprinkler hose.

Troubleshooting:

Common problem	Possible problems	Solution
NOT work or Not turn on	New purchase or Not used for 3 months	Please charge for more than 4 hours before use
Low water pressure at work	Something blocked in the nozzle or the nozzle is deformed	Change to new nozzle
Only work short time after charging	The battery lifespan ends or shortage for charging	Charging more than 4 hours or contact the customer service
The charging indicator light does not light up or jumps randomly when charging	The power supply is not connected properly or the adapter does not match	Change the adapter or charge the battery properly
Do not spray water while working	New purchase or do not use for a long time	Pull out the nozzle and wipe the nozzle by Q-tip

Environmental statement:

Portable Washer Hazardous Substances Statement:

According to the Marking Requirements for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products) GB/T 26572-2011 (also known as China RoHS2.0), the following part lists the names and contents of hazardous substances that may be contained in this product.

Component Name	Hazardous substances					
	Pb	Pb	Hg	Hg	PBB	PBDE
Plastic components		○	○	○	○	○
Hardware components		○	○	○	○	○
Container		○	○	○	○	○
Motor components	×	○	○	○	○	○
Battery	×	○	○	○	○	○
Data line	×	○	○	○	○	○
Circuit board	×	○	○	○	○	○

This form is prepared according to the rules of SJ/T11364

O: Indicates that the hazardous substance is present in all homogeneous materials of the part. The content in it is below the current limit requirement of GB/T 26572-2011 (IEC62321).

×: Indicates that there should be. The content of hazardous substances in at least one homogeneous material of this part exceeds the limit requirement specified in GB/T26572. However, the content of the parts marked with "×" in the above table exceeds the content because there is no mature alternative in the industry technology.



The mark marked on the product body indicates that the environmental protection use period is 10 years. The environmental protection use period of electrical and electronic products means that the toxic and harmful substances or elements contained in electrical and electronic products will not leak to the outside or change suddenly, and users of electrical and electronic products will not harm the environment when using the electrical and electronic products. The time limit for causing serious pollution or serious damage to human body and property. During the environmental protection period, please use this product according to the instruction manual.

"Regulations on the Recycling and Disposal of Waste Electrical and Electronic Products" Suggestive Explanation In order to better care and protect the earth, when the user no longer needs this product or the product life is over, please abide by the relevant national laws and regulations on the recycling and disposal of waste electrical and electronic products, and hand it over to Recycle to local manufacturers with nationally recognized recycling qualifications.



Disposal of rechargeable batteries:

1. The built-in rechargeable lithium battery of this product contains substances that may pollute the environment. When discarding this product, please do not throw it together with general household waste. You should take out the battery and throw it into a designated recycling center.
2. Before disassembling the product and taking out the lithium battery, be sure to turn off the power or cut off the power.
3. Steps to take out the lithium battery: Take down the water tank, loosen

the bottom cover screw with a screwdriver, open the bottom cover of the product, and take out the lithium battery inside.

4. Take out the lithium battery and dispose of it safely, and put it in the battery recycling center designated by the government, which is conducive to environmental protection.

Special Note: Only take out the battery when discarding this product, please make sure the battery power is exhausted before taking it out

During the normal use of the product, non-professionals should not disassemble the battery at will!