



Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Title/TTX	 Text

Originale	Sostituto
 Menu	 Menu
 Prog/EPG	 Sleep
 Display	 Info
 Goto	 Pre Ch
 PBC	 Options
 Setup	 D. Menu
 Return	 Back
 Source	 AV
 Tv/Radio	 TV/R
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 <</Rev	 <<
 >>/Fwd	 >>
 I<</Prev	 I<<
 >>I/Next	 >>I
 Up	 Up



