

KMT说明书 折页 128g双铜 尺寸: 89*127mm

anko

K:43-561-810 | T: 71-040-271

Model : TS537G

GAMING TRUE WIRELESS EARBUDS

User Manual

Includes:

- TWS earphone
- S/M/L Silicone eartips
- Charging cable
- User manual



12 month warranty

Thank you for your purchase.

This product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MADE IN CHINA


CUSTOMER SERVICE:

KMART AU: 1800 124 125
KMART NZ: 0800 945 995
TARGET AU: 1300 753 567

WARNING:

- This product shall not be connected to power supply source exceeding PS1 (5V d.c. 3A).
- This Bluetooth earbuds shall be charged by the supplied charging unit only.
- The marking located on the bottom of charging unit.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Please note the product working temperature is 0-40 °C.
- This TWS earphones shall be charged by the supplied charging unit only.

Function overview:

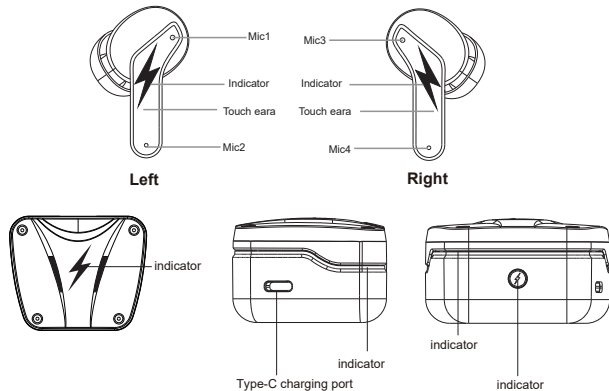

Function Operation:

Play / Pause : Click either Left or Right earbud

Previous : Long click Left earbud

Next : Long click Right earbud

Volume up : Double-click Right earbud

Volume down : Double-click Left earbud

Music /game mode switch : Triple click Right earbud

Siri : Triple-click Left earbud

Answer call / End call : Click Left or Right earbud

Reject call : Long click Left or Right earbud for 2 seconds

Pairing the Earphones with Bluetooth® devices

- ◆Go to " Bluetooth Settings " on your Bluetooth device (phone, tablet, etc.)
- ◆Turn the Bluetooth ON at your device , open the charging case and remove the earphones, they will automatically turn on. The LED indicators on the earbuds flash blue as they already automatically sync to each other , and flash slowly means ready for connection with your device.

On your Bluetooth Device, select the pairing name on the list of available devices , select pairing name: **anko43561810**.

- ◆The Earphone LED indicator will turn off once connected, and a voice prompt "Connected " will alert when connected successfully.

- ◆Trouble shooting tip: if the Earphones do not connect to your device, turn the Earphones OFF, turn your device's Bluetooth OFF and then back ON, then repeat the pairing process.

Pairing between left and right earphones

If the connection between the left and right earphones is lost, put both earphones back inside the charging box , close it and wait a few seconds before reopening . The earphones will automatically re-connect to each other. If the process just described does not work, disconnect the earphones from your device , wait a few minutes then reconnect them (the earphones must be placed inside the charging box).

For both procedures, it is necessary that the earphones inside the charging box are charging , so make sure that the charging box has a sufficient charge level to ensure the charging of the earphones.

Phone calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call. To answer the call, click L or R the earphone . To end a call, click L or R earphone again when finished. To decline an incoming call, press and hold either earbud for 2 seconds.

Playing music

Click either the left or right earphone once to pause playback, click either earphone once again to resume playback. Long Press the Left earphone for 2 seconds to play previous track. Long Press Right earbud for 2 seconds to play next song.

Battery Charging

When using for the first time , charge the battery to maximum capacity. To recharge, plug the Type-C charging cable into the charging port. The LED flashes at the side of the charging box indicates that charging is in progress . When light turn off , charge is completed for charging box.

When the earphones are placed inside the charging box, charging will begin and LED will be flashing on the charging case and a slow flashing light will light up on each earphone. When the light off, the earphones are fully charged.

Earphone battery capacity : 40mAh

Earphone charge time: 1.5 hours

Charging case battery capacity: 400mAh

Charging case charge time: 1.5 hours

Frequency response: 20Hz-20KHz

Unit driver : 10 mm

Working Distance: 10 meters

Rated input : 5V 1A

Music Time: 7.5 Hours (Approx. 80% vol)

Charging port: Type-C

Talk time: 7 Hours

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license