



 
NAVEE Kids Electric Scooter

K100 Pro US

- EN Quick User Guide
- FR-CA Guide d'utilisation rapide
- ES-LA Guía rápida de usuario



- EN Please read the user manual carefully before use to understand how to assemble and operate the scooter. Before use, ensure the rider meets the specified age, height, and weight requirements.
- FR-CA Veuillez lire attentivement le manuel d'utilisation avant d'utiliser la trottinette pour bien comprendre comment l'assembler et la faire fonctionner. Avant utilisation, assurez-vous que l'utilisateur respecte les exigences d'âge, de taille et de poids spécifiées.
- ES-LA Lea detenidamente el manual antes de usar el scooter para comprender cómo ensamblarlo y operarlo correctamente. Antes del uso, asegúrese de que el conductor cumpla con los requisitos de edad, estatura y peso indicados.

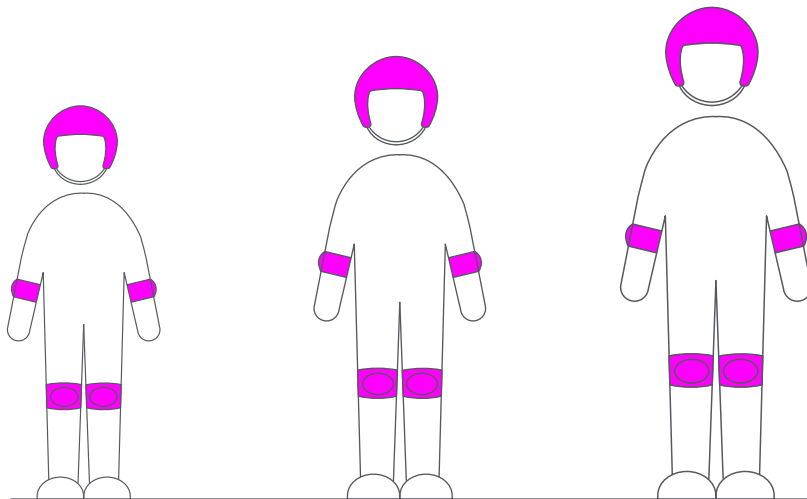

K100
6-10 yrs
44-110 lbs (20-50 kg)
3'8"-4'8" (115-145 cm)

K100 Pro
6-14 yrs
44-110 lbs (20-50 kg)
3'8"-5'6" (115-170 cm)

K100 Max
6-14 yrs
44-132 lbs (20-60 kg)
3'8"-5'6" (115-170 cm)

 
Assembly/Montage/Armado

WARNING/AVERTISSEMENT/ADVERTENCIA

- EN This product must be assembled and adjusted by adults ONLY.
- FR-CA Ce produit doit être assemblé et ajusté UNIQUEMENT par des adultes.
- ES-LA Este producto debe ser ensamblado y ajustado ÚNICAMENTE por adultos.


K100

1

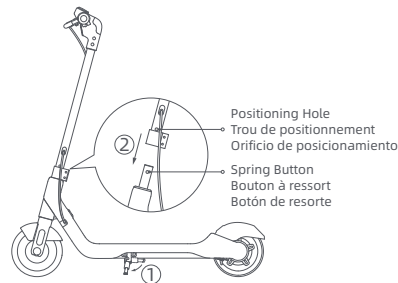


- EN Open the kickstand. Align the positioning hole with the spring button, and press the spring button and insert the stem fully.
- FR-CA Dépliez la béquille. Alignez le trou de positionnement avec le bouton à ressort, appuyez sur ce dernier, puis insérez complètement le tube de direction.
- ES-LA Abra la pata de apoyo. Alinee el orificio de posicionamiento con el botón de resorte, presione el botón e inserte completamente el tubo de dirección.

 2

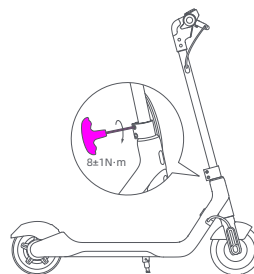


- EN Alternately tighten the two screws several times until secure.
- FR-CA Serrez les deux vis en alternance à plusieurs reprises jusqu'à ce que l'ensemble soit bien fixé.
- ES-LA Apriete alternativamente los dos tornillos varias veces hasta que queden firmes.

 3

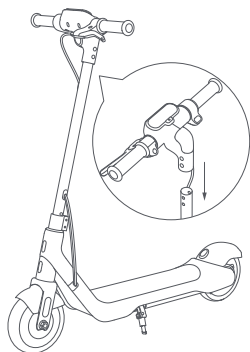

- EN Install the handlebar onto the stem, and make sure to install the handlebar in the correct direction.
- FR-CA Installez le guidon sur le tube de direction et assurez-vous de le positionner dans le bon sens.
- ES-LA Instale el manillar en el tubo de dirección, asegurándose de colocarlo en la dirección correcta.

 
4

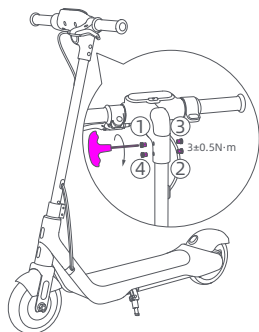

- EN Follow the order as illustrated to pre-tighten the four screws using the included Allen key. Once the handlebar is in the correct position, fully tighten the screws.
Note: After tightening, gently wiggle the handlebar and try pulling up the stem to ensure it is safely secured.
- FR-CA Suivez l'ordre illustré pour préserrer les quatre vis à l'aide de la clé Allen fournie. Une fois le guidon correctement positionné, serrez complètement les vis.
Remarque: Après le serrage, bougez doucement le guidon et tentez de tirer le tube de direction vers le haut pour vous assurer qu'il est bien fixé.
- ES-LA Siga el orden indicado para preajustar los cuatro tornillos con la llave Allen incluida. Una vez que el manillar esté en la posición correcta, apriete completamente los tornillos.
Nota: Después de apretar, mueva ligeramente el manillar y trate de tirar hacia arriba del tubo para asegurarse de que esté bien fijado.


K100 Pro & K100 Max

 1

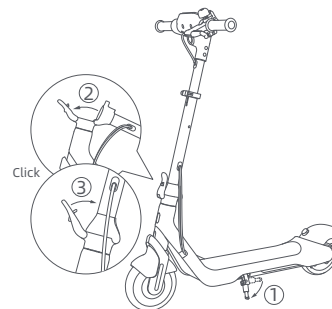


- EN Put down the kickstand, and hold up the stem until it is completely in an upright position. Then push the quick release lever inward until it locks into place.
- FR-CA Abaissez la béquille, puis relevez le tube de direction jusqu'à ce qu'il soit complètement en position verticale. Ensuite, poussez le levier de serrage rapide vers l'intérieur jusqu'à ce qu'il se verrouille.
- ES-LA Baje la pata de apoyo y levante el tubo de dirección hasta que esté completamente en posición vertical. Luego, empuje la palanca de liberación rápida hacia adentro hasta que se bloquee.

 2

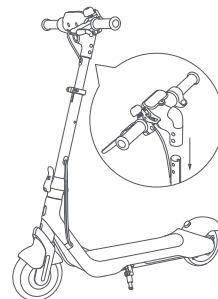


- EN Install the handlebar onto the stem, and make sure to install the handlebar in the correct direction.
- FR-CA Installez le guidon sur le tube de direction, en respectant le bon sens d'installation.
- ES-LA Instale el manillar en el tubo de dirección, asegurándose de colocarlo en la dirección correcta.

 3

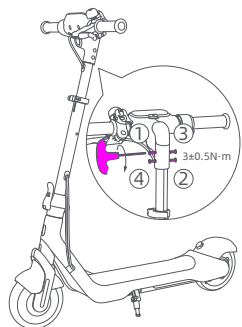

- EN Follow the order as illustrated to pre-tighten the four screws using the included Allen key. Once the handlebar is in the correct position, fully tighten the screws.
- FR-CA Suivez l'ordre illustré pour préserrer les quatre vis à l'aide de la clé Allen. Une fois le guidon correctement positionné, serrez complètement les vis.
- ES-LA Siga el orden ilustrado para preajustar los cuatro tornillos con la llave Allen incluida. Una vez que el manillar esté en posición, apriételos por completo.

 
4

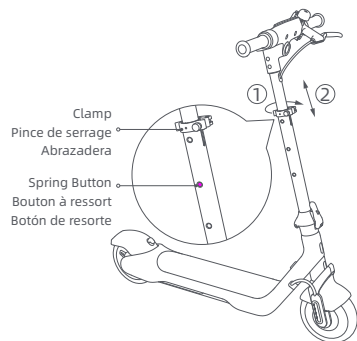

- EN Open the clamp. Press the spring button and adjust the stem to the desired height. Ensure the spring button clicks into place, then close the clamp.
*Adjustable height options: 885 / 960 / 1035 mm
- FR-CA Ouvrez la pince de serrage. Appuyez sur le bouton à ressort et ajustez le tube de direction à la hauteur souhaitée. Assurez-vous que le bouton à ressort s'enclenche, puis refermez la pince de serrage.
*Hauteurs réglables disponibles : 885 / 960 / 1035 mm
- ES-LA Abra la abrazadera. Presione el botón de resorte y ajuste el tubo de dirección a la altura deseada. Asegúrese de que el botón de resorte haga clic en su lugar, luego cierre la abrazadera.
*Opciones de altura ajustable: 885 / 960 / 1035 mm

Charging/Chargement/Carga

 - EN The scooter is fully charged when the LED on the battery charger changes from red to green.
- FR-CA Le scooter est complètement chargé lorsque le voyant LED du chargeur de batterie passe du rouge au vert.
- ES-LA El scooter está completamente cargado cuando el indicador LED del cargador de batería cambia de rojo a verde.

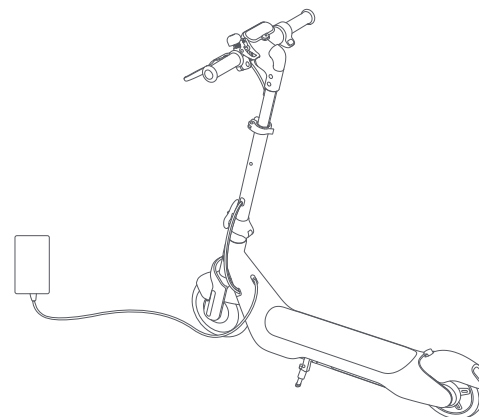

- EN **WARNING:** Only use the original charger. Use only the charger specified by the manufacturer. Charge your scooter indoors, and never expose it to rain. Do not allow minors to operate the charging device. The battery charger is not a toy, keep it in a safe place out of reach of children when charging.
- FR-CA **AVERTISSEMENT:** Utilisez uniquement le chargeur d'origine. Utilisez seulement le chargeur spécifié par le fabricant. Rechargez votre trottinette à l'intérieur et ne l'exposez jamais à la pluie. Ne permettez pas aux mineurs d'utiliser le dispositif de charge. Le chargeur n'est pas un jouet - conservez-le dans un endroit sûr, hors de portée des enfants pendant le chargement.
- ES-LA **ADVERTENCIA:** Use únicamente el cargador original. Utilice solo el cargador especificado por el fabricante. Cargue su scooter en interiores y nunca lo exponga a la lluvia. No permita que menores operen el dispositivo de carga. El cargador no es un juguete; manténgalo en un lugar seguro fuera del alcance de los niños durante la carga.

Download the NAVEE App/Téléchargement de l'application NAVEE/Descarga de la aplicación NAVEE

1



 
Google Play



App Store


- EN Scan the QR code to download and install the NAVEE App. Then register and log in.
- FR-CA Scannez le code QR pour télécharger et installer l'application NAVEE. Ensuite, inscrivez-vous et connectez-vous.
- ES-LA Escanee el código QR para descargar e instalar la aplicación NAVEE. Luego regístrese e inicie sesión.

2

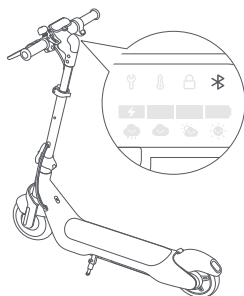

- EN Power on the scooter; a blinking Bluetooth icon indicates the scooter is waiting to be connected.
- FR-CA Mettez la trottinette sous tension; une icône Bluetooth clignotante indique qu'elle est en attente de connexion.
- ES-LA Encienda el scooter; un icono de Bluetooth parpadeando indica que el scooter está esperando ser conectado.

 
3

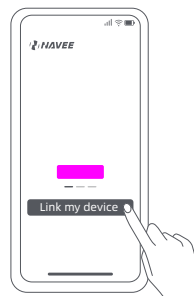

- EN Open the NAVEE app, click on [Link my device] and follow the instructions to link your scooter.
- FR-CA Ouvrez l'application NAVEE, cliquez sur [Lier mon appareil], puis suivez les instructions pour connecter votre trottinette.
- ES-LA Abra la aplicación NAVEE, haga clic en [Vincular mi dispositivo] y siga las instrucciones para vincular su scooter.

How to Ride/Conduire votre scooter/Cómo conducir

 
Before Riding/Avant de conduire/Antes de conducir

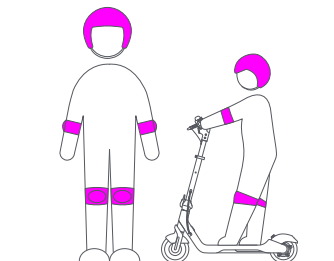

WARNING/AVERTISSEMENT/ADVERTENCIA

- EN Always wear a helmet and other protective gear to minimize any possible injury in the learning process. To reduce the risk of injury, adult supervision is required.
- FR-CA Portez toujours un casque et d'autres équipements de protection pour minimiser les blessures potentielles durant l'apprentissage. Pour réduire le risque de blessure, la supervision d'un adulte est requise.
- ES-LA Use siempre un casco y otros equipos de protección para minimizar cualquier posible lesión durante el proceso de aprendizaje. Para reducir el riesgo de lesiones, se requiere la supervisión de un adulto.

 Starting/Démarrage/Inicio

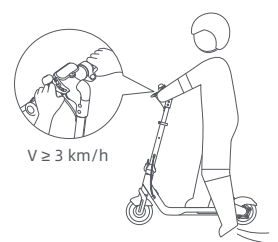


- EN Place one foot on the deck and use the other foot to slowly push off. Once the scooter is gliding, put both feet on the deck and gently press the accelerator.
Note: This electric scooter is powered by an electric motor. For your riding safety, the motor will not start until the speed reaches 3 km/h.
- FR-CA Placez un pied sur le plateau et utilisez l'autre pied pour prendre lentement de l'élan. Une fois que la trottinette avance, placez les deux pieds sur le plateau et appuyez doucement sur l'accélérateur.
Remarque : Cette trottinette électrique est alimentée par un moteur électrique. Pour votre sécurité, le moteur ne s'enclenche que lorsque la vitesse atteint 3 km/h.
- ES-LA Coloque un pie sobre la plataforma y use el otro pie para impulsarse lentamente. Una vez que el scooter se deslice, coloque ambos pies sobre la plataforma y presione suavemente el acelerador.
Nota: Este scooter eléctrico funciona con un motor eléctrico. Por su seguridad, el motor no se activará hasta alcanzar una velocidad de 3 km/h.

Accelerating/Accélération/Aceleración



 
E Mode

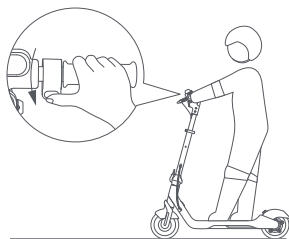


D/S Mode

- EN In E mode, the scooter accelerates as you continue gliding. In D/S mode, press and hold the accelerator to accelerate.
- FR-CA En mode E, la trottinette accélère lorsque vous continuez à prendre de l'élan. En mode D/S, maintenez l'accélérateur enfoncé pour accélérer.
- ES-LA En el modo E, el scooter acelera a medida que continúa deslizándose. En el modo D/S, mantenga presionado el acelerador para acelerar.

 Decelerating & Braking/Décélération et freinage/Desaceleración y frenado

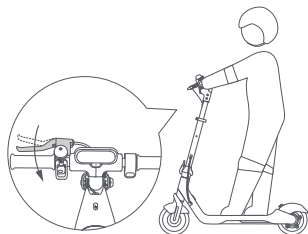


E Mode

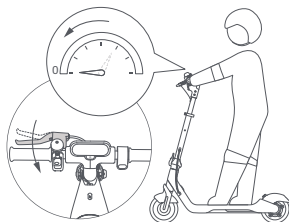 

D/S Mode


- EN In E mode, squeeze the brake lever to slow down. In D/S mode, release the accelerator and then squeeze the brake lever to slow down.
- FR-CA En mode E, serrez le levier de frein pour ralentir. En mode D/S, relâchez l'accélérateur puis serrez le levier de frein pour ralentir.
- ES-LA En el modo E, apriete la palanca de freno para reducir la velocidad. En el modo D/S, suelte el acelerador y luego apriete la palanca de freno para frenar.

 Steering/Direction/Giro

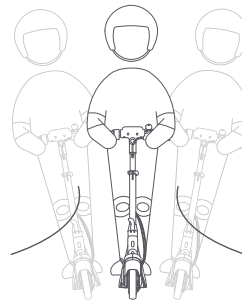

- EN Tilt your body to the steering direction as you turn, and slowly turn the handlebar.
- FR-CA Penchez-vous dans la direction vers laquelle vous souhaitez tourner en tournant doucement le guidon.
- ES-LA Incline seu corpo na direção da curva ao virar e gire lentamente o guidom.

 Parking/Stationnement/Estacionamiento

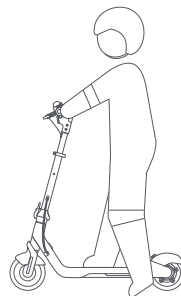

- EN When stopping, place one foot on the ground and get off the scooter. Use the kickstand to park.
- FR-CA À l'arrêt, placez un pied au sol et descendez de la trottinette. Utilisez la béquille pour la stationner.
- ES-LA Al detenerse, coloque un pie en el suelo y bájese del scooter. Use la pata de apoyo para estacionar.

 
WARNING/AVERTISSEMENT/ADVERTENCIA

- EN Do not park your kick scooter on a slope. Make sure that the kickstand is positioned on a flat surface.
- FR-CA Ne stationnez pas votre trottinette sur une pente. Assurez-vous que la béquille repose sur une surface plane.
- ES-LA No estacione su scooter en una pendiente. Asegúrese de que la pata de apoyo esté colocada sobre una superficie plana.


Folding & Unfolding/Pliage et dépliage/Plegado y desplegado

K100 Pro & K100 Max

- EN Note: When folding the scooter, please adjust the stem to the second height.
 FR-CA Remarque : Lors du pliage de la trottinette, réglez la potence à la deuxième hauteur.
 ES-LA Nota: Al plegar la patineta, ajuste el tubo a la segunda altura.

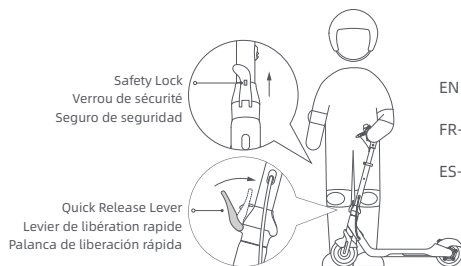

 - EN Press the safety button and open the quick release lever.
 FR-CA Appuyez sur le bouton de sécurité et ouvrez le levier de serrage rapide.
 ES-LA Presione el botón de seguridad y abra la palanca de liberación rápida.

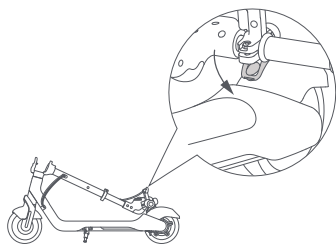


- EN Align the buckle with the hook and secure them together.
 FR-CA Alignez la boucle avec le crochet et fixez-les ensemble.
 ES-LA Alinee la hebilla con el gancho y ajústelos juntos.



- EN Pull the buckle upwards to release it from the hook. Unfold the stem and close the quick release lever.
 FR-CA Tirez la boucle vers le haut pour la libérer du crochet. Dépliez la potence et refermez le levier de serrage rapide.
 ES-LA Tire de la hebilla hacia arriba para soltarla del gancho. Despliegue el tubo y cierre la palanca de liberación rápida.

Connecting the Bluetooth Speaker/Connexion du haut-parleur Bluetooth/Conexión del altavoz Bluetooth

 K100 Max

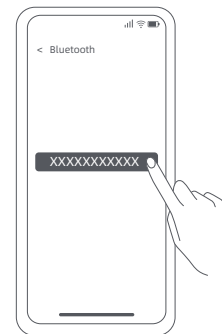


- EN Enable Bluetooth on your phone and search for the device name "K100 Max XXXX". Tap to pair and connect.
 Note: You can rename the Bluetooth speaker in your phone's Bluetooth settings.
 FR-CA Activez le Bluetooth de votre téléphone et sélectionnez "K100 Max XXXX" dans les appareils disponibles.
 Remarque: Vous pouvez renommer le haut-parleur Bluetooth dans les paramètres Bluetooth de votre téléphone.
 ES-LA Active el Bluetooth en su teléfono y busque el nombre del dispositivo "K100 Max XXXX". Toque para emparejar y conectar.
 Nota: Puede cambiar el nombre del altavoz Bluetooth en la configuración de Bluetooth de su teléfono.

Using Apple Find My/Fonction Localiser d'Apple/Usar Buscar mi Apple

K100 Max

 1. Pairing/Jumelage/Emparejamiento

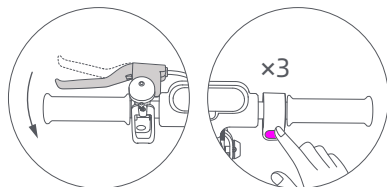

EN With the scooter powered on, squeeze the brake lever and simultaneously briefly press the accelerator 3 times. The scooter will enter Find My pairing mode (indicated by a beep). On your iPhone or iPad, open the Find My app. Tap "+" and select "Add Other Item". When "NAVEE Kids Electric Scooter" appears, tap "Connect".

Follow the on-screen instructions. A beep will confirm that the scooter has been successfully paired.

Notes:

- Exit the NAVEE App before using the Find My function.
- If Bluetooth Proximity Unlock is enabled, turn it off in the NAVEE App and unpair the scooter from Bluetooth in the phone setting if already connected. After completing these steps, Find My will function correctly.

FR-CA Lorsque la trottinette est allumée, serrez le levier de frein et appuyez brièvement trois fois sur l'accélérateur. La trottinette passera en mode de jumelage Find My (signalé par un bip sonore). Sur votre iPhone ou iPad, ouvrez l'application Localiser. Appuyez sur « + » et sélectionnez « Ajouter un autre objet ». Lorsque « NAVEE Kids Electric Scooter » apparaît, appuyez sur « Connecter ». Suivez les instructions à l'écran. Un bip confirmera que la trottinette a été jumelée avec succès.

Remarques:

 
- Fermez l'application NAVEE avant d'utiliser la fonction Localiser.
- Si le déverrouillage par proximité Bluetooth est activé, désactivez-le dans l'application NAVEE et dissociez la trottinette du Bluetooth dans les paramètres du téléphone si elle est déjà connectée. Après ces étapes, la fonction Localiser fonctionnera correctement.

ES-LA Con la patineta encendida, apriete la maneta de freno y presione brevemente el acelerador 3 veces. La patineta entrará en modo de emparejamiento Find My (indicado por un pitido). En su iPhone o iPad, abra la app Buscar. Toque "+" y seleccione "Añadir otro objeto". Cuando aparezca "NAVEE Kids Electric Scooter", toque "Conectar". Siga las instrucciones en pantalla. Un pitido confirmará que la patineta se ha emparejado correctamente.

Notas:

- Salga de la app NAVEE antes de usar la función Buscar.
- Si la función de desbloqueo por proximidad Bluetooth está activada, desactívela en la app NAVEE y desvincule la patineta desde los ajustes de Bluetooth del teléfono si ya está conectada. Tras estos pasos, Buscar funcionará correctamente.

2. Unpairing/Dissociation/Desemparejamiento

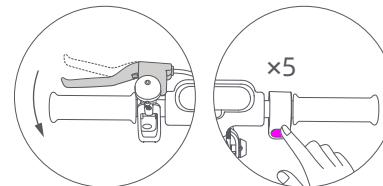


EN With the scooter powered on (and not charging or locked), squeeze the brake lever and simultaneously briefly press the accelerator 5 times. The display will turn off, indicating that Find My has been unpaired. To pair again, delete the scooter from the Find My app and repeat the pairing process.

FR-CA Lorsque la trottinette est allumée (non en charge et non verrouillée), serrez le levier de frein et appuyez brièvement cinq fois sur l'accélérateur. L'écran s'éteindra, indiquant que Find My a été dissocié. Pour jumeler à nouveau, supprimez la trottinette de l'application Localiser et recommencez le processus de jumelage.

ES-LA Con la patineta encendida (y sin estar cargando ni bloqueada), apriete la maneta de freno y presione brevemente el acelerador 5 veces. La pantalla se apagará, indicando que Buscar ha sido desemparejado. Para emparejar nuevamente, elimine la patineta de la app Buscar y repita el proceso de emparejamiento.

 3. How to Find the Serial Number/Comment trouver le numéro de série/Cómo encontrar el número de serie

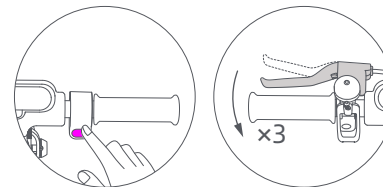

EN For iOS users who have paired the scooter using the Find My app, with the scooter paired, fully press the accelerator and squeeze the brake lever 3 times to display the serial number in the Find My app.

FR-CA Pour les utilisateurs iOS ayant jumelé la trottinette avec l'application Localiser, appuyez à fond sur l'accélérateur et serrez le levier de frein 3 fois pour afficher le numéro de série dans l'application Localiser.

ES-LA Para los usuarios de iOS que han emparejado la patineta usando la app Buscar, presione completamente el acelerador y apriete la maneta de freno 3 veces para mostrar el número de serie en la app Buscar.

Statement/Déclaration/Declaración

- EN Apple, the Apple logo and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google, Google Play and the Google Play logo are trademarks of Google LLC.
- FR-CA Apple, le logo Apple et App Store sont des marques déposées d'Apple Inc. aux États-Unis et dans d'autres pays. Google, Google Play et le logo Google Play sont des marques déposées de Google LLC.
- ES-LA Apple, el logotipo de Apple y App Store son marcas registradas de Apple Inc. en EE. UU. y otros países. Google, Google Play y el logotipo de Google Play son marcas registradas de Google LLC.



*Scan the QR code to access electronic user manuals



For more information & after-sales support, contact us via service@navee.tech/www.naveetech.com
Manufactured by: SPACEWALKER PTE. LTD.
Address: 60 PAYA LEBAR ROAD #07-54 PAYA LEBAR SQUARE SINGAPORE (409051)
E-mail: service@navee.tech
Made in China

For more information & after-sales support, contact us via service@navee.tech/www.naveetech.com

Original instructions
Traduction de la notice originale
40150500000805-FR

1. Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT! Please read carefully before using the product and keep for future reference. For detailed e-manual, please visit www.naveetech.com.

When using an electrical appliance, basic precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

SAVE THESE INSTRUCTIONS

WARNING – To reduce the risk of injury, user must read instruction manual

- The assembly and adjustment should **ONLY** be done by adults and must not be touched by children under the age of 6. The kick scooter contains small parts which can pose a choking hazard. To avoid suffocation, do not allow children to touch plastic covering. Children must always be under parental supervision.
- The product is for recreation only. It is not intended for transportation. Do not modify the kick scooter in any way to change the purpose for which it was designed. In order to master riding skills, the rider needs to practice. Use with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- In countries or regions where there are currently no national standards or regulations regarding electric scooters, you must strictly follow the safety instructions outlined in this manual when operating the product. Failure to do so may pose safety risks to children. Brightway Innovation Intelligent Manufacturing (Hangzhou) Co., Ltd shall not be held directly or jointly liable for any personal injury, property damage, accidents, legal disputes, or any other adverse consequences resulting from misuse or use in violation of the guidance provided in this manual.
- Riding a children's electric scooter requires a certain level of skill. Please use the scooter with caution to avoid falls, collisions, or injuries to the user or others.
- **DO NOT** allow anyone to ride the kick scooter unsupervised unless a responsible adult has carefully read this manual. The supervising adult must ensure the new rider's safety and assist them until they are familiar with basic operations. Riders must wear a helmet and protective gear. Always provide this manual when transferring the product to others.
- Before riding, please wear helmets, hand/wrist pads, knee pads, elbow pads, and other protective gear at all times.
- The scooter shall be used by one person only. Obligation to always wear shoes. Do not divert the use of the vehicle. This product is for personal riding only and is not intended for acrobatic or stunt use.
- People who are not suitable for riding this product include: (1) Persons under the influence of alcohol or drugs. (2) Persons who are unable to engage in strenuous physical activity due to illness or medical conditions. (3) Persons

with poor balance or impaired motor skills. (4) Persons whose weight exceeds the product limit. (5) Pregnant women. (6) Persons with visual or hearing impairments.

- For your first ride, avoid areas where children, pedestrians, pets, vehicles, bicycles, or other obstacles may appear.
- This kick scooter is designed for use on flat, dry, and paved surfaces. Ride only in open outdoor areas, and ensure there are no children, pedestrians, pets, skateboards, bicycles, other scooters, riders, or obstacles nearby.
- Traffic in the city has many obstacles to cross such as curbs or steps. It is recommended to avoid obstacle jumps. It is important to anticipate and adapt your trajectory and speed to those of a pedestrian before crossing these obstacles. It is also recommended to get out of the vehicle when these obstacles become dangerous due to their shape, height or slippage.
- Riding with high speed or a speed that is not appropriate or adequate for the situation (bad weather conditions, bad surface conditions, or the like) may lead into a potential loss of stability or loss of control. To reduce any risk, you must follow all instructions in this manual. Be careful when mounting and dismantling the product, it may fall and cause injury.
- Avoid streets and surfaces with water, sand, gravel, dirt, leaves, and other debris. Wet weather impairs traction, braking, and visibility.
- Required preparations for using this product include: ensuring the steering system is properly adjusted, that all connected accessories (such as the folding system) are properly tightened and undamaged, and that the brakes and wheels are in good condition.
- Perform a basic inspection of the electric scooter before each ride. If there are abnormal conditions such as loose parts, low battery alerts, flat tires or excessive wear of tires, strange sounds, malfunctions and other abnormal conditions, stop riding immediately and call for professional support.
- Ensure clear visibility and make sure others can see you while riding.
- Keep both hands on the handlebar and do not carry cargo of any kind. DO NOT use a cell phone, camera, headphones, earbuds or perform any other activities while riding. DO NOT ride downhill.
- Do not touch moving parts. Keep hair, clothing, or accessories away from wheels and other components.
- Any load attached to the handlebar will affect the stability of the vehicle.
- Dismount and walk the scooter when crossing speed bumps, potholes, or uneven surfaces.
- Do not ride in bad weather, low visibility, or after intense physical exertion.
- Do not ride in the dark.
- Shall be operated only with adequate daylight conditions of visibility.
- Do not touch the brake system, it could cause injuries due to sharp edges. The brake may become hot in use. Do not touch after use.
- The self-tightening nuts as well as the other self-tightening fastenings may lose their efficiency and that they may need to be retightened.
- Do not modify or transform the vehicle.
- Do not make any modifications that are not noted in the instructions.
- Do not modify or transform the vehicle, including the steering tube and sleeve, stem, folding mechanism and rear brake.
- For a better riding experience, it is recommended to carry out a regular maintenance of the product.

- Eliminate any sharp edges caused by use.
- Accessories and any additional items which are not approved by the manufacturer shall not be used.
- Regular maintenance of the vehicle is a factor of safety.
- Regularly check the tightening of the various bolted elements, in particular the wheel axles, the folding system, the steering system and the brake shaft.
- Make sure the scooter is turned off when being transported and kept in its original packaging if possible.
- In order to avoid accidental injuries such as electric shock and fire caused by improper use, please read the instructions carefully before use, and keep them properly for future reference.
- Power-off the vehicle during charging, or into a certain nonoperational mode.
- Do not charge if the charge port or charge cable is wet. Read this manual carefully before charging.
- Do not charge the scooter at an ambient temperature above 40°C or below 0°C.
- The appliance is not intended for use at elevations greater than 2000 m above sea level.
- The appliance shall be disconnected from its power source during service and when replacing parts.
- The external flexible cable or cord of this transformer (charger) cannot be replaced; if the cord is damaged, the transformer (charger) shall be scrapped.
- If the external flexible cable or cord of this transformer is damaged, it shall be replaced by the manufacturer or their service agent or a similarly qualified person in order to avoid a hazard.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product contains batteries that can only be replaced by qualified technicians or after-sales service.
- This appliance contains batteries that are only replaceable by skilled persons.
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. Do not use a battery charger from any other product. Keep a safe distance from the surrounding combustibles when charging, the vehicle must be placed in a well-ventilated area.
- **WARNING:** Do not use any third-party battery or battery charger. Use only with GQ20-252070-AU (K100 & K100 Pro) / GQ24-252100-AU (K100 Max) supply unit.
- **WARNING:** Do not ride on public roads.
- **WARNING:** This toy is unsuitable for children under 6 years due to its maximum speed.
- **WARNING:** Protective equipment should be worn. Not to be used in traffic. 50 kg max.
- **WARNING!** Keep plastic covering away from children to avoid suffocation.
- **WARNING!** Never use the product close to a water source.
- **WARNING!** Stop using the product when damaged.
- **WARNING!** As with any mechanical component, a vehicle is subject to high stresses and wear. The various materials and components may react differently to wear or fatigue. If the expected service life for a component has been exceeded, it may break suddenly, therefore risking causing injuries to the user. Cracks, scratches and discoloration in the areas subject to high stresses indicate that the component has exceeded its service life and please contact an authorized or a specialized repairer.

 
The scooter contains a rechargeable lithium-ion battery pack, and improper disposal of these batteries will cause harm to the environment. Follow the steps below to remove the batteries before disposing of the scooter and discard the batteries properly:

1. Before removing the battery, make sure the scooter is powered off and the battery is fully discharged. Remove the footpad, unscrew the bolts between the deck and the frame, and then open the deck.
2. Unplug the battery connector, and then remove the batteries. Do not damage the battery case to avoid any risk of injuries. Do not use the battery if it is damaged, has a strange odor, emits smoke, or gets overheated. Keep a leaking battery away from other objects.
3. Recycle the removed battery at a certified battery recycling facility.


To find a certified service provider, please contact us at service@navee.tech or visit <https://www.naveetech.com>.

2. Product Overview

Electric Scooter

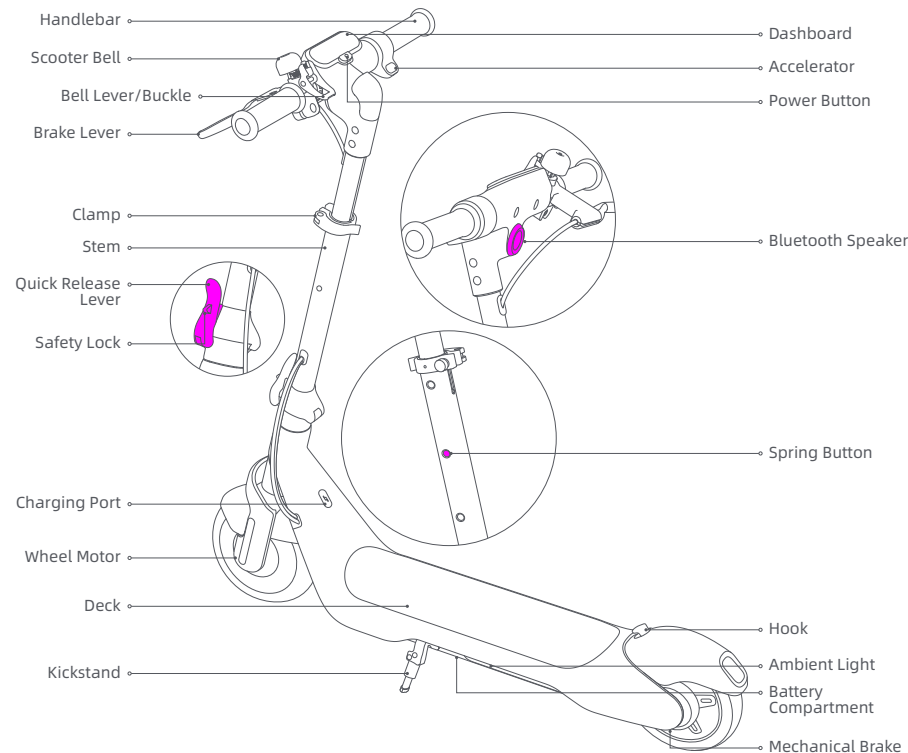

 * Illustrations in this manual are for reference only. Actual product may vary.

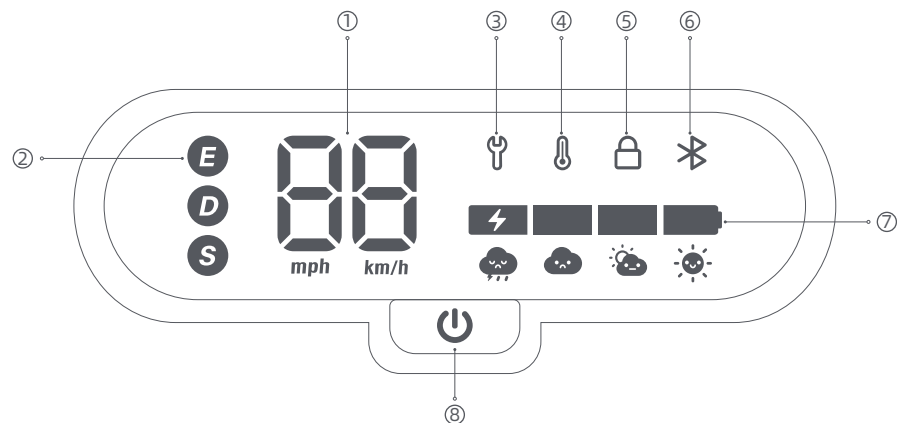

- ① Speedometer: Shows your current speed during riding. Displays an error code when a fault is detected, and shows battery level while charging.
- ② Riding Modes: E stands for Power Assist Mode, D for Standard Mode, and S for Sport Mode. Sport Mode offers higher speeds and is recommended only after the rider has mastered basic control.
- ③ Error Indicator: A solid red wrench icon means there is a fault.
- ④ Temperature Warning: When the battery temperature is too high or too low, the thermometer icon lights up. Wait until the temperature returns to the normal range before using or charging.
- ⑤ Lock: This icon lights up when the scooter is locked. You can lock or unlock the scooter using the NAVEE App.
- ⑥ Bluetooth: The Bluetooth icon stays on when the scooter is connected to your mobile device. After connecting, you can enable the proximity unlock feature in the app. To lock the scooter: turn it off first, move your phone away, and the motor will auto-lock. When you turn the scooter back on, it stays locked until your phone is nearby and you squeeze any brake lever to unlock.
Note: The lock function consumes battery power. Use it wisely.
- ⑦ Battery Level: 4 bars indicate remaining battery. Each bar equals roughly 25% of a full charge.
- ⑧ Power Button: Press to turn on; press and hold for 2 seconds to turn off. While powered on, press once to toggle the ambient light; double press to switch the riding mode.
Note: When the ambient light is on, its effect will change based on the selected riding mode.

Cleaning

Before cleaning your scooter:

Turn off the power. Unplug the charging cable. Make sure the charging port cover is fully closed.

To clean:

Wipe the scooter with a soft, damp cloth. For stubborn dirt, use a soft brush (e.g., a toothbrush). Finish by drying all surfaces with a clean, dry cloth.

Avoid the following:

- Using high-pressure water (this may damage internal components).
- Using corrosive cleaners (they can harm both external and internal parts).

Battery Care

To maximize battery life:

Avoid fully draining the battery. Charge it regularly.

Always keep usage, charging, and storage temperatures within the limits stated in the specifications.

If unused for a long period, charge every 60 days to prevent permanent battery damage. A fully charged scooter can remain in standby for about 120-180 days.

Battery Warnings:

- Only use the original charger and battery provided with your scooter.
- Never use a battery or charger from another model or brand.
- Do not charge or use the scooter if the battery is damaged or has been exposed to water.
- Do not attempt to remove the battery yourself — it requires professional servicing.

Storage

If storing the scooter long-term:

Fully charge the battery. Power off the scooter. Store in a cool, dry place away from sunlight and humidity.

Use the original packaging for transport if available.

Storage Reminders:

- Keep the scooter away from flammable materials.
- Avoid storing in direct sunlight or very damp environments.
- This product contains a lithium battery. Follow local laws for transportation and storage.

Scooter Maintenance Schedule (Recommended):

Maintaining the scooter regularly can help keep the scooter neat and in good condition, avoid safety hazards, minimize breakdowns, slow down the deterioration of the scooter, and extend the scooter's service life.

Item	Service Object	Actions	Every month	Every 3 months	Every 500 km /6 months	Every 1000 km /1 year	Every 10000 km /3 years
Tires	Tire Tread Wear	Check whether the tire is cracked, deformed, worn, etc.			✓	✓	✓
Screws	Handlebar Assembly Screws	Tighten the screw that connects the handlebar assembly with the stem assembly (with the recommended torque of 3.0 ± 0.5 N·m).		✓	✓	✓	✓
		Tighten the accelerator screw (with the recommended torque of 1.6 ± 0.1 N·m).				✓	✓
		Tighten the brake lever screw (with the recommended torque of 5 ± 0.2 N·m).				✓	✓
Functions	Brake Adjustment	Before adjusting, make sure the scooter is turned off and not charging. When the brake is too tight, use the tool to turn the nut on the screw rod counterclockwise, so as to slightly shorten the brake cable's exposed bottom part. When the brake is too loose, use the tool to turn the nut on the screw rod clockwise, so as to slightly lengthen the brake cable's exposed bottom part.			✓	✓	✓
	Charging	Charge the scooter at a suitable temperature. The indicator on the battery charger is red when the scooter is charging, and turns green when the scooter is fully charged. The control panel will show the charging status simultaneously during charging.			✓	✓	✓
	Steering	Turn the handlebar 60° to the left and right to make sure the turning angle is correct and the steering is free from resistance and stagnation.				✓	✓
Important Components	Battery Assembly	Fully charge the scooter before leaving it unused for a long time, and turn it on to charge every 60 days.					✓

4. Specifications

Product	Name Model	Kids Electric Scooter		
		K100 US	K100 Pro US	K100 Max US
Dimensions	Vehicle: L × W × H ⁽¹⁾	35.0 × 17.0 × 37.1 in (890 × 430 × 942 mm)	35.0 × 17.0 × 40.5 in (890 × 430 × 1028 mm)	35.0 × 16.9 × 40.6 in (889 × 430 × 1030 mm)
	After Folding: L × W × H	-	35.0 × 16.9 × 16.7 in (888 × 428 × 423 mm)	35.0 × 16.8 × 16.9 in (887 × 427 × 428 mm)
Net Weight	Vehicle Net Weight	19.0 lbs (8.6 kg)	19.8 lbs (9 kg)	21.2 lbs (9.6 kg)
Rider	Load Range	110.3 lbs (50 kg)	110.3 lbs (50 kg)	132.3 lbs (60 kg)
	Age	6yrs		
	Body Length	3'7.7-4'7.6" (115-145 cm)	3'7.7-5'6" (115-170 cm)	3'7.7-5'6" (115-170 cm)
Assembled Electric Scooter	Max. Speed	9.9 mph (16 km/h)	9.9 mph (16 km/h)	12.4 mph (20 km/h)
	General Range ⁽²⁾	xxx	xxx	xxx
	Gear Range	D	xxx	xxx
		S	xxx	xxx
	Max. Climbing Ability	5%		
	Suitable Surfaces	Cement or asphalt road, with benches of less than 1 cm or crevices narrower than 3 cm		
	Operating Temperature	14-104 °F (-10 to 40 °C)		
	Storage Temperature	-4-113 °F (-20 to 45 °C)		
Battery Pack	IP Rating	IPX4		
	Charging Time	Approx. 3.5 h	Approx. 3.5 h	Approx. 5.5 h
	Model	T2504-B61A	T2504-B61A	T2506-B62A
	Nominal Voltage	21.6 VDC		
	Max. Charge Voltage	25.2 VDC		
	Rated Energy	55.08 Wh	55.08 Wh	110.16 Wh
	Intelligent Battery Management System	Over-heating, short circuit, over-current, over-discharge, and over-charge protection		
	Normal Charging Temperature Range	32-104 °F (0 to 40 °C)		
	Rated Capacity	2.55 Ah	2.55 Ah	5.1 Ah
	Rated Power	130 W	130 W	150 W
Wheel Motor	Model ⁽³⁾	GQ20-252070-AU	GQ20-252070-AU	GQ24-252100-AU
	Input Voltage	100-240 VAC		
	Max. Output Voltage	25.2 VDC		
	Rated Output	21.6 VDC, 0.7 A	21.6 VDC, 0.7 A	21.6 VDC, 1.0 A
Tire	Front & Back Tires	7" Air-free Inner Hollow Tires		
	Frequency Band	2402-2480MHz		
Bluetooth	Max. RF Power	BLE (1 Mbps): 1.57 dBm BLE (2 Mbps): 1.79 dBm GFSK: 1.74 dBm π/4-DQPSK: 2.44dBm 8DPSK: 2.84 dBm		

5. Certifications

FCC Supplier's Declaration of Conformity

This supplier's declaration of conformity is hereby for
 Product: Kids Electric Scooter
 Model Number(s): K100 US, K100 Pro US, K100 Max US
 Brand/Trade: NAVEE

We declare that the above mentioned edvice has been tested and found in compliance with CFR 47 Part Regulation.

Responsible Party--U.S.Contact Information

Company: SPACEWALKER PTE. LTD.

Address: 60 PAYA LEBAR ROAD #07-54 PAYA LEBAR SQUARE SINGAPORE (409051)

Country: Singapore

FCC Compliance Statement for USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

–Reorient or relocate the receiving antenna.

–Increase the separation between the equipment and receiver.

–Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

–Consult the dealer or an experienced radio/TV technician for help.

FCC Note

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Industry Canada (IC) Compliance Statement for Canada

This device complies with Industry Canada license-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

6. Safety Warning



Danger!
Read user manual before use.



WARNING
For indoor use only (for the charger).



WARNING
Read carefully and keep for future reference.



WARNING
Class II appliance



WARNING
Hot Surface



WARNING
Sharp Edges



Do not expose to moisture



≤5000m

The appliances intended for use at altitudes not exceeding 5000m.

ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For more information & after-sales support,
contact us via service_us@navee.tech/service.naveetech.com
Pour plus d'informations et de support après-vente, contactez-nous à service_us@navee.tech/
service.naveetech.com

SPACEWALKER PTE. LTD.

Address/Adresse: 60 PAYA LEBAR ROAD #07-54 PAYA LEBAR SQUARE SINGAPORE (409051)

Made in China/Fabriqué en Chine



Original instructions
Traduction de la notice originale
40150500000798-NA