



OWNER'S MANUAL

Convair Ceramic Tower Fan Heater CTH05



(English) (CTH05)

convair®

SAFETY

General Safety

Please read these instructions before using the heater and keep for future reference.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction in using the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance. Do not poke anything through the ventilating slits.

Always use the heater in an upright position. Stand it on a firm, solid, horizontal base (not on thick pile carpets).



WARNING: In order to avoid overheating, do not cover the heater.

Leave nothing hanging above or in front of the heater (e.g. clothes, curtains, bedding, fabrics). Be sure that the back panel vent slots on the heater are uncovered otherwise it will overheat. Clean these openings at regular intervals to prevent airflow reduction (refer Maintenance section).

The heater surfaces are hot when in use. To avoid burns, keep bare skin away from the top ventilation outlets. Leave plenty of room around the heater.

Do not use this heater outdoors, or on wet surfaces. Do not use the heater near flammable areas or substances.

Electrical Safety

Connect the heater to a single 230 Vac, 10A socket only. Do not plug into double adaptors or multi-outlet power boards.

Make sure that the heater never comes into contact with water. Never position the heater under a power outlet.

Never turn the heater on if the power supply cord is damaged or if the heater's casing is obviously damaged. If the power supply cord is damaged it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.

Do not pull the heater along by the power cord or place the cord near the heater's surfaces. Always uncoil the power cord completely before use. Use of extension cords is not recommended.

Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. If the heater is to be used in a bathroom, ensure that switches and other controls cannot be touched by a person in the bath or shower.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

Always turn the heater off and unplug from the power socket when not in use.

Safety Device

To avoid overheating problems the inbuilt safety device will interrupt electricity in the event of the heater overheating.

 
If this should happen:

- Check that the heater is positioned correctly, not close to any furnishings.
- See that there is no dust or other obstacles blocking the vent slots.
- Clean the vent slots if necessary.

The heater is also equipped with a 'tip-over' switch, which will turn off power to the heater elements if it should fall over.

ASSEMBLY

COMPONENTS LIST

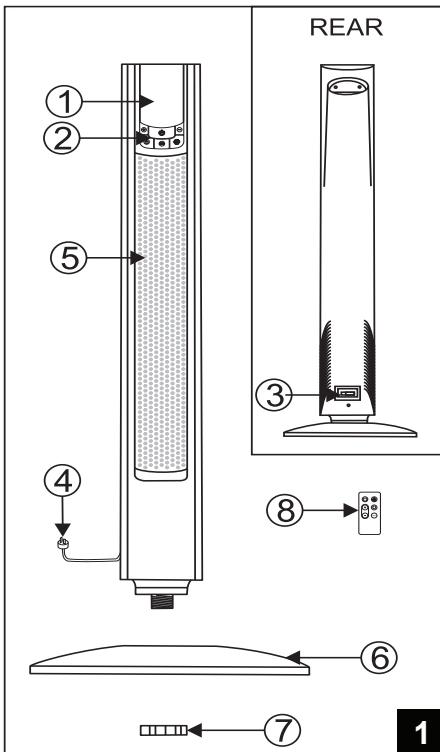

1. Display panel
2. Control panel
3. Power switch
4. Power supply cord
5. Front Panel
6. Base
7. Locking nut
8. Remote control

ASSEMBLY

Unpack the heater components and check that you have all of the components.

Turn the heater upside down and remove the plastic locking nut. Assemble the Base onto the heater and lock into position with the Locking nut.

Note: Ensure the nut is tight to avoid shaking of the heater.

REMOTE

When the heater power is on, the remote control can be used to operate the heater from up to 4m away.

 
If there are two or more heaters within this distance all will be operated by the same remote control.

Replacing the battery

Release battery slide by pressing on the tab as shown in Fig. 2.


Remove the battery and replace with an equivalent CR2032 type battery.

Note: Your remote control will be supplied with a battery.

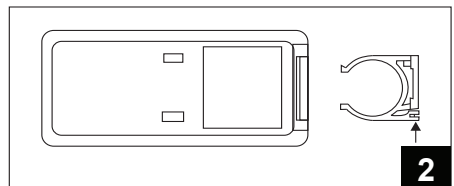


OPERATION

 DISPLAY

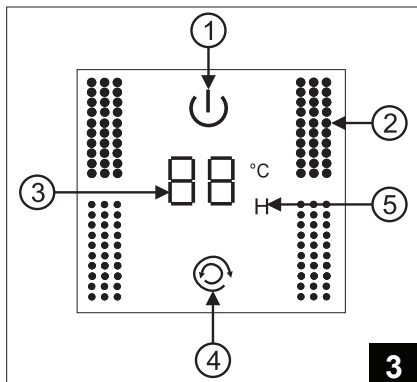

1. ON/OFF indicator light
2. Power setting.
3. Temperature / timer setting
4. Oscillation mode indicator light
5. Timer indicator light

 CONTROL

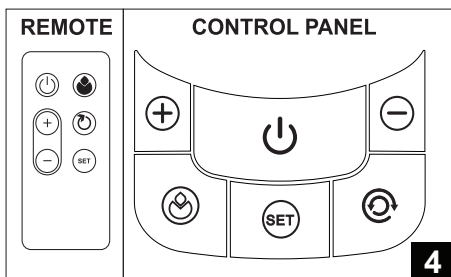

BUTTON LIST

Controls and operation for both remote control and control panel are identical.



ON/OFF. Press to switch between standby and ON modes



POWER. Press to shift between low (1100W) and high (2000W) heating power



OSCILLATION. Press to make the heater rotate from side to side. Heater has an 80° oscillation angle.

BUTTON LIST CONT.



SET. Press once to enter into timer setting mode, and twice to enter into temperature setting mode.



UP. Press to increase temperature / timer setting.



DOWN. Press to decrease temperature / timer setting.

OPERATION

1. Press Power switch on the back of the heater, to begin use. The heater will make a 'beep' and enter into standby mode.
2. Press the ON/OFF button turn ON the heater.

TIMER SETTING MODE

1. Press the SET button once to enter into timer setting mode. The temperature / timer setting light will flash on the display panel.
2. Press the UP and DOWN buttons to set the time before the heater automatically enters standby mode. Pressing UP and DOWN will increase and decrease the time by 1 hr increments. Timer range is 1-12hrs.
3. If there is no operation of the buttons after 4 seconds the timer will be set. The display will now cycle between the current room temperature and the timer countdown.
4. Reset the timer by re-entering the timer setting mode and using UP and DOWN to set a desired time.
5. To cancel the timer setting, set the timer to zero hours

OPERATION CONT.

TEMPERATURE SETTING MODE

The heater has a temperature sensor.

When the room temperature reaches the set temperature, the heater will automatically switch to standby mode. Once the room temperature has cooled by 2°C the heater will automatically turn ON. The heater will not judge the temperature within 10s of the heater turning on.

To set a desired temperature:

1. Press the SET button twice to enter into temperature setting mode. The temperature/timer setting light will flash on the display panel.
2. Press UP and DOWN to set the desired temperature. Pressing the UP and DOWN buttons will increase and decrease the temperature by 1°C increments. Temperature set range is 15°C to 35°C.
3. Press the SET button to quit the temperature setting mode or wait 4 seconds. The room temperature will be displayed.
4. Reset the temperature by re-entering the temperature setting mode and using the UP

CLEANING AND STORING

Make sure that the device is switched off before cleaning.

Wipe the surface of the heater by using a clean damp cloth.

Do not use chemical liquids when cleaning the heater.

Do not submerge the heater in water.

Make sure that the heater has cooled down completely before storing. Storing in its original packaging is highly recommended.



Waste electrical products must not be disposed of with household waste. This product should be taken to your local recycling centre for safe treatment.

WARRANTY

In this warranty:

We or **us** means Seeley International Pty Ltd. ABN 23 054 687 035, and our contact details are set out at the end of this warranty;

You means you, the original end-user purchaser of the Goods;

Supplier means the authorised distributor or retailer of the Goods that sold you the Goods in Australia; and

Goods means the product, unit, appliance or equipment which was accompanied by this warranty and purchased in Australia.

Our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Goods repaired or replaced if the Goods fail to be of acceptable quality and the failure does not amount to a major failure.

In addition to any rights and remedies that You may have under the Australian Consumer Law or any other law, subject to the terms of this warranty, We provide the following warranty:

1. If, during the first 24 months from the date of first retail purchase (Warranty Period), the Goods upon examination prove defective by reason of improper workmanship or material, We will replace the Goods or any part thereof without charge. We may substitute with any similar Goods (including a panel heater, or a portable heating product of a different size or shape), even if it is not on our current price/equipment list. Alternatively, we may arrange a refund of the purchase price you paid.
2. We are under no obligation to replace the Goods under clause 1 if the Goods have not been used only for personal, domestic or household purposes and have not been installed/mounted (if relevant), operated, and maintained in accordance with the instructions in the Owner's Manual. The addition of any third party device or the removal or the alteration of any of our components will void this warranty. In addition, the warranty granted under clause 1 does not apply to:
 - Adjustments necessary due to misuse of the appliance,
 - Normal user maintenance,
 - Setting of controls,
 - Transit damage, or
 - Damage caused by user misuse, tampering, or failure to observe the care and special provisions in the instructions.
3. The warranty granted under clause 1 is limited to replacement only. As far as the law permits, We will not be liable for any consequential loss suffered through, or resulting from, the non operation, or ineffective operation of the Goods. The warranty granted under clause 1 does not cover damage to the Goods or other loss resulting from acts of God.
4. No other person, firm or corporation is authorised by us to offer or give on our behalf any other or greater warranty than that given under this warranty. The benefits conferred by this warranty are in favour of You and any person deriving title to the Goods through or under such person and are intended to be separate from and additional to all other rights and remedies that they may have in law in respect of the Goods.
5. We are not responsible in any way for any failure and/or inadequate performance of the Goods which arises from or is connected to the use in the Goods of non-genuine spare parts. We strongly recommend that only spare parts supplied or approved by us are used in the Goods.

WARRANTY CONT.

- 6. In order to claim under the warranty granted under clause 1 You must within the Warranty Period return the Goods to the Supplier at the place of purchase together with the proof of purchase.
- 7. Alternatively, you may claim under the warranty granted under clause 1 by within the Warranty Period returning the Goods to us at the address below together with: (i) a covering letter which states your name and address, daytime telephone number, and model and serial number of the goods, (ii) the legible and unmodified proof of purchase, which clearly indicates the name and address of the original retailer, the date and place of purchase, and the product name or other product serial number, and (iii) a copy of the completed Warranty Information below.
- 8. This warranty does not cover the cost of claiming under the warranty, it is your responsibility to cover all forwarding and freight costs incurred in returning the Goods to the Supplier at the place of purchase or us.
- 9. This warranty is only valid and enforceable in Australia.

Our liability under this warranty is limited to the extent permitted by law. That is, to the extent that it is fair and reasonable, if the Goods are not of a kind ordinarily acquired for personal, domestic or household use or consumption, your remedies associated with any failure or defect of the Product will be limited to:

- (a) the replacement of the Goods or the supply of equivalent goods;
- (b) the repair of the Goods;
- (c) the payment of the cost of replacing the Goods or of acquiring equivalent goods; or
- (d) the payment of the cost of having the Goods repaired and subject to the terms and conditions included in this warranty.

For technical assistance before returning the product please contact:

1300 650 399

Please retain your receipt as proof of purchase. Every request for warranty must be accompanied by proof of purchase.

Complete the following for your records:

Serial Number	_____
Product	Convair Ceramic Tower Fan Heater
Model:	CTH05
Purchased from	_____
Date purchased	_____

You can also register your warranty with us on our website.

Service Department

Seeley International Pty Ltd
112 O'Sullivan Beach Road
Lonsdale, South Australia 5160

Technical assistance in Australia: 1300 650 399

Website: www.seeleyinternational.com

It is the policy of Seeley International to introduce continual product improvement.
Accordingly, specifications are subject to change without notice.
Please consult with your dealer to confirm the specifications of the model selected.



Warranty Service
Australia 1-300-650-399
seeleyinternational.com

convair®