

Motherboard

H110

User Manual


Contents

Item Specifications.....	1
Install CPU & Fan.....	3
Install Memory.....	4
Back Panel Connectors.....	5
USB 2.0 Port.....	5
USB 3.0 Port.....	5
VGA Port.....	5
HDMI Port.....	5
RJ45 LAN Port.....	6
Audio Port.....	6
Internal Connectors.....	7
F_PANEL1 Connector.....	7
SPK2 Connector.....	7
F_AUDIO1 Connector.....	7
Storage Ports.....	8
M.2 Slot.....	8
Clear CMOS.....	8
ATXPWR.....	9
Fan Connectors.....	10
USB Connectors.....	10
BIOS Setting.....	11
BIOS Setup.....	11
Enter BIOS Setup.....	12
Reset BIOS.....	12
Frequently Asked Questions (FAQ).....	13
Can't Boot.....	13
Start-up and then Shutdown.....	13
No Display.....	14

Item Specifications

H110 Motherboard			
Processor	Support Core/Pentium/Celeron 6th,7th,8th,9th CPU processor with LGA 1151 pin series		
Southbridge	H110Chipset		
RAM	Technology	Dual channel DDR4 Desktop RAM	
	Maximum Capacity	32GB (16GB*2)	
	Memory Slot	2* DDR4 DIMM (2133/2400MHZ)	
Back Panel I/O Ports	Display Interface	1* HDMI; 1 * VGA;	
	USB	2* USB 3.0, 4* USB 2.0;	
	Ethernet	1 * 100Mbps LAN Card	
	Audio Jacks	3* Audio jacks(Line-in、 Line-out、 Mic-in)	
Internal I/O Ports	USB	1* USB 3.0, 1* USB 2.0	
	P_Audio1	1* Front Front Audio pin	
	SATA Interface	3* SATA 3.0 (6Gb/s) connectors	
	ATXPWR Interface	1*24-pin Power connector; 1*8-pin CPU Power connector	
	CPU_FAN1	1* 4-pin CPU Fan connector	
	CSYSFAN1	1* 4-pin System Fan connector	
	M.2 Socket	1* M.2 Socket (Support NGFF/NVME Protocol)	
	M.2 Switch Pin	1* JM2_1/2/3/4	
	JCMOS1	1 * Clear CMOS button	
	SPK2	1* SPEAK	
	F_PANEL1	1* System panel connector	
	PCIe Slot	1* PCIe 3.0 x16	
Environment	Temperature Range	Working Environment	Storage Environment
		Temperature: 0~50°C Humidity: 5%~95%	Temperature: -20~70°C Humidity: 5%~95%
Physical Size	Size	190mm*170mm	

Structure of Motherboard

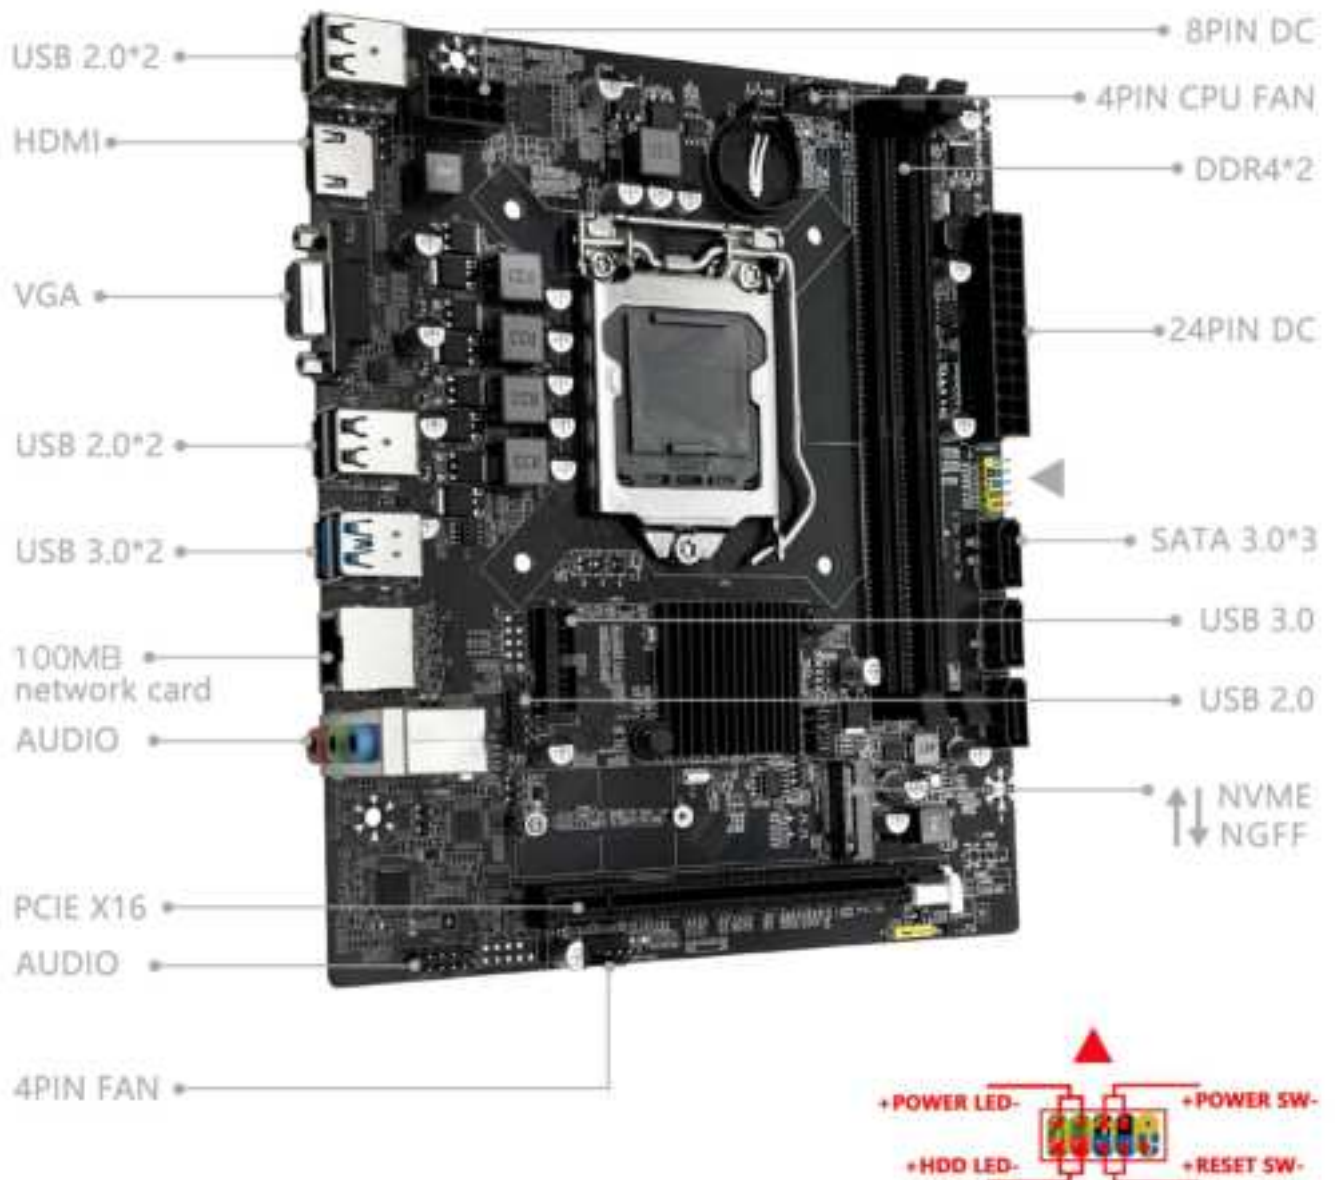


Package List:

JUXIESHI H110 Motherboard * 1
SATA Cable * 1
I/O Shield * 1

Install CPU & Fan

Please install the CPU into the CPU socket (LGA 1151) as shown below.

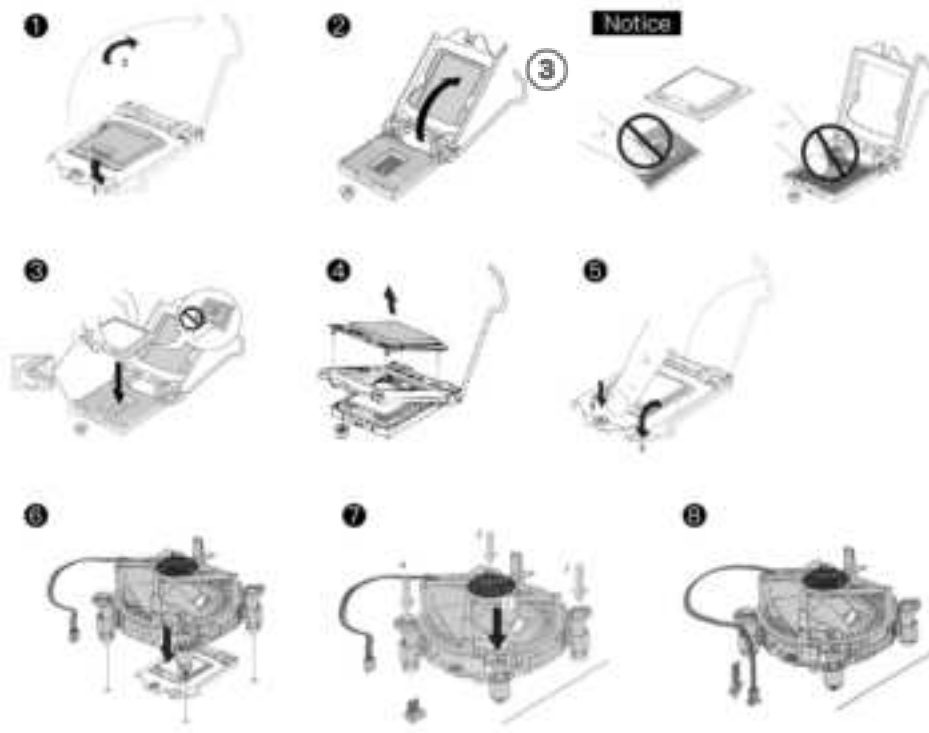


Important!

- Make sure that the motherboard supports the CPU.
- Always unplug the power cord from the power outlet before installing or removing the CPU to prevent hardware damage.
- Please retain the CPU protective cap after installing the processor.
- Do not turn on the computer if the CPU cooler is not installed, otherwise overheating and damage to the CPU may occur.
- Confirm that the CPU heat sink has formed a tight seal with the CPU before booting your system.
- Apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.
- Whenever the CPU is not installed, always protect the CPU socket pins by covering the socket with a plastic cap.
- Locate the pin one of the CPU socket and the CPU. Once the CPU is positioned into its socket, place one finger down on the middle of the CPU, lowering the locking lever and latching it into the fully locked position.
- Do not force the CPU into the CPU socket before the CPU socket locking lever is lifted up, or damage to the CPU and CPU socket may occur.
- Connect the CPU 8-pin power connector to the 8-pin CPU power header on the motherboard.
- Please be sure to plug in the 8-PIN power supply to power the CPU.

Install Memory

The motherboard provides 2x DDR4 DIMM slots, each with a maximum capacity of 16GB.

1. Wrench the latches on both sides of the memory slot outwards.
2. Insert the memory into the slot by aligning it with the notch in the slot.
3. Flip the latches on both sides of the slot to lock the memory.

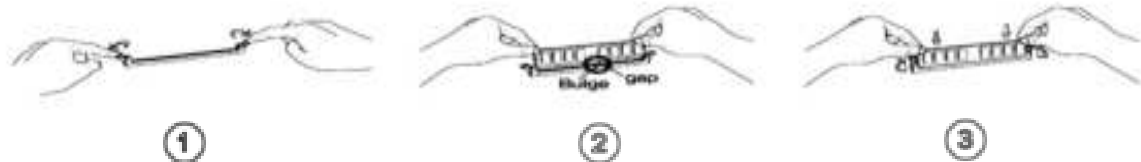


Important!

- Make sure that the motherboard supports the memory. It is recommended that memory of the same capacity, brand, speed, and chips be used.
- Always turn off the computer and unplug the power cord from the power outlet before installing the memory to prevent hardware damage.
- Memory modules have a foolproof design. A memory module can be installed in only one direction. If you are unable to insert the memory, switch the direction.
- The stability and compatibility of the installed memory module depend on the installed CPU and devices when overclocking.
- This motherboard provides two memory sockets and supports Dual Channel Technology. Dual-Channel mode cannot be enabled if only one memory module is installed.

Install Expansion Card

The motherboard provides a PCI Express 3.0 x16 expansion slot.

 Place the expansion card in an available PCI Express slot and press the expansion card until it is fully inserted into the slot.



Important!

- When adding or removing expansion cards, always turn off the power supply and unplug the power supply power cable from the power outlet to prevent hardware damage.
- If the expansion card is not installed correctly, it may cause a short circuit throughout the metal pins, which could burn out the expansion card or the motherboard.

Back Panel Connectors



USB 2.0 Port

It comes with 4pcs rear and 1pcs front USB 2.0 interfaces, those USB ports with 480Mbps fast speed and hot-swappable function allow you to connect multiple USB 2.0 devices.

USB 3.0 Port

Comes with 2pcs rear and 1Pcs front USB 3.0 interfaces, those USB ports with 5Gbps fast speed and hot-swappable function allow you to connect more devices.

VGA Port


VGA (Video Graphics Array) supports analog video signal transmission, high resolution, fast display rate and rich colors, and this set of 15-pin interfaces can connect to VGA monitors or other VGA-compatible devices.

HDMI Port


This HDMI interface supports hot-swapping and audio signal transmission functions, signal transmission up to 1080p and 4K, providing you with more delicate and clear images and a realistic visual experience while watching high-definition movies, playing games, or editing photos.

RJ45 LAN Port

The RJ45 Ethernet LAN port provides Internet connection at up to 100Mbps/s data rate. The following describes the states of how the LAN port LEDs work.

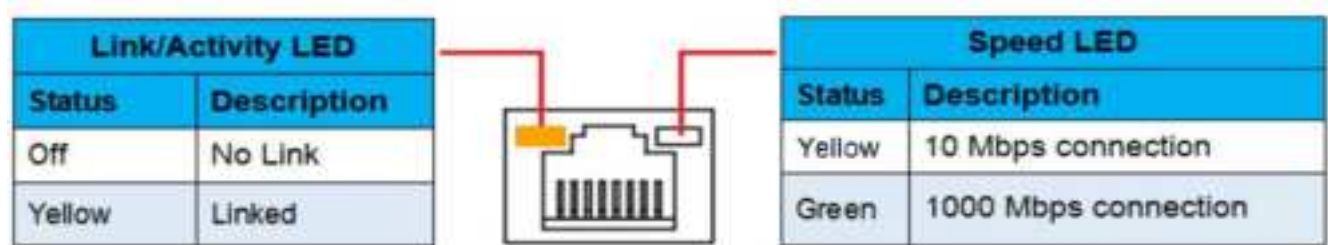


Audio Port

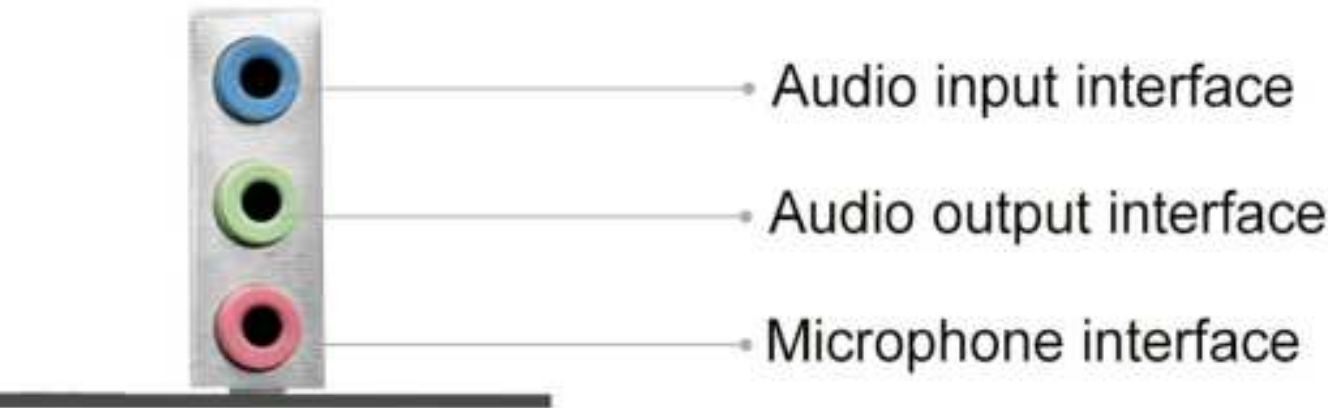


Internal Connectors

F_PANEL1 Connector

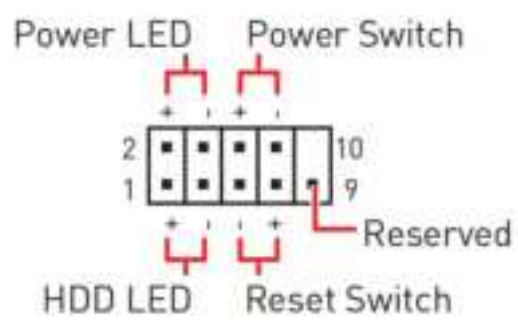


SPK2 Connector

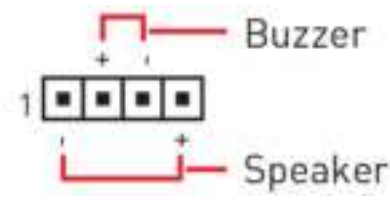

F_AUDIO1 Connector

This connector allows you to connect audio jacks on the front panel.

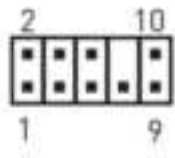
	1	MIC L	2	Ground
	3	MIC R	4	NC
	5	Head Phone R	6	MIC Detection
	7	SENSE_SEND	8	No Pin
	9	Head Phone L	10	Head Phone Detection

Important!

- An incorrect connection between the module connector and the motherboard header will make the device unable to work or even damage it.


Storage Ports

SATA1-SATA3: 3Pcs SATA 3.0 Connectors; these SATA III connectors are SATA 6Gb/s interface ports. Each SATA connector supports a single SATA device.

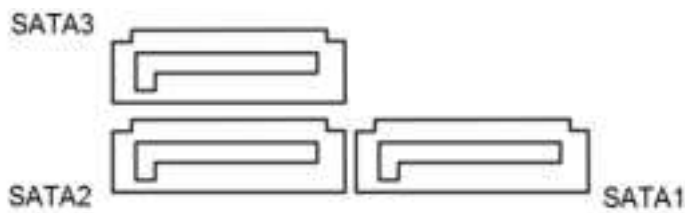

M.2 Slot

Insert your M.2 SSD into the M.2 slot at a 30-degree angle. Secure the M.2 SSD in place with the screw. (How to switch the SATA M.2 or NVME M.2 Mode? Please read the picture of the item's listing online.)

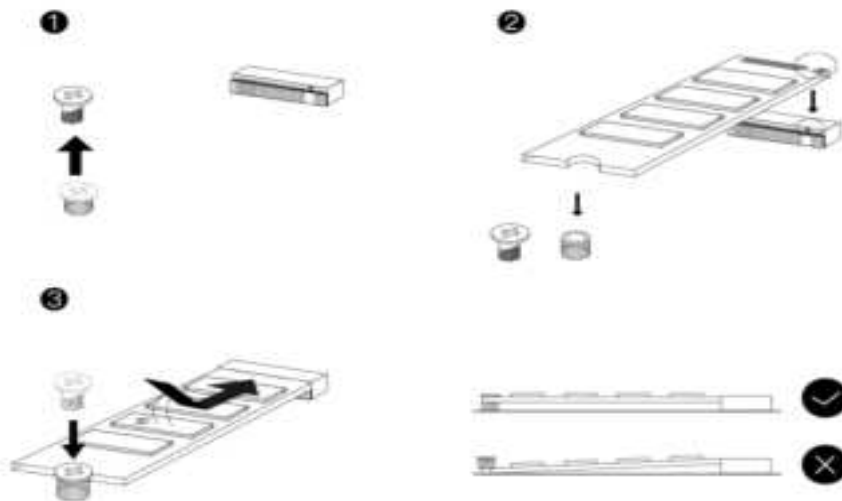

Clear CMOS

JCMOS1: CMOS jumper(If it's a 2-pin, short them for about 5 seconds.)



1.JCMOS1(Initial state)
The initial state covers "1" and "2". If you want to discharge, please go to the next step.



2.JCMOS1(Discharge)
Pull out the cap to cover "2" and "3", and wait for about 3 minutes for the discharge to complete.



3.JCMOS1(restitute)
After the discharge is completed, restore the initial state of the first step.



Important!

- Always turn off the computer and unplug the power cord from the power outlet before discharging.

ATXPWR

Motherboard and CPU Power Connectors: With the use of the power connector, the power supply can provide enough stable power to all the components on the motherboard. Before plugging the power connector, make sure the power supply is turned off and all devices are properly installed.


24PIN for motherboard power supply.


4PIN for CPU power supply.



Important!

- It is recommended that a power supply that can withstand high power consumption be used (at least 500W). If a power supply does not provide the required power, the result can lead to an unstable or unbooted system.

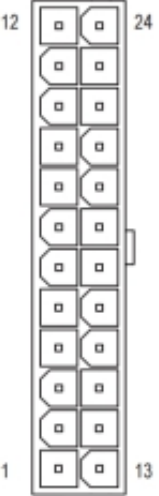 ATXPWR1	1	+3.3V	13	+3.3V
	2	+3.3V	14	-12V
	3	Ground	15	Ground
	4	+5V	16	PS-ON
	5	Ground	17	Ground
	6	+5V	18	Ground
	7	Ground	19	Ground
	8	Power OK	20	NC
	9	5VSB	21	+5V
	10	+12V	22	+5V
	11	+12V	23	+5V
	12	+3.3V	24	Ground

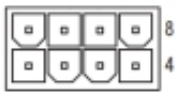 JATXPWR1	1	Ground	5	+12V
	2	Ground	6	+12V
	3	Ground	7	+12V
	4	Ground	8	+12V

Fan Connectors

CPU_FAN1 is a 4-pin interface for the CPU cooler. The 4-pin fan has no PWM speed regulation function, which can't intelligently control the fan speed based on load and temperature changes.


CSYSFAN1 is the 4-pin system fan interface also, generally connected to the chassis fan. The 4-pin fan has no PWM setting option.

 CPU_FAN	1	Ground
	2	+12V
	3	Sense
	4	Speed Control

 SYS_FAN	1	Ground
	2	+12V
	3	Sense

USB Connectors

F_USB1: Front USB 2.0 Connector, with USB 2.0 specification. This header allows you to connect USB 2.0 ports on the front panel.

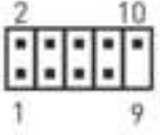	1	VCC	2	VCC
	3	USB0-	4	USB1-
	5	USB0+	6	USB1+
	7	Ground	8	Ground
	9	No Pin	10	NC

FP_USB3_1: USB 3.0 Connector, this header conforms to USB 3.0 specification. This connector allows you to connect USB 3.0 ports on the front panel.

	1	VBUS	11	D2+
	2	SSRX1-	12	D2-
	3	SSRX1+	13	Ground
	4	Ground	14	SSTX2+
	5	SSTX1-	15	SSTX2-
	6	SSTX1+	16	Ground
	7	Ground	17	SST2+
	8	D-	18	SST2-
	9	D+	19	VBUS
	10	NC	20	No Pin

BIOS Setting

BIOS (Basic Input and Output System) records the hardware parameters of the system in the CMOS on the motherboard. BIOS identifies, configures, tests, and connects computer hardware to the OS immediately after a computer is turned on..

Its major functions include conducting the Power-On Self-Test (POST) during system startup, saving system parameters, loading the operating system, etc. BIOS includes a BIOS Setup program that allows the user to modify basic system configuration settings or to activate certain system features.

When the power is turned off, the battery on the motherboard supplies the necessary power to the CMOS to keep the configuration values in the CMOS.



Important!

- Because BIOS flashing is potentially risky if you do not encounter problems using the current version of BIOS, it is recommended that you not flash the BIOS. To flash the BIOS, do it with caution. Inadequate BIOS flashing may result in system malfunction. We are not responsible for any motherboard issues caused by unauthorized BIOS Flashing.

BIOS Setup

The default settings offer optimal performance for system stability in normal conditions. Using the default settings is recommended (unless you need to) to prevent system instability or other unexpected results. Inadequately altering the settings may result in the system's failure to boot.



Important!

- As we know, the BIOS is regularly updated for better system performance. But it may be slightly different from the previous BIOS setting; therefore, we do not recommend updating immediately, the manual is just for reference.

Enter BIOS Setup

When the computer is turned on, BIOS enters the self-test process.

The following message will display after the self-test is completed: Press the " DEL " key to enter the BIOS Setup Menu. Or use the " Quick Boot Key " to press the F7.

If this message disappears before you press the key, you can turn it off and then turn on your computer or press <Reset> on the case to restart your computer. You can also press <Ctrl>+<Alt>+<Delete> at the same time to restart your computer.



Important!

- Functions may vary depending on the product you have. (If you have any troubles, please feel free to contact us.

Reset BIOS

When you need to restore the default BIOS settings to resolve certain issues, the following step for quick reset the BIOS:

- Short the Clear CMOS jumper on the motherboard.



Important!

- Be sure the computer is off before clearing CMOS data. Please refer to the Clear CMOS jumper section for resetting BIOS.

Frequently Asked Questions (FAQ)

Can't Boot

That means pressing the boot button, but the computer does not respond, the fan does not rotate, and the indicator light does not light. There are seven ways to troubleshoot as below:

1. Clear the CMOS jumper.
2. Check if the CPU is compatible with the motherboard.
3. Check if the motherboard's power and CPU power supply are plugged in, and if the case power switch is turned on or off.
4. Check if the system panel power-on cable is plugged in properly.
5. Check if the power supply you used is in good condition.
6. Remove the graphics card, hard disk, USB, and other devices, and then try to boot (it is best to use metal objects to directly short the switch pins so that you can rule out the chassis switch problem).
7. Replace other CPUs and try again.

Start-up and then Shutdown

That means pressing the power button and the fan will immediately turn off after rotating once only; And there are five ways to troubleshoot as below:

1. Clear the COMS jumper;
2. The CPU model used is not compatible;
3. Replace and troubleshoot if the CPU is damaged ;
4. Replace other memory;
5. Remove the graphics card, hard drive, and USB device and test again.

Computer Keeps Restarting

That means your computer automatically restarts or endlessly falls into the reboot loop. There are five ways to troubleshoot as below:

1. Clear the CMOS jumper;
2. Check if the CPU is compatible with the motherboard.
3. To check if the CPU is defective or not. (Replace a new one);
4. Replace the RAM and check if the RAM is bad or not compatible;
5. Remove the graphics card, hard disk, USB, and other devices, and test again.

No Display

There are two states for monitor no display as below:

State①: The fan is rotating, press the Caps Lock key, but the Caps Lock indicator of the keyboard does not respond. And there are five ways to troubleshoot as below:

1. Clear CMOS;
2. Check if the motherboard's power supply and the CPU power supply are plugged in;
3. Check if the memory stick is installed in the wrong slot; cos some motherboard's memory slots can not be randomly inserted, contact us for help, please;
4. Check if the CPU and memory model is compatible with the motherboard;
5. Replace other CPUs;
6. Replace other memory.

State②: The fan is rotating, press the Caps Lock key, and the Caps Lock indicator of the keyboard lights up. And there are five ways to troubleshoot as below:

1. Check if the monitor is turned on;
2. Check if the monitor display cable is plugged in (DP, HDMI, DVI, and VGA);
3. In the absence of a graphics card, for example, CPUs with the suffix F and Intel Xeon series CPUs do not support integrated graphics, and to use them normally, a video graphics card needs to be installed;
4. Please check if the display data cable is plugged in the correct position; If a separate graphics card is not installed, the data cable is connected to the display interface of the motherboard; If an independent graphics card is installed, the data cable should be plugged into the display interface of the graphics card;
5. Replace the data cable connected to the monitor;
6. Replace a new graphics card and test again.

Have the Blue Screen or Crash

There are six ways to troubleshoot as below:

1. To check if the motherboard's heat dissipation is normal. (For example, if the CPU cooling fan is working normally? If the base of the cooler and the CPU are tightly fitted? If the thermal paste is applied, etc.)
2. Replace the new CPU.
3. Replace the new memory.
4. Replace the new hard disk.
5. Replace the new system.
6. Replace the new power supply and test again.