


OTTO


WIRELESS ACTIVE NOISE CANCELLING HEADPHONES

PRODUCT CODE: OTPSTHPBE/
OTPSTHPGY/ OTPSTHPPK

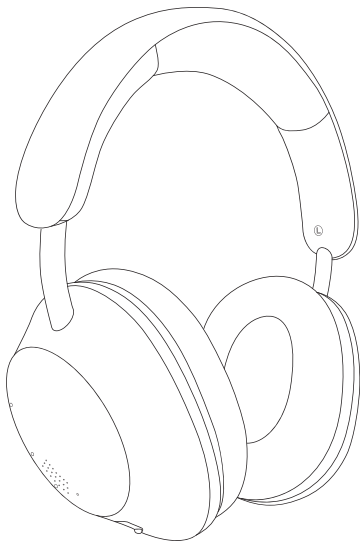

INSTRUCTION MANUAL

Product Overview

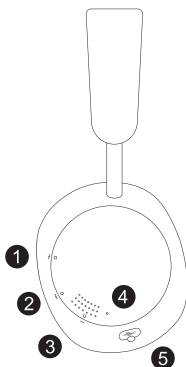

Right View

- 1 Volume up/ next track
- 2 Power on/ off
ANC on/ off
- 3 Volume down/
previous track
- 4 LED light indicator
- 5 Type-C USB charging port



Charging

- Connect the included USB cable to the charging port on the side of headphones with a working USB power source. Charging status light will turn on red and then turn blue once the charging cycle is completed.



Note: Headset will not be operated while charging.

Recharge the headphones in full before using it for the first time.


Power On / Off

- Press and hold  until “Power on” plays to turn on the headphones.
- Press and hold  until “Power off” plays to turn off the headphones.


ANC On / Off

1. Press twice  to turn on ANC function follow by the voice prompt “ANC On” with indicator in white.
2. Press twice  to turn off ANC function follow by the voice prompt “ANC Off”.




Bluetooth Pairing

1. Turn on the headphones by long-pressing . Enable the Bluetooth feature on the device and initialise the search function (indicator light flashes in blue and red simultaneously).
 2. Select Bluetooth ID “OTPSTHP” and confirm to pair with. The voice prompt “Bluetooth Connected” will be played once connected.
- Disable the Bluetooth feature on the connected device after use. By default, the headphones will automatically search and pair with the last connected device after being turned on.



Playing Music

- After pairing, launch music apps on mobile device, press  to start playing music and press again to pause.

Skipping Music Track

- Long press  to skip to the next track.
- For Android, long press  to skip to the previous track.
- For iOS, long press  twice to skip to the previous track and long press once for replay.




Volume Up / Down


- Short press once on either  or  to adjust the volume to the desired level.

Note: Control over different program may vary based on the version and setting of the program.

Hands-Free Conversation

Headphones play a ringtone when connected device receives an incoming call.

- Press  to pick up the incoming call.
- Press  again to end the phone call.
- Press and hold  to reject the incoming call.

Note: Hands-free conversation feature allows users to remotely accept voice call from direct number dial in and certain instant messaging apps by pressing  on the headphones. Some instant messaging apps do require users to confirm the acceptance of voice call within the app only.



WARNING!

TO PREVENT POSSIBLE HEARING DAMAGE, DO NOT LISTEN AT HIGH VOLUMES FOR LONG PERIODS.

Troubleshooting

Issue	Possible Cause	Solution
Audio from headphones is lagging.	<ul style="list-style-type: none">• Signal interference from surrounding environment such as cellular signal tower and WIFI broadcast antenna.	<ul style="list-style-type: none">• Leave the premises to reduce the interference.• Turn off the headphones and remove “OTPSTHP” list on your mobile device. Re-initiate the pairing process.
The headphones cannot be recharged.	<ul style="list-style-type: none">• A loose connection on USB charging cable in between charging case and USB power source.• USB power source is not working.	<ul style="list-style-type: none">• Check both connections of the USB charging cable.• Check status of the USB power source.

Headphones cannot be paired with the mobile device.	<ul style="list-style-type: none"> • The pairing steps were missed. • Previous connected devices have not yet disconnected from the headphones. • Battery level is low. 	<ul style="list-style-type: none"> • Turn off the headphones and go through the pairing steps again. • Check the bluetooth setting on the previous connected device to either turn off the bluetooth function or remove "OTPSTHP" from the list of device. • Recharge the headphones.
---	--	--

Specification

- Officeworks Product Code: OTPSTHPBE/ OTPSTHPGY/ OTPSTHPPK
- Bluetooth version: 5.3
- Built-in 300mAh rechargeable lithium battery
- Noise Cancelling Level: Up to 25dB
- Operating range: 10m
- Listening time: Up to 36 hours
- Charging time: 2 hours
- Standby time: 100 hours
- Input: 5V=1A Max.

Package Contents

- Wireless active noise cancelling headphones X 1
- USB Type-C charging cable (30cm) x 1
- Instruction manual x 1
- Quick start guide x 1



WARNING

- Do not connect this cable to products other than OTPSTHPBE/ OTPSTHPGY/ OTPSTHPPK Wireless Active Noise Cancelling Headphones. Connecting this cable to other devices might cause damage to both cable and the device.
- To prevent fire, shock hazard and damage, do not expose the unit to rain or moisture.
- To avoid electrical shock, do not open the cabinet, refer to service agent or qualified engineer only.
- Charge every 6 months to prolong the battery life when not used for extended periods.
- Do not exchange the battery in the product.
- Do not use or store the product in an environment with a temperature over 60 degree Celsius.
- Do not use the headset in a hazardous situation or so you cannot hear external sound.

USB type-C® and USB-C® are registered trademarks of USB Implementers Forum.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Officeworks Ltd. is under license.



MADE IN CHINA