 


120克书纸3折4页后再对折
折后尺寸: 100*100mm

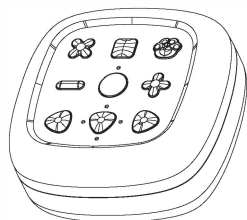

USER GUIDE

MODEL NO.: SA17

Timer Function

The default mode is uninterrupted playback, after activate the timer button, it will be:

1. On 30 minutes mode, countdown for 30 minutes playing.
2. On 60 minutes mode, countdown for 60 minutes playing.
3. On 90 minutes mode, countdown for 90 minutes playing.

Using the Light

1. White light: Six Gear Positions Brightness

Press the to turn the white light on.

If you need adjust the brightness, in the white light mode, press again to choose the desired brightness level. The White light can be turned off by long press.

2. Color light: 7-colors changing

Press the to select the color you want.

Color transformation order: Red - yellow - Navy - Green - Blue - Purple - Coral - seven colour changing
The color light can be turned off by long press.

Tips: Both lights can be turned on by short press in standby mode.

Product Function:

- 🔊 **White Noise:** Including 15 sounds. Short press to switch sound sources in turn. Music sequence the sound sources are: White noise, pink noise, Gray noise, Fan, Hairdryer, Thunder, Rain 1, Rain 2, Brook 1, Brook 2, Fire, Summer Night, Forest, Wave, Laundry machine.
- 🔊 **Recording function:** Press and hold the recording button for 3 seconds to start recording, and there will be an instruction recording notification sound. Please follow it to start recording.
 - * Recording Mode: Timing lights will light up quickly and sequentially, indicating that the recording is in progress. After the recording is completed, press any key to confirm the recording. There will be a sound: Finished Recording. The recorded message will play automatically.
 - Tips: The recorded sound will play automatically, please remember to lower down the sound machine's volume before record.
- 👶 **Child & Meditation:** Including 15 kinds of sounds. Music sequence the sound sources are: Heartbeat, Shusha, Little star, Kevin's lullaby, Brahms lullaby, Hash little baby, Nighty Night, Bottle typing (ASMR), Train, Clock, Guitar, Native American Flute, Singing Bowl, Meditative Bells, Short Meditation Music.
- ⌚ **Timer:** choose uninterrupted work all night or use 30, 60, 90 minutes Sleeping Setting.
- ☀️ **Warm White Light:** Six Adjustable Brightness Level.
- 🌈 **Seven colors mood changing light**

Recharging the battery:

1. Plug the Type-C USB cable to the USB port.
2. The power indicator will light up when charging.
3. When the charging is finished, the charging light will disappear.

Package Contents:

 
- 1 X Sound Machine (Built-in rechargeable battery)
- 1 X Type-C Charging Cable
- 1 X Owner's Manual

Note:

Use 5V charging head available to connect the provided cable for charging the battery.

Operation:

1. On/Off/ wireless speaker
2. Timer
3. Volume +/-
4. Warmlight
5. Mood light
6. Sounds options
7. The USB port (5V 1A)
8. Recording options

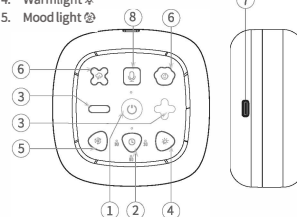

In nature sound music mode, short press On/OFF key enter the wireless speaker mode.

Preparatory steps

 
1. Unpack the product.
2. This machine is powered by the DC 5V USB port.
3. Connect the USB cable to the backside of the unit and connect into a 5V adapter.
(Please don't use 9V/12V/24V charger for this unit)

Listening to Nature Sounds

1. Press and hold "" for seconds.
2. Press relevant icon to select the sound you want to hear. You can turn the sounds off by long press the icon.
3. To adjust the volume, press the or to the desired level.
4. When finish listening to the sounds, you may turn them off by long-pressing the "".

Wireless Speaker

1. Press the ON/OFF key to turn on the speaker, if in wireless speaker mode, it will give a notification: Wireless Speaker.
2. Go to mobile's setting page and pair the SA17, after connection, it will have a connected notification.
3. Enjoy the music from your mobile phone.
4. If you need to re-pair the speaker, long-press the timer button until the power indicator LED flashes.

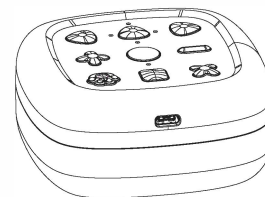

UK CE FC RoHS

MODEL: SA17

MADE IN CHINA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.