





IRRIGATION TIMER

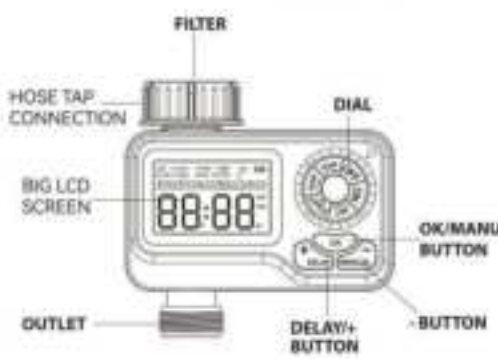

- DIAL:** Rotate the dial to customize your watering schedule.
- OK/MANUAL BUTTON:** Use "OK" to confirm the time. When the dial is turned to "ON", press and hold "MANUAL" to water manually.
- DELAY/+ BUTTON:** Use "+" to adjust the time. When the dial is turned to "ON", press and hold "DELAY" to activate Rain Delay.
- /- BUTTON:** Use "-" to adjust the time.

STEP 5: AUTOMATIC WATERING

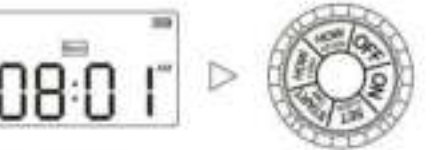

- Turn dial to "ON".
- The LCD screen will display the current time and the next time to start watering.



CONGRATULATIONS!
Your timer has now been programmed successfully. It will start watering automatically based on the programmed start time, duration and frequency.
Now you can keep the faucet turned on and trust the timer to do the watering!

FOR example: Set Clock 12:00 PM, Start Time 9:00 AM, How Often 1 Hour, How Long 1 Minute. Under normal mode, the solenoid valve will open for one minute at 9:00 AM the next day and enter the cycle, opening for one minute every hour (9:00AM, 10:00AM...)

ADDITIONAL FUNCTIONS

RAIN DELAY




Rain delay allows you to postpone watering for a set period of time, and it will not interrupt your original schedule. To access this feature, please follow the steps below:

- With the dial on "ON", press "DELAY" button for 3-5s to start the delay watering function.
- There will be a delay period on the screen which default "24H". You can press button "+" or "-" to choose the delay period from 24H, 48H, and 72H.
- Press "OK" button to run the delay function after selecting the delay time, and all watering plans will be skipped during this period.
- To remove rain delay, hold the "DELAY" button for 3-5s again to resume your programmed watering schedule.

Note: Please remember to press the "OK" button after selecting the rain delay time to start the rain delay program. Otherwise, the rain delay setting will automatically exit after the screen flashes for 3-5s.

MANUAL / HAND WATERING

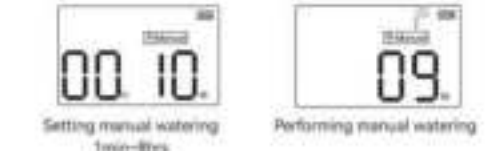


This function allows you to manually water without interrupting your set watering schedule. To access this feature, please follow the steps below:

- Turn the dial to "ON".
- Press and hold the "MANUAL" button for 3-5s to enter the Manual Watering Mode.
- Press the "+" or "-" buttons to adjust the manual watering time from 1 minute to 8 hours. (The default manual watering time is 10 minutes.)
- After setting the watering time, press the "OK" button to start manual watering and the pattern will be displayed on the screen.
- If you need to stop the manual watering, please hold the "MANUAL" button for 3-5s to exit the manual watering mode and restore the original watering program. (Or you can turn the dial to "OFF" to stop the manual watering, but please remember to turn the dial to "ON" again to restore the original watering program.)
- Long press the "+" or "-" keys to quickly accumulate or subtract.

Note: Please remember to press the "OK" button after setting the manual watering time to start manual watering. Otherwise, the manual watering setting will be automatically exited after the screen flashes for about 3-5s.


PRODUCT INSTALLATION

INSTALLING THE BATTERIES

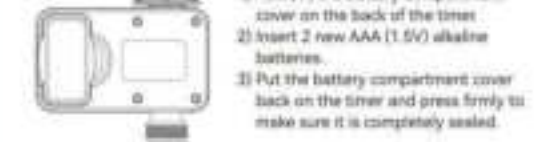

- Note:**
 - Install the battery tray cover securely after installing the battery to ensure waterproofing.
 - When the timer is not used for a long time, please remove the batteries and dispose of them properly.
 - Replace batteries when the low battery indicator appears on display.
 - Don't dispose of batteries in fire. Batteries may explode or leak.
 - To ensure a longer lifespan, please use 2 new AAA alkaline batteries. Don't mix new and old alkaline, standard (carbon-zinc), or rechargeable batteries.

INSTALLING THE TIMER

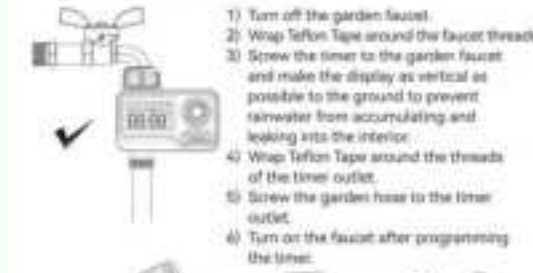

Tips: If the connection between the timer and the faucet or hose is not tight or leaking, wrap more Teflon Tape/thread seal tape to make them tight.

- Note:**
 - Please do not use tools, only install the timer by hand.
 - When expecting freezing temperatures, timers should be removed from the hose faucet and stored indoors to avoid potential freeze damage.
 - Please install the filter properly and keep it clean as follows.

ACTIVATE THE TIMER BEFORE USE

Please activate the device before using it for the first time or after a period of inactivity.




If yes, the timer valve is normal, please use it with confidence! If not, please repeat the above steps several times or contact BN-LINK support team immediately.

Note: When testing, please keep away from the water timer outlet to avoid being splashed and wet.

PROGRAMMING YOUR TIMER

STEP 1: SET CLOCK

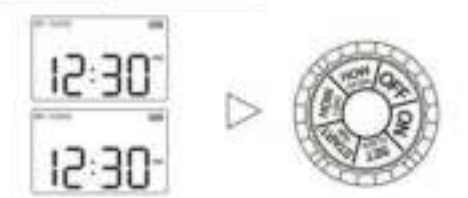

- Turn the dial to SET CLOCK.
- Use "+" or "-" buttons to select 24-hour or 12-hour format and press "OK" button to confirm.
- Use the "OK" button to switch time (Hours or Minutes).
- Turn the dial clockwise to "NO" to save the changes in this STEP and go to next STEP.
- The 24-hour system setting range is 0-23, and the 24-hour system setting range is 1-12. The minute setting range is 0-59.
- Long press the "+" or "-" keys to quickly accumulate or subtract.

Tips: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

STEP 2: START TIME



- Turn dial to START TIME.
- Use the "+" and "-" buttons to set the time you want to start watering, including AM and PM.
- Use the "OK" button to switch time (Hours or Minutes).
- Turn the dial clockwise to save the changes in this STEP and go to next STEP.
- The 24-hour system setting range is 0-23, and the 24-hour system setting range is 1-12. The minute setting range is 0-59.
- Long press the "+" or "-" keys to quickly accumulate or subtract.

Tips: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

STEP 3: HOW LONG



- Turn dial to HOW LONG.
- Use the "+" and "-" buttons to select watering duration from 1 minute to 3 hours 59 minutes.
- Using the "OK" button to switch time (Hours or Minutes).
- Turn the dial clockwise to save the changes in this STEP and go to next STEP.
- The 24-hour system setting range is 0-23, and the 24-hour system setting range is 1-12. The minute setting range is 0-59.
- Long press the "+" or "-" keys to quickly accumulate or subtract.

Tips: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

STEP 4: HOW OFTEN



- Turn the dial to HOW OFTEN.
- Use "+" and "-" buttons to set your watering frequency. You can choose to water every 1 to 12 hours, or every 1 to 7 days.
- Turn the dial clockwise to save the changes in this STEP and go to next STEP.

"How Often" can set the watering interval, with a total of 19 different intervals, which are 1 Hour, 2 Hour, 3 Hour, 4 Hour, 5 Hour, 6 Hour, 7 Hour, 8 Hour, 9 Hour, 10 Hour, 11 Hour, 12 Hour, 1 Day, 2 Day, 3 Day, 4 Day, 5 Day, 6 Day, 7 Day. Parameters can be adjusted through the "+" and "-" keys. Long press the "+" or "-" keys to quickly accumulate or subtract. Among them, the three gears of 1 Hour, 2 Hour, and 3 Hour are mutually exclusive to the time set by "How-Long". Example: How, Long is set to 1 Hour, then The minimum value of How, Often is 2 hours.

Tips: When the setup of this STEP is finished, please turn the dial to save the changes instead of press the "OK" button. If you press the "OK" button after setting, it will return to the previous setting instead of saving it.

TROUBLESHOOTING

Problem	Possible Cause	Possible Solution
The water inlet leakage	1. No filter or not be placed horizontally in the inlet. 2. The faucet is not the standard 3/4".	1. Add a filter and make sure it's placed horizontally in the inlet. 2. Make sure the faucet is a standard 3/4" faucet. 3. Wrap Teflon tape on the tap making it tight.
The water won't stop/flow out.	1. Long time in storage and transportation make the valve inactive. 2. Valve blockage.	1. Keep the tap turned off and turn the timer dial to ON. 2. Run the manual watering for 3-7s and stop it. 3. Repeat the Step 2 for 3 to 5 times. 4. Try using it normally.
No response for manual/rain delay function	1. After setting manual watering or rain delay time, without pressing OK button to save and run.	1. Press OK button again after the time is set to confirm.
Short battery life	1. Mixed use of old and new batteries. 2. Use the carbon batteries or rechargeable batteries.	1. Use new alkaline batteries. 2. Rechargeable batteries and carbon batteries have a short life, use the alkaline batteries instead of them.

Low water pressure	1. Filter blockage 2. Inlet pressure not sufficient to support watering needs.	1. Check if the filter is clogged. If so, clean or replace the filter. 2. Make sure the timer is installed properly and not cross-threaded. 3. Installation of a booster pump or other auxiliary equipment of increasing pressure.
LCD screen does not display	1. The battery is exhausted. 2. The display is exposed to direct sunlight.	1. Replace new 2*AAA alkaline batteries and installed correctly. 2. Avoid direct sunlight, and observe if the battery is too low.

If you need help in using the timer, please feel free to contact us.

BN-LINK INC.
Address: 17090 Castleton Dr., Suite 208, El Cerrito, CA 94530
Customer Support:
U.S. Domestic: 424-279-6074
International: +1 524-421-0367
E-mail: support@bn-link.com
Web: www.bn-link.com
Working Hours: 9 AM - 5 PM PST, Mon-Fri
Designed in California | Made in China

CLEANING YOUR TIMER

After a period of use, impurities or dirt in the water may accumulate in the timer. Therefore, the timer should be cleaned regularly to ensure its proper operation.

- Please follow these steps to clean the timer:
- Turn off the garden faucet and remove the timer. Check whether the filter at the timer water inlet has accumulated impurities.
 - If the filter is dirty, please take it out of the timer and rinse it with running water.



- Turn on the Manual Watering Mode of the timer to open the valve and check whether the water pipe of the timer is blocked. If it is blocked, please clean it gently with a small cleaning brush.



WARNINGS

- For outdoor use only. Placing the timer in the sheltered outdoors will prolong its lifetime.
- To avoid damage, please tighten it without using tools.
- The filter should be placed horizontally in the water inlet to prevent leakage.
- When low power, please replace the batteries to avoid the interruption of normal operation; when replacing the batteries, please make sure that the battery tray is dry.
- When the timer is not in use, please remove the batteries and store it indoors.
- Don't use the timer under the temperature more than 120°F(50°C), or less than 38°F(3°C).
- Don't subject the product to extreme force and shock.
- Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Never immerse the product in water.