


WIRING DIAGRAM

MODEL: PRO48

PART NUMBER 3758388 REV D

! WARNING

- This wiring information is provided for use by qualified service personnel only.
- Disconnect appliance from electrical supply before beginning service.
- Be sure all grounding devices are connected when service is complete.
- Failure to observe the above warnings may result in severe electrical shock.

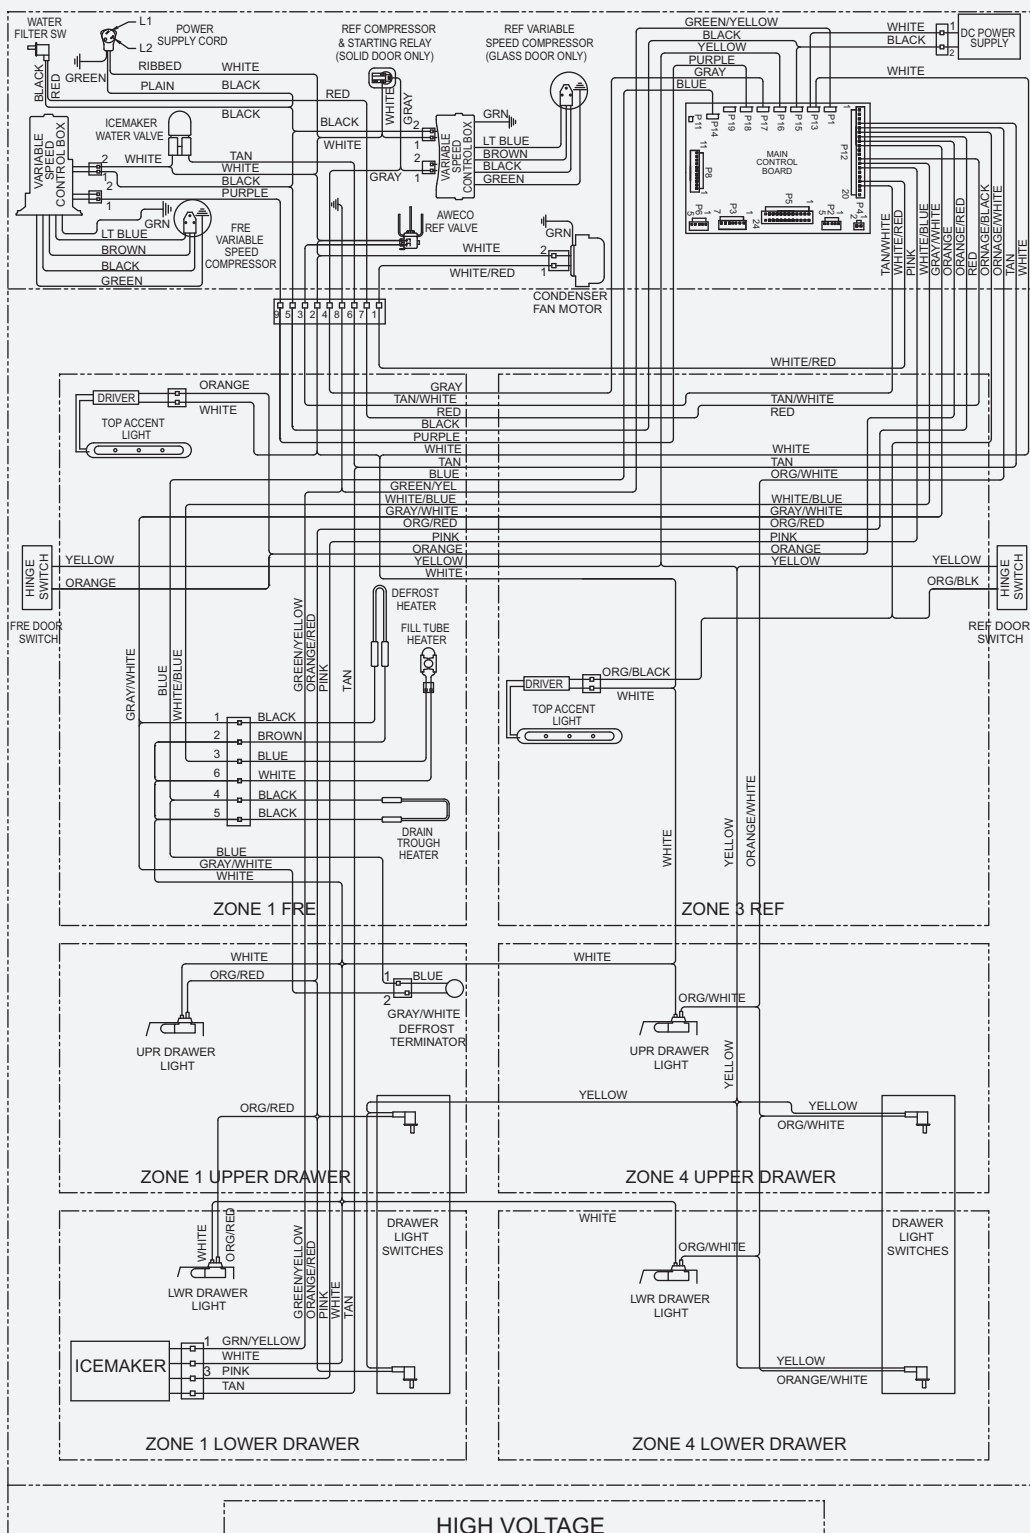


WIRING DIAGRAM MODEL: PRO48

PART NUMBER 3758388 REV D

WARNING

- This wiring information is provided for use by qualified service personnel only.
- Disconnect appliance from electrical supply before beginning service.
- Be sure all grounding devices are connected when service is complete.
- Failure to observe the above warnings may result in severe electrical shock.

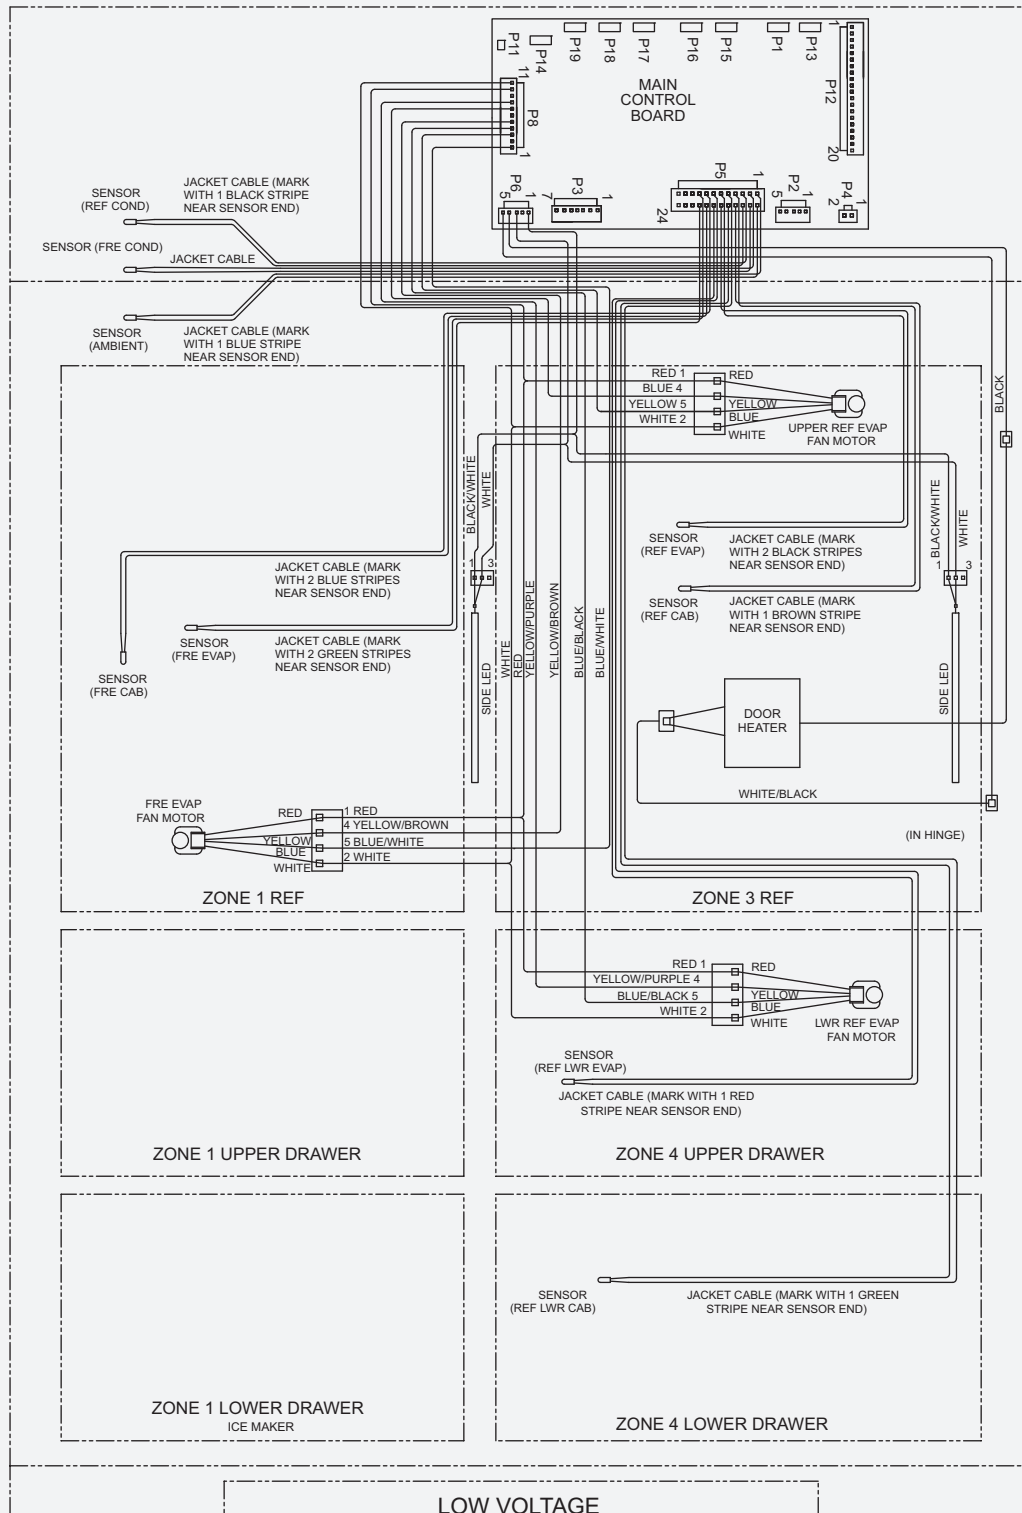


WIRING SCHEMATIC

MODEL: PRO48

PART NUMBER 3758388 REV D

! WARNING

- This wiring information is provided for use by qualified service personnel only.
- Disconnect appliance from electrical supply before beginning service.
- Be sure all grounding devices are connected when service is complete.
- Failure to observe the above warnings may result in severe electrical shock.

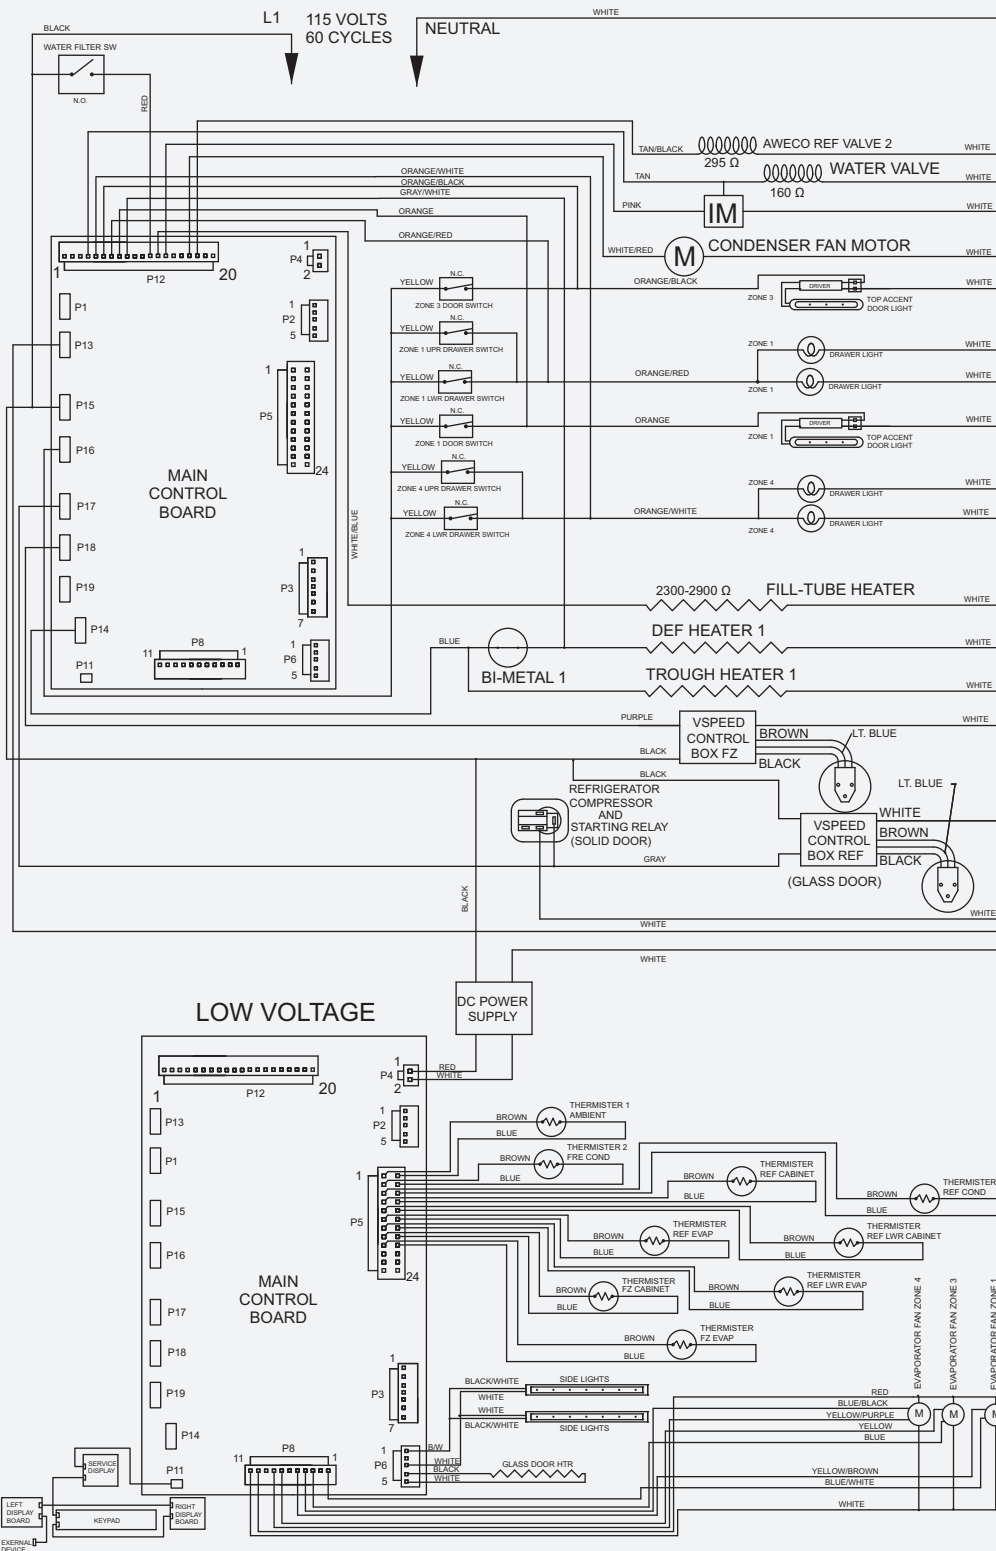

WIRING DIAGRAM MODEL: PRO48


PART NUMBER 3758388 REV D

WARNING


- This wiring information is provided for use by qualified service personnel only.
- Disconnect appliance from electrical supply before beginning service.
- Be sure all grounding devices are connected when service is complete.
- Failure to observe the above warnings may result in severe electrical shock.

TROUBLESHOOTING


To enter the Service Mode press and hold COLDER and then press POWER.
To exit the Service Mode press ICE MAKER as needed.

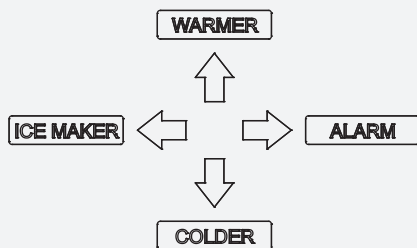

SERVICE MODE MENU

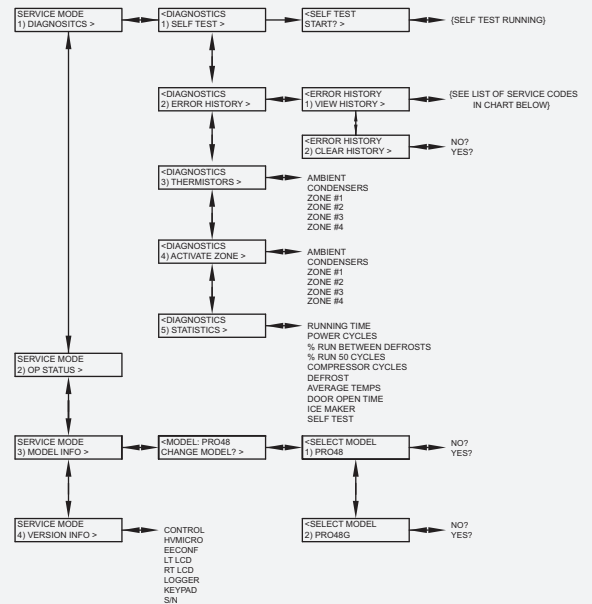

CONTROL CIRCUITS

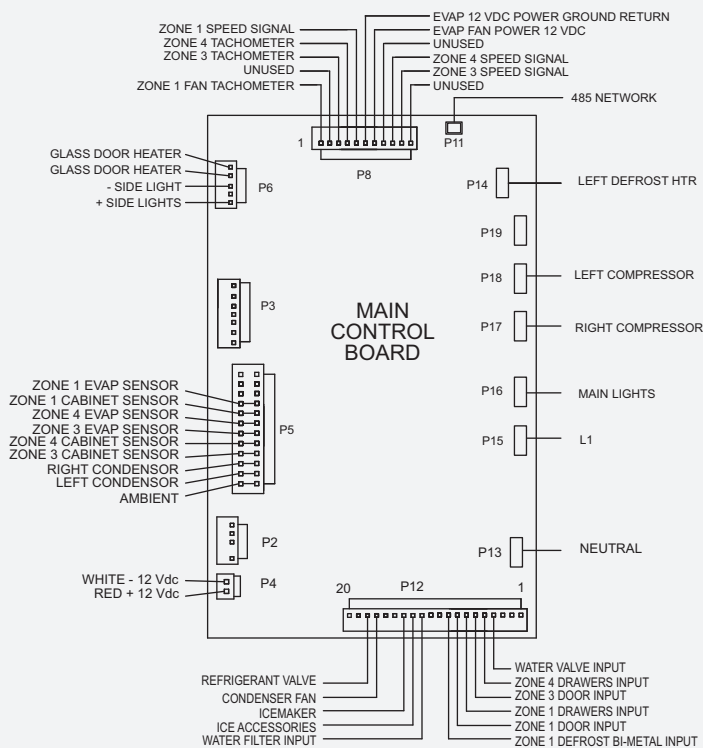

PRO48/PRO48G ZONES

