

This manual will explain the basic installation and operation of ZORAC® F Series Chair.
Click the video online: <http://www.youtube.com/DKRaceEurope>



01 Contents

Contents	01
English language contents	01

Further instructions	11
Instructions during use	11

Check Various Accessories	02
Chair accessories	02
Other accessories	03
Quick Reference Guide	03

Assembly Instructions	04
Chair assembly	04
Attach headrest cushion	08
Attach lumbar cushion	09

Product Specifications	10
Detailed specifications	10

English

 
Please check and ensure that the following things are in the package.
Please call the local distributors for help if something is not included.

1. Chair accessories


☐ 1-Backrest

☐ 1-Seat

☐ 1-Base

☐ 1-Control unit

☐ 1-Hydraulic unit
Plastic cover

☐ 5-Cam bolt

☐ 1-Plastic cover left hand side

☐ 1-Plastic cover right hand side

☐ 5-Hole plastic cover

☐ 1-5/16 Allen Key

2. Other accessories


☐ 1-Hoodlum cushion

☐ 1-Lindner cushion

☐ 1-Plastic battery clip

F series Chair Quick Reference Guide

Includes the following:

- Quick Reference
Please read before using.
This file includes Chair Maintenance
and Product Specifications.
- After-sales Service Guide
Warranty card and filled in sample card included.


03 Assembly Instructions

Chair assembly

1. Attach wheels



2. Attach plastic covers on base

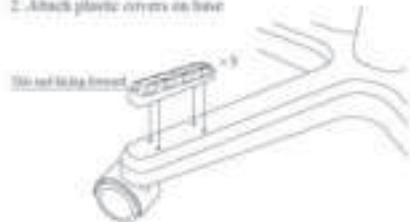


3. Install the hydraulic seat and the plastic cover



4. Attach the backrest to the seat




5. Using the M5 Allen key, remove the screws on the side of the backrest and use it to attach the backrest to the seat. (Screws come already fixed to the sides of the backrest before delivery)

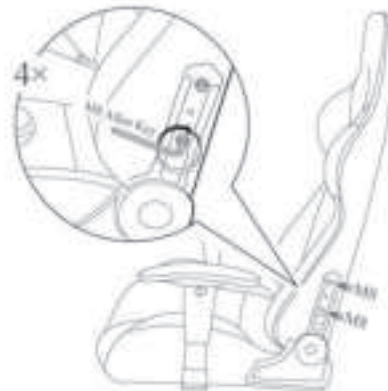

6. Fix the plastic covers onto the sides of the backrest



7. Fix the control unit to the base of the seat
(Screws have been fixed to the seat base at the factory prior to delivery. Please make the adjustment of the control unit according to the diagram.)

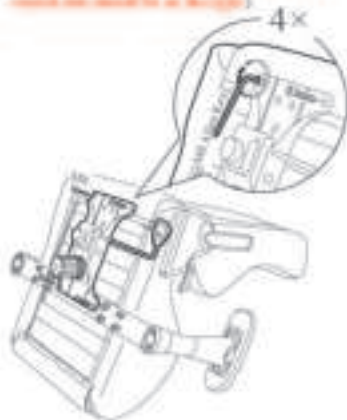

8. Insert the hydraulic unit into the opening of the control unit



Assembly
complete



Attach Headrest cushion Method One

1. Put headrest cushion on the backrest

**Attach Headrest cushion Method Two**

1. Insert the elastic through the plastic hole



2. Tighten the elastic using the butterfly clip



1. Complete the assembly as shown

**Attach lumbar cushion**

1. Lead the elastic through the aperture as shown



2. Attach belt clips together



3. Adjust cushion as desired



04 Product Specifications

Detailed specifications



- 1 565
 - 2 320
 - 3 70-100
 - 4 300-365
 - 5 320
 - 6 370-450
 - 7 50
 - 8 815
 - 9 270-350
 - 10 520
 - 11 450
- Unit: (mm)

Further instructions

Instructions during use

Instructions during use

1. Please move the product gently to avoid collisions.
2. Please keep out of direct sunlight.
3. Please ensure the centre of gravity is on the hydraulic seat during use.
4. Please watch your fingers when adjusting the backrest angle.
5. Please toggle the handle under your seat when adjusting the chair height. Do not to press it down roughly.
6. Please tilt the lever gently to raise or lower the height of the chair. Do not pull it roughly.
7. Do not place any heavy objects on the chair or armrests.
8. Plastic parts will split if chair is exposed to direct sunlight.
9. Please do not use abrasive cleaners on the chair.
10. We recommend you use Pledge to clean the chair.