#### **BEFORE USE**

#### **IGNITION BATTERY**

1. Install one AA battery for the electronic ignition located inside of the unit (AA battery included). Unscrew igniter cap counterclockwise, insert battery with positive side facing out, then tighten igniter cap back on (make sure the battery is installed the proper direction). [Figure 1]

#### **CHARGING THE AUDIO BATTERY**


- 1. Before using your Ukiah Co. audio system, fully charge the lithium-ion battery by plugging the charging cable provided into the charging port on the unit. [Figure 2]
- The LED INDICATOR on the charger will turn RED when the battery is charging.
- The LED INDICATOR will turn GREEN when the battery is fully charged.

The battery will run for up to 20 hours on a single charge. The unit can be operated while connected to the charger. The internal battery powers the audio system only and is not needed for "Fire Only" mode.


MARNING – Charge the battery by using only the original charging cable supplied. Using another charging cable may harm the battery.

#### LAVA ROCK/GLASS MEDIA

1. Open the bag containing the decorative glass or lava rock and carefully place in the burner tray, making sure not to cover the screen that protects the ignition system or the holes of the burner. If the burner holes are covered, the flames will not react to music and sound as intended. Replace magnetic lid if applicable to keep media contained for transportation.

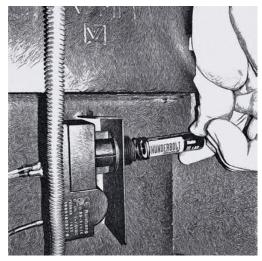


[Figure 1] - Install one AA battery.

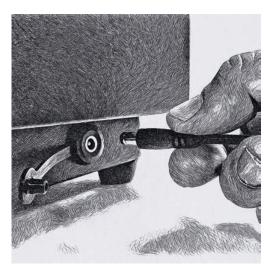


[Figure 2] - Lithium-ion Battery charger input.

#### SETUP INSTRUCTIONS

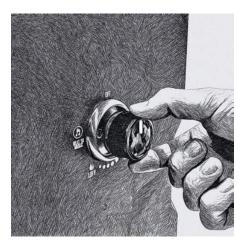

[Figure 3] - Turn gas control to "OFF".

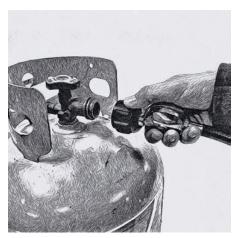

[Figure 4] - Connect supplied regulator and do not over-tighten.



[Figure 5] - Attach quick-connect end of regulator to the unit.

#### **REGULATOR CONNECTIONS:**

Your Ukiah Co gas fire pit is equipped with a specialized pressure regulator, which is a device to control and maintain uniform gas pressure as gas is released from the LP cylinder. This pressure regulator is designed for vapor withdrawal.

**WARNING**: Use only the original specially designed regulator supplied with your unit. Using another regulator may be dangerous.

**MARNING:** Use tanks that are marked "Propane Fuel" only.

**WARNING**: Read carefully all instructions contained on the information plate attached to the fire pit.

**WARNING**: Do not transport your fire pit with LP Tank connected.

- 1. Place the fire pit in the desired location. Make sure that it is placed outdoors in a well-ventilated area away from any flammable structures, awnings, vegetation, etc.
- 2. Place your 20lb LP tank in a location that is not in a walkway or where it can be easily knocked over. Maintain 60 inches between the unit and tank. For safest operation use a commonly-available LP tank holder.
- 3. Make sure the unit gas control knob is turned to "OFF" by pushing it in and turning it clockwise to the off position. [Figure 3]
- 4. Make sure the propane cylinder valve is turned off by turning valve clockwise.
- 5. While holding carrying handle closest to propane cylinder, connect regulator to propane cylinder and turn clockwise until snug (DO NOT OVER-TIGHTEN). Use only supplied regulator included with your unit. [Figure 4]
- 6. Attach quick-connect on opposite end of regulator hose to your unit. [Figure 5]

**WARNING:** Do not over-tighten or use a wrench to tighten the regulator connection. Over-tightening could damage the regulator coupling and cause a leak.

#### LP TANK REMOVAL:

When the LP tank needs to be replaced, follow these instructions to remove it.

- 1. Make sure gas control knob is turned "OFF" by pushing it in and turning it clockwise to the off position.
- 2. While holding carrying handle closest to propane cylinder with one hand, unscrew propane cylinder from regulator.

#### LIGHTING INSTRUCTIONS



[Figure 6] - Turn gas control to "OFF".



[Figure 7] - Press, hold and turn to low.

**WARNING:** Before lighting, remove weather cover and remove lid when applicable.

**WARNING:** DO NOT stand with your head or arms over the fire pit at any time.

- 1. Make sure gas control knob on unit is set to "OFF", then turn on the gas supply. Open the tank valve fully by slowly turning the handle counterclockwise. [Figure 6] Purge the gas supply line of any trapped air and check for leaks prior to the first lighting of the unit. See "Lighting Safety" section for details.
- 2. To ignite, push and hold gas control knob on unit for 3 5 seconds while turning to "LOW" and once ignited continuing to depress the gas control knob for an additional 5-10 seconds before releasing. The flame should stay lit. This will actuate the thermocouple. [Figure 7]


NOTE: The built in thermocouple safety device needs to warm up to engage, ensuring the gas will be shut off in the event of the unit being tipped over or blown out.

- 3. If igniter does not light burner, replace AA battery or use a long match or long butane lighter.
- 4. Adjust flame to desired level with the gas control knob on the unit.
- 5. After operation, turn all gas knobs to the "OFF" position and push the ON/OFF switch to off. Remember to turn the valve on top of the gas cylinder to the "OFF" position.

#### IF BURNER DOES NOT IGNITE:

If ignition is not immediate, push and turn the control knob clockwise to "OFF". The gas supply will automatically shut off after approximately 10 seconds (+/- 3 seconds) if a flame does not start or it is extinguished. If this happens, wait 5 minutes for gas fumes to clear and re-try or refer to the troubleshooting section if the unit does not re-start. If problem cannot be resolved, do not attempt to operate the appliance; contact your dealer or approved service center.

### **AUDIO SYSTEM**

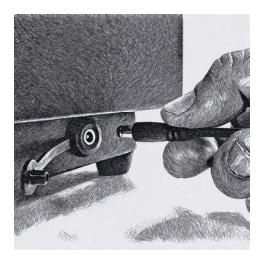

[Figure 8] - Audio battery charging port.



[Figure 9] - Audio system power button.



[Figure 10] - Audio volume control knob.

#### CHARGING THE BATTERY

Before using your Ukiah Co. audio system, follow steps on page 13 to fully charge the lithium-ion battery.

#### PAIRING TO A Bluetooth® DEVICE

- 1. Turn your Bluetooth® device OFF entirely and then turn it back ON to refresh the device's Bluetooth® memory.
- 2. Find the Bluetooth® menu in your device and make sure the Bluetooth® function is turned ON (refer to your device's user manual for instructions on finding the Bluetooth® menu).
- 3. Turn your Ukiah Co. product ON using the ON / OFF SWITCH. The audio system will say "waiting for connection". [Figure 9]
- 4. On your device, perform a Bluetooth® "device discovery" to add "UKIAH" as a new device.
- 5. When the speaker is discovered your device will display "UKIAH" in the Bluetooth® menu.
- 6. When your device is connected, the audio system will say "connected".
- NOTE: Keep the Bluetooth® function on your device ON, to ensure the speaker can automatically pair with your device the next time the audio system is turned ON.

#### **PLAYING MUSIC**

After successfully pairing the unit with your Bluetooth® device, you can begin playing music or any audio through your device's menu system (refer to your device user manual for instruction on playing music).

#### ADJUSTING THE VOLUME

The speaker volume can be adjusted by turning the volume control knob located on the front of the unit, or directly on your Bluetooth® device. [Figure 10]

WARNING: Playing music at high volumes can damage hearing.

#### USING THE SPEAKER FOR HANDS-FREE PHONE CALLS


Once your smart-phone has successfully paired with your Ukiah Co. product, you can use the speaker and built-in microphone for hands-free calls.

NOTE: The MIC is located on the front of the unit just below the volume control knob. For best call quality remain near the product.

#### **BEAT TO MUSIC OPERATION**



[Figure 11] - Beat to Music power button.

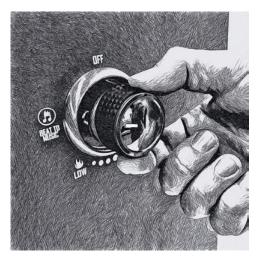

[Figure 12] - Beat to Music (BTM) gas control knob setting.

For the Tailgater II only, follow the below steps to start "Beat to Music" mode after setup and lighting in "Fire Only" mode (page 14-15). \*Beat to Music mode is only available on select models.

#### AFTER FIRE PIT IS LIT:

⚠ WARNING: Sudden flame height and regular intensity changes occur when "Beat to Music" mode is engaged. Once audio device is connected, stay clear of burner area before playing audio clip.

- 1. Push the "Beat to Music" button. Button will glow orange when ON. [Figure 11]
- 2. Turn gas control knob to the "Beat to Music" icon. When the two icons are matched, "Beat to Music" mode will be engaged and the flame will drop down to a lower height. [Figure 12]
- 3. After Bluetooth® connection is made (page 16), stand clear of fire pit and play your audio. Observe the fire reacting to the sound.
- 4. Control the sensitivity of the fire show by turning the volume up or down on your phone or media device being used.
- \* Higher volume produces a more reactive fire show.
- \* Lower volumes produce a less reactive fire show.

Fire show may vary from song to song, genre or fidelity of audio clip. "Beat to Music" works with any audio including music, audio books, pod-casts and stories.

5. Use the volume control knob on the unit to adjust speaker volume up or down.

#### POWER DOWN "BEAT TO MUSIC":

- 1. Turn off the "Beat to Music" button.
- 2. Turn gas control knob to OFF or to "Fire Only" mode.

#### **MAINTENANCE**

- 1. The appliance should be inspected before initial use and inspected at least annually by a qualified service technician.
- 2. Tampering or failure to follow all directions and warnings is DANGEROUS and voids all warranties. Any component found to be faulty or damaged must be replaced by a qualified service technician with an approved component.
- 3. This unit is designed for the valve to be fully opened from the fuel source. If not operating at full fuel flow, black smoke may start to occur. Always make certain that the valve on the gas tank is in the full open position during operation of the unit to prevent smoke.
- 4. Periodically remove the glass crystals and/or lava rock and examine the burner unit and its components. If the components are dirty, clean with soft brush and soapy water solution before carefully replacing. Also examine the area around the burner. Any dirt or foreign material, such as spider webs or nests should be removed. This will ensure trouble-free operation.
- 5. Periodically check the hose that connects to the gas cylinder to ensure that it is not cracked or damaged in any way. Perform leak tests at least annually and replace the hose when excessive wear or damage is observed.

#### **STORAGE**

#### STORAGE OR NON-USE:

- Store the LP gas tank outdoors in a well-ventilated place.
- Do not store the LP gas tank in direct sunlight or near a source of heat or combustion.
- If you intend to store the fire pit indoors, disconnect and remove the LP gas tank first. Disconnected tanks must have a dust cap installed and must not be stored in a building, garage or any other enclosed area.
- Keep out of the reach of children.
- When the LP gas tank is connected to the gas fire pit, the gas fire pit and LP gas tank must be stored outside in a well-ventilated place.

#### STORAGE INSTRUCTIONS

- 1. Do not move or store this gas fire pit until the fire has been extinguished and the appliance is cool to the touch.
- 2. Disconnect the gas source and install the valve plug in the 20lb LP tank.
- 3. Store the fully assembled unit in a ventilated location away from children and pets.
- 4. Turn power button off when not using the unit.

## **TROUBLESHOOTING**


PROBLEM	POSSIBLE CAUSE	SOLUTION
Burner won't light.	Propane cylinder is frosted over.	Wait until the propane cylinder warms up and becomes unfrosted.
	Blockage in orifice.	Clear blockage.
	Control knob is not in ON position.	Turn control knob to ON.
Burner flame is low.	Gas pressure is low.	Turn cylinder valve OFF and replace cylinder.
	Outdoor temperature is less than 40°F and tank is less than 1/4 full.	Use a full cylinder.
	Control knob not fully ON or orifices blocked.	Check control knob position and check burner and orifices for blockage.
Carbon build-up.	Blockage in burner holes.	Remove blockage from burner holes.
Thick black smoke.	Regulator hose is kinked.	Straighten hose of all bends or kinks.

#### **WARRANTY**

#### ONE-YEAR LIMITED WARRANTY

- The Limited Warranty described above is extended only to the original end-use purchaser and is non-transferable. It does not include parts or labor to repair damage caused by mishandling, accident, negligence, misuse, normal wear and tear, normal cosmetic deterioration, or damage caused by environmental conditions. While necessary repairs or maintenance on your Ukiah Co. product can be performed by any company, we recommend that you use only authorized Ukiah dealers and parts. Incorrectly performed or improper repair or maintenance voids this Limited Warranty.
- There are no express warranties except as listed above.
- The purchaser assumes all risks in the assembly, operation, and maintenance of this unit.
- Failure to follow the warnings and operational instructions contained in this manual can result in personal injury and/ or property damage.
- This Limited Warranty is in lieu or all other express warranties, and is the sole and exclusive warranty provided by Ukiah Co. Ukiah Co. disclaims all warranties for products that are purchased from sellers other than authorized distributors or retailers, including the warranty of fitness for a particular purpose or the warranty of merchantability.
- Upon expiration of this Limited Warranty, Ukiah Co. disclaims and will not be liable or responsible for any other warranty, including express and implied warranties. This means that to the extent allowed by law, starting on the applicable Ukiah Co. Limited Warranty expiration date, all Ukiah Co. Products are provided on an "as is" basis, and Ukiah Co. disclaims all warranties and conditions with respect to the Ukiah Co products, whether implied, express, or statutory, including the implied warranties of fitness for a particular purpose, merchantability, non-infringement of third-party rights, title, quiet enjoyment, availability, quality of service or results, satisfactory quality, accuracy, and any warranties arising from any course of dealing, usage or trade practice in connection with such products.
- Ukiah Co. further disclaims any implied or express warranty of, and assumes no responsibility for, defects in workmanship caused by third parties.
- In no event will Ukiah Co., its directors, officers or agents be liable to the purchaser of this device or any third party, whether in tort, or in contract, or on any other basis, for any indirect, special, punitive, exemplary, consequential, or incidental damage, loss, or cost arising in connection with or out of the sale, use, maintenance, or inability to use the product, even if Ukiah Co. or its directors, officers, or agents have been advised of the possibility of such damages, losses, or costs, or if such damages, losses, or costs are foreseeable. In no event will Ukiah Co. or its directors, officers, or agents be liable for any direct damages, losses, or costs that exceed the purchase price of the product.
- This Limited Warranty gives the purchaser specific legal rights, and the purchaser may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this Limited Warranty or the sale of products covered by this Limited Warranty.

- Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages so the above limitations or exclusions may not apply to you, and in such cases, the provisions of this Limited Warranty are in addition to and not a modification of or subtraction from any statutory warranties and other rights and remedies provided by law.
- No distributor, dealer, retailer, reseller, vendor, sales person or other person is authorized by Ukiah Co. to modify the terms of this Limited Warranty or to make any warranty, promise, or representation which is different from, in addition to, or inconsistent with the warranties, promises, or representations expressly set forth in this Limited Warranty.
- If any provision of this Limited Warranty is found to be invalid or unenforceable, then the remainder shall have full force and effect, and the invalid provision shall be enforced to the maximum extent permitted by law to effectuate the purposes of this Limited Warranty.
- This Agreement shall be governed by the laws of Washington. Unless Ukiah Co. consents in writing to the selection of an alternative forum, the Courts of Washington shall have sole jurisdiction over any dispute arising out of or in connection with this Limited Warranty or any Ukiah Co. product.

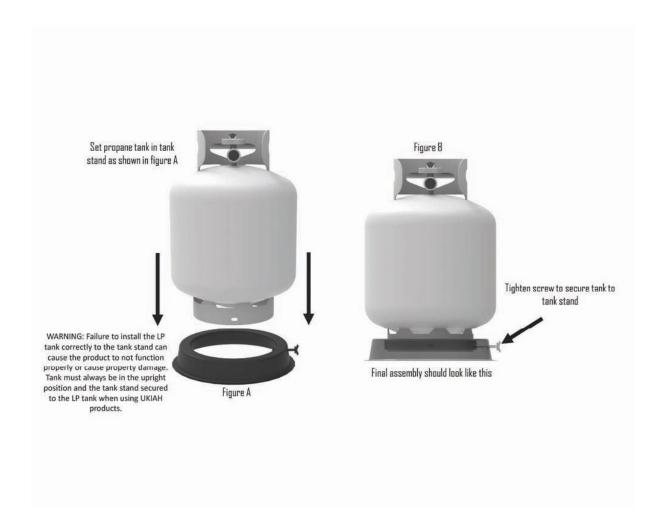

#### REPLACEMENT PARTS MAY BE PURCHASED BY CALLING: 1-844-UKIAHCO



By purchasing this unit, you agree to follow all startup and safety instructions. You also agree that this product will not be used for any other reason as it was intended. Any questions or comments about our product, please click the "Contact us" link at www.UkiahCo.com

#### **U.S. INSTALLATION CODE:**

Installation must conform with local codes or, in the absence of local codes, with the latest edition of the National Fuel Gas Code, ANSI Z223. 1/NFPA 54.

#### **CANADIAN INSTALLATION CODES:**

These instructions, while generally acceptable, do not necessarily comply with the Canadian installation codes, particularly with piping above and above ground. In Canada, the installation of this appliance must comply with local codes and/or the latest edition of Standard CAN/CSA-B149.2 (Propane Storage and Handling Code).

#### Warning:

Changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.
- " FCC RF Radiation Exposure Statement Caution: To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons."

# IMPORTANT SAFETY INSTRUCTIONS – SAVE THESE INSTRUCTIONS. DANGER – TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

This is Class 2 power supply. It is suitable for indoor use only.

Before use, the input and output technical data must be checked to secure correct use.

Do not use the transformer in the circumstances that the output polarity does not match the load polarity. The output cord cannot be replaced.

## IGNITE THE MUSIC™



www.UKIAHCO.com