



ZEBRONICS
ALWAYS AHEAD

PORTABLE BT SPEAKER
ZEB DELIGHT



User Manual

www.zebronics.com

Dear Consumer,

Thank you for purchasing **ZEB-DELIGHT** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid the self-disassemble of the product as it results in the failure of Warranty.
- Turn off the speaker if the speaker is not being used for a long period of time.

Features:

Wireless BT

Built-in FM Radio

Supports USB & mSD Card

Media / volume control

Fabric finish

Call function

Built-in rechargeable battery

Specification:

Output power (RMS) : 3W

BT Version : 5.0

Driver size : 45mm

Speaker impedance : 3Ω

Frequency response : 80Hz-18kHz

S/N Ratio : ≥ 85dB

Max Supported USB &
micro SD memory size : 32GB

Supported

Audio formats : MP3

Charging time : 2.5H

 
Playback time : 6H*

Product dimension : 118 x 39 x 79 mm
(W x D x H)

Net. weight : 185g

**at 50% volume*

Instruction of Buttons:



+ Short press to change next track / channel, long press to increase the volume

- Short press to change previous track / channel, long press to decrease the volume.

> Short press to play / pause the track, Answer / hang up the call, long press to reject the call Double Press to re-dial

M Change mode (BT, FM, USB & micro SD)

General Instruction

Bluetooth connectivity

When the speaker is in BT mode, scan for nearby bluetooth devices on your phone and connect with the device named **"ZEB-DELIGHT"**. once connected, a voice prompt can be heard.

USB Mode

Once a USB is inserted, the speaker will detect & automatically start playing songs from the USB (Plug & Play Mechanism).

Micro SD Mode

Once the micro SD card is inserted, the speaker will detect & automatically start playing songs from the micro SD card (Plug & Play Mechanism).

FM Connectivity

- Switch the speaker to FM mode using the mode (M) button.
- Connect the micro USB cable to the speaker and leave the other end open (this act as the FM antenna).
- Press the Play/Pause button once to scan the FM Channels.
- Once the scanning is done, the speaker will start playing from first saved channel.
- To Change the channels you can use the +/- buttons

TWS Mode

Turn on both ZEB-DELIGHT Speaker. Make sure that the speakers are in BT mode

Press & hold "**M**" Key on any one of the speakers to activate TWS mode.

Now, the speaker will automatically connect to each other.

Now, search for nearby BT devices in your mobile and tap on the BT name **ZEB-DELIGHT** to connect.

Charging Instruction

Connect the micro USB plug to the speaker and the other end of the charging cable to a DC 5V Adapter / A red LED would glow while charging & the LED would turn OFF once charging is complete.

