



STONE  
190 PRO

## Manual


Thank you for purchasing boat Stone 190 Pro. You are now just a step away from the realm of pure audio bliss.

Please follow this user manual carefully in case of any doubts and difficulties that arise. Please note that playtime will vary depending on the selected volume level. You can stay plugged into the sound via Bluetooth wireless technology, TF card, and AUX wire compatibility. This portable speaker has been designed with a smooth interface that requires minimum efforts.

### PACKAGE CONTENTS

- 1 x Stone 190 Pro
- 1 x User Manual
- 1 x USB Type-C charging Cable
- 1 x Audio Cable
- 1 x Catalogue
- 1 x Warranty Card

### PRODUCT OVERVIEW:

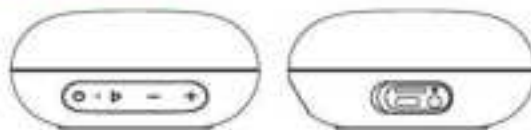

### POWER ON/OFF

Long press the Power button  to switch the speaker ON and OFF.

### BLUETOOTH PAIRING

- Long press the power button  to switch on the speaker. The speaker enters Bluetooth pairing mode automatically with blinking white LED to indicate the same.
- Activate the Bluetooth on your smartphone and search for "Stone 190 Pro" to connect.
- Select "Stone 190 Pro" from the list of available devices.

**Congratulations!** Stone 190 Pro speaker is now connected to your phone via Bluetooth indicated by a tone prompt.

**Note:**

- Stone 190 Pro remembers previously connected devices; once switched on, the speaker automatically reconnects to the previously connected devices within the working range.
- If pairing is unsuccessful, please remove "Stone 190 Pro" from the list of paired devices on your phone, bring the phone closer to the speaker and try pairing again.

### SPECIFICATIONS

|                       |                                |
|-----------------------|--------------------------------|
| Product Type          | Portable Wireless Speaker      |
| Bluetooth Version     | v5.2                           |
| Bluetooth Profiles    | BT / V3.0 + EDR + EDR          |
| Working Range         | 10 m                           |
| Driver Size           | 2"                             |
| Compatibility         | BT/AUX/TF/USB Type-C           |
| TWS Function          | Yes                            |
| Frequency             | 20Hz-20KHz                     |
| Signal to Noise Ratio | >60dB                          |
| Input Voltage         | 5 V/1 A                        |
| Output Power          | 10W                            |
| Play Time             | Up to 10 hours (At 60% volume) |
| Talk Time             | Up to 20 hours                 |
| Standby Time          | 20 hours                       |
| Charging Time         | 1.5 to 2 hours                 |
| Battery               | 800mAh                         |
| Water Resistance      | IPX6                           |

\*Playtime may vary accordingly to the music type & the volume level

### BASIC FUNCTIONS

|                                    |                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power ON/OFF                       | Long press the  button to switch the speaker ON and OFF                                                                                                                                                                                                 |
| Switch Mode                        | Short press the  button to change the connectivity mode (BT/AUX/TF Card)                                                                                                                                                                              |
| Increase Volume                    | Short press the  button in steps to increase the volume                                                                                                                                                                                               |
| Decrease Volume                    | Short press the  button in steps to decrease the volume                                                                                                                                                                                               |
| Play/Pause Music                   | Short press the  button to play/pause the track                                                                                                                                                                                                       |
| Previous Track                     | Long press the  button to return to the previous track                                                                                                                                                                                                |
| Next Track                         | Long press the  button to skip to the next track                                                                                                                                                                                                      |
| Answer Incoming Calls              | Short press the  button to answer an incoming call                                                                                                                                                                                                    |
| Hang Up Calls                      | Short press the  button to end ongoing calls                                                                                                                                                                                                          |
| Reject Incoming Calls              | Press the  button twice to reject an incoming call                                                                                                                                                                                                    |
| Redial                             | Quickly press the  button twice to redial the last contacted number                                                                                                                                                                                   |
| Voice Assistant                    | Double press the  button to activate the default voice assistant (Google voice assistant/Siri)                                                                                                                                                        |
| Disconnect/ Reconnect Media Device | Double press the  button to disconnect the current connected device.<br>Double press the  button again to reconnect the speaker with the previously paired device. |

Front

### OPERATING INSTRUCTIONS AUX MODE

- Connect one end of the appropriate cable to the AUX input of the speaker and the other to the external device.
- Short press the  button to select the AUX connectivity mode.
- In AUX mode you can control the audio playback via the media device/phone.

**Note:**

- In AUX mode it is necessary to carry out the operation directly from the connected external device.

### TWS FUNCTION

Turn on the two Stone 190 Pro speakers that you require to be forged into one, both in Bluetooth mode. You only need to set one of the two units and follow the steps below:

- Press and hold the  button on one of the speakers for about 2 seconds until you hear a beep.
- Release the  button and wait for a few seconds for the two speakers to connect.
- Enable Bluetooth on your mobile phone and search for "Stone 190 Pro" to pair.
- Select "Stone 190 Pro" to play music through the two paired speakers.

### TF CARD MODE

- Long press the power button  to switch on the speaker.
- Insert a Micro SD-card into the TF card slot and it will switch to TF card mode automatically.
- Short press the  button to play/pause audio.
- Short press the  button in steps to increase the volume level and long press it to skip to next track. Short press the  button to decrease the volume level and long press it to return to previous track.

### RESET FUNCTIONALITY

Perform the Reset function if the speaker doesn't turn off or doesn't respond properly.

**Step:** Press and hold the power button  for 8 seconds.

The Bluetooth connection history of the speaker will be cleared and go back to the default settings.

### CHARGING

- When the battery is low, the speaker will make a beep sound once every 5 minutes. After 5 such indications, the speaker will automatically switch OFF.
- Insert the provided charging cable to charge the speaker.
- When the speaker is in charging mode, the LED remains solid red. The LED indicator turns off once the speaker is fully charged.

**Note:**

- Please avoid using the speaker while it is charging, as this may decrease the battery's performance.

### WARNING:

- Please charge the speaker according to the charging norms mentioned to protect the battery.
- Please do not disassemble, repair, or modify this product by yourself without authorization.
- Please do not submerge the product in water.
- Please keep the product safe from coming in contact with liquids.
- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to extreme temperatures.
- Please keep this product away from heat sources, such as radiators, stoves, etc.
- When cleaning this product, please use a soft cloth or slightly damp cloth if necessary. Please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs at maximum volume for long time.

### Charging Items & Precautionary Guidelines

|                                               |                                                                      |
|-----------------------------------------------|----------------------------------------------------------------------|
| 1. Charger/Quick Adapter<br>2. Charging Cable | 3. V5A<br>Standard Cable (30 strands<br>40 Strands diameter strands) |
|-----------------------------------------------|----------------------------------------------------------------------|

Any other accessories can be paired up with the product as long as the specifications are as per above norms.

Back