


MAGNA-TRAP® DIRECTIONAL TOOL LOADING GUIDE

Two Disc Floor Grinders have both Left & Right Hand Discs, Requiring Left & Right Hand Tooling

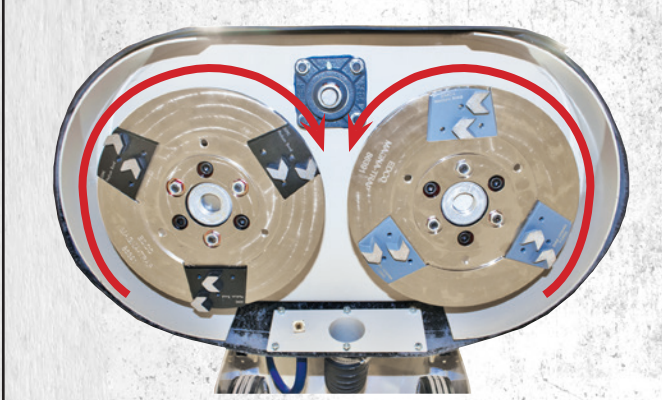


RIGHT

LEFT



OPERATOR POSITION w/DUAL-DISC GRINDER
(FROM HANDLEBARS)


Left and Right-Hand refers to the direction of the disc/tooling rotation when standing in the **Operators Position (From Handlebars)**.

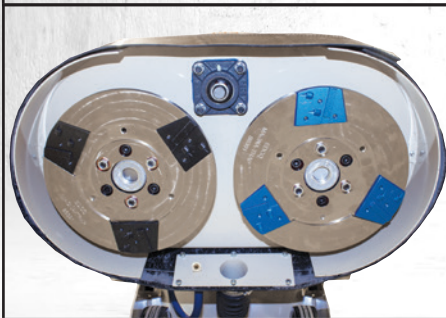

RIGHT

LEFT

DYMA-PCD W/BACKING SEGMENT
Directional Tool

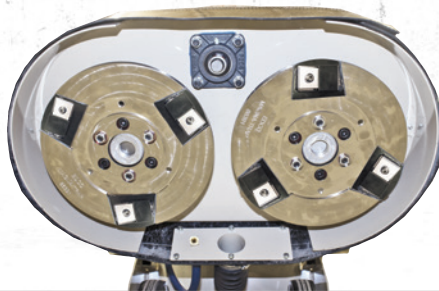

RIGHT

LEFT

MAGNA-BLADES
Directional Tool



SINGLE DISC GRINDER
w/LEFT-HAND TOOLING

DYMA-PCD W/BACKING SEGMENT
Directional Tool

TOOLING CLASSIFICATIONS:

OMNI-DIRECTIONAL TOOLING - Tooling are not specific towards the rotation of the disc. Can be loaded on both the left-hand and right-hand discs

DIRECTIONAL TOOLING - Tooling that are specific towards the rotation of the disc. **SINGLE DISC GRINDERS:** (SEC-NG, TL-9, TG-10 & TMC-7) require **Left-Hand** tooling only. **DUAL DISC GRINDERS:** (2EC-NG, 2GC-NG, 2D-HD) require both **Left-Hand and Right-Hand** tooling.

STRIP

GRIND

REMOVE