




# **INTERACTIVE CAMERA USER GUIDE**

## TABLE OF CONTENTS

- 1.1) INTERFACE
- 1.2) POWER ON/OFF
- 1.3) SD Card
- 1.4) HOME PAGE ICONS
- 1.5) BATTERY RECHARGING
- 2) CAMERA
- 3) ZOOM
- 4) VIDEO
- 5) PLAYBACK
- 6) MUSIC
- 7) TIME SETTING
- 8) SETTINGS
- 9) LANGUAGES
- 10) DEVICE RESET
- 11) BATTERY NOTICE
- 12) WARNINGS
- 13) SPLASH PROOF
- 14) DISPOSAL RESTRICTIONS
- 15) PACKAGE INCLUDES

## 1.1) Interface:

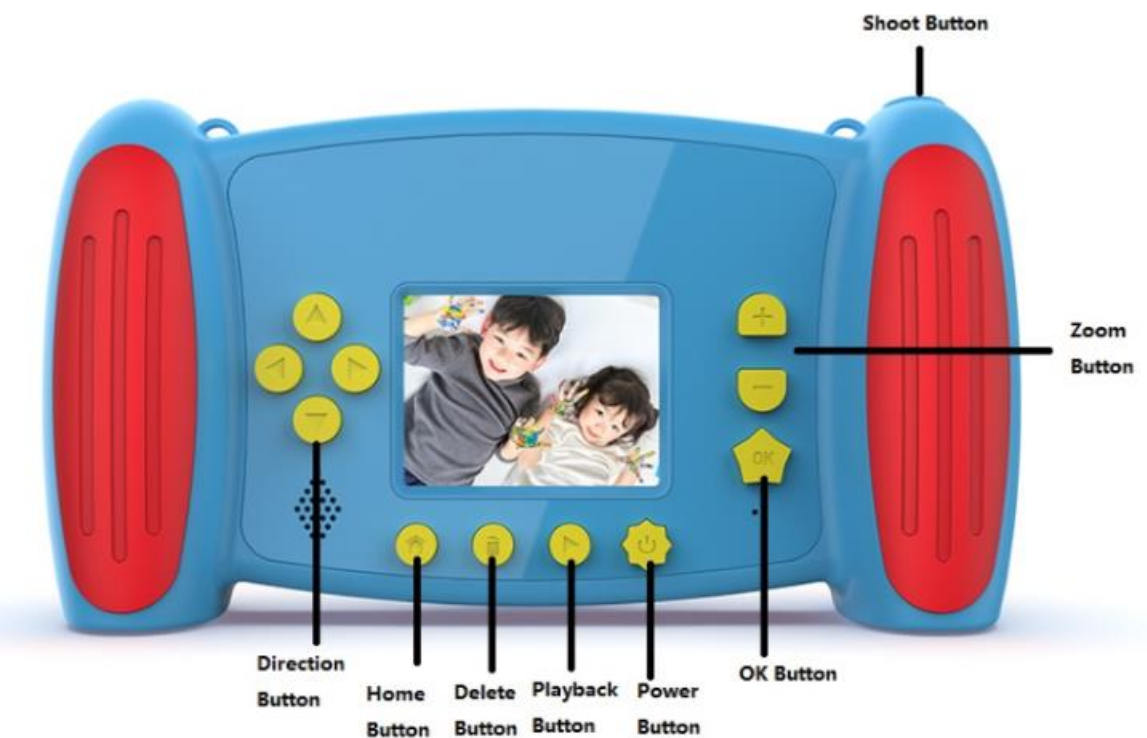

## 1.2) Power On and Power Off:

-Power on: Press and hold the power button to turn on the camera.

-Power off: Press and hold the power button to turn off the camera

## 1.3) SD Card:

-A 128MB blank Micro SD Card is already installed into the Micro SD Card Slot. To take out the card or replace new card as below:

a. To remove the card, press gently on the card until an audible “Click” is heard then take out the card.

b. To reinstall or replace the card. Insert the card (or any new Micro SD Card) into the Micro SD Card Slot with the contacts facing to display side as illustrated below:



Note:

- Before inserting or replacing a Micro SD Card, make sure the unit is powered off
- When inserting the Micro SD Card, make sure it is facing in the proper direction
- Never force a card in violently, as it may damage the card or the unit. If it doesn't fit easily, check to ensure it is facing in the correct position.

#### 1.4) HOME PAGE ICONS:



#### 1.5) Battery Recharging:

**\*Note: Adult operation is suggested.**

- Gently pull out the cover of the Micro-USB port on the bottom side of the camera.
- Insert the included Micro-USB cable (small end) into the Micro-USB port on the camera.
- Insert the large end of the Micro-USB cable on your computer or to a standard USB power outlet adapter.
- Once the connection is successful, you will see a battery-charging symbol appear on the camera screen.
- When the battery is fully charged, the charging icon will stop animating and the battery symbol on the screen will show full.
- When the battery is fully charged, disconnect the charger from the power outlet first, then disconnect the watch from the charger cable.

**Note: Please charge your camera before you use it. It takes approximately 2 hours to fully**

charge the battery.

## 2) CAMERA:



- Press the Direction buttons to select the camera icon then press the OK button to enter Camera mode.
- Press the shoot button to take a photo.
- Press the Home button to be back to the Home page.
- Press the Direction buttons to select the playback icon then press the OK button to enter Playback mode. You can check your photo now.

**Note: When camera is ON, short press the Power button to turn on the LED light, short press the Power button again to turn the light off.**

### 2.1) FRAMES:

- In Camera mode, keep short pressing the OK button to choose your desired photo frame.
- Take a photo, the photo will be with the frame.

## 3) ZOOM:


- Press the Direction buttons to select the camera icon then press the OK button to enter Camera mode.
- Press the Zoom button to zoom in or zoom out the photo.



## 4) VIDEO:

- Press the Direction buttons to select the video icon then press the OK button to enter Video mode.
- Press the shoot button to begin recording video.
- When you are finished, press the same button to stop recording video.
- Press the Home button to be back to the Home page.
- Press the Direction buttons to select the playback icon then press the OK button to enter Playback mode. You can check your video now.

#### 5) PLAYBACK:

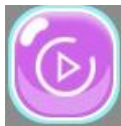

- Press the Direction buttons to select the playback icon then press the OK button to enter Playback mode.
- Press the Direction buttons to select the video or photo.
- Press the Playback button to playback the video.
- Press the Delete button to delete the video or photo.

#### 6) MUSIC:



- Press the Direction buttons to select the music icon then press the OK button to enter Music mode.
- Press the Direction buttons to select the music you want to play, then press the OK button to play the music.

**\*Note: The music file in MP4 format should be copied into the camera memory at first. Adult operation is suggested.**

#### 7) TIME SETTING:



- Press the Direction buttons to select the time icon then press the OK button to enter Time Setting.
- Press the Direction buttons and OK button to change the date and time.

#### 8) SETTINGS:



- Press the Direction buttons to select the settings icon then press the OK button to enter Settings mode.
- Press the Direction buttons to select all the menu options you want, then press the OK button to confirm the menu setting.

### 9) Language:

- The camera can support 7 languages: English, French, German, Dutch, Japanese, Traditional Chinese and Simplified Chinese.
- The default language is English.
- If you want to change the language, enter Menu Settings from the Home page, Press the Direction buttons to select the language Option.
- Press the OK button to confirm the language Option.

### 10) Device Reset:

**\*Note: Adult operation is suggested.**

There is a small hole between the USB Port and Micro SD card slot. When the camera is halted, use a toothpick or other pointy things to stick the small hole. The camera will reset.

### 11) Battery Notice:

Misuse of batteries can lead to them bursting, causing a fire or chemical burns.

Please read the below precautions:

- Do not disassemble.
- Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit.
- Do not expose to high temperatures or place near a heat source. Do not leave in direct sunlight for any length of time.
- Do not dispose of in fire.
- Do not handle damaged or leaking batteries.
- Keep the battery out of the reach of children.
- Keep the battery dry.

Examine the battery charging cord periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the output cord, housing, or other parts) and that, in an event of such conditions, the battery charging cord should not be used until properly repaired or replaced.

If you find the time between charges is considerably shortened with no change in usage, the battery could be nearing the end of its life. Please dispose of the used battery as described in this guide. The battery life varies from battery to battery depending on storage, operating conditions and environment.

## 12) WARNINGS

WARNING! Not suitable for children under 36 months. Small parts. Choking Hazard

WARNING! Long cord. Strangulation hazard.

WARNING! All of the packaging, such as tape, plastic sheets, wire ties, stickers and tags is not part of this product, please discard for your child's safety. Retain package for future reference as it contains important information. Product appearance and colors may vary from shown.

- To charge the toy use only the USB cable supplied.

- The USB cable is not a toy

- Toys liable to be cleaned with liquids are to be disconnected from the transformer and USB cable before cleaning.

- The model number or specification of a suitable transformer or power supply for use with the toy.

- This toy contains batteries that are non-replaceable.

- The transformers or battery chargers used with the toy and / or product must be regularly inspected for damage to the power cord, plug, casing and other parts, and in case of damage, they must not be used until when the damage has been repaired.




- Misuse of transformer can cause electrical shock

### 13) SPLASH PROOF

- Do not put under running water.
- Do not submerge in water and do not wear whilst showering, bathing or swimming.
- Keep the rubber cover of the Micro-USB Port closed tightly while it is not in use in order to prevent any water from getting inside the watch.

### 14) DISPOSAL RESTRICTIONS

Electrical appliances must not be disposed of in domestic waste and must be disposed of separately. You are obliged to take out the batteries, if possible, and to dispose of the electrical equipment at the communal collection points. Should personal data be stored on the electrical appliance you must remove them by yourself.

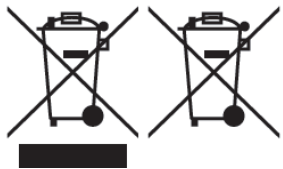

### 15) Package Includes:

Instruction x 1

USB Cable x 1 (Power input: 5.0V 0.5-2.0A)

