 
 


## Glass Jug Blender

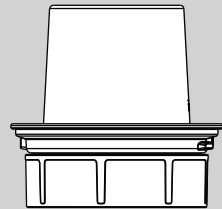

Please read and keep these instructions for future use

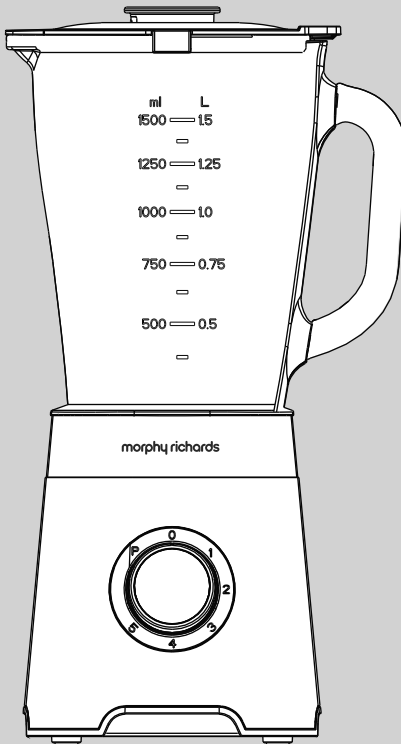

#10873409

## Important Safety Instructions

The use of any electrical appliance requires the following common sense safety rules.

**Please read these instructions carefully before using the product.**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge concerning the use of this product, unless they are supervised or have been given instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always ensure that the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by manufacturer or a qualified person to avoid an electrical hazard.
- This product is intended for household use only. Industrial or commercial use will void the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The manufacturer does not accept responsibility for any damage or injury caused by the improper or incorrect use of the appliance, or by repairs carried out by unauthorized personnel.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug or the power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire, or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of the extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Never use this unit near bathtubs, showers, basins, or other vessels containing water.
- Do not leave this appliance unattended during use. Always unplug the unit when not in use. Allow it to cool before putting on or taking off parts, and before cleaning the appliance.
- Switch off the appliance and disconnect from mains power supply before changing accessories or approaching parts that move in use.
- Always operate the appliance on a smooth, even, and stable surface. Do not place the unit on a hot surface.

## Important Safety Instructions

- In case of technical problems, switch off the machine and do not attempt to repair it yourself. Return the appliance to an authorized service facility for examination, adjustment, or repair. Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions, could affect the safe operation of this machine.
- Avoid contacting moving parts.
- Avoid overworking the motor.
- Always operate the blender with the lid in place.
- Only remove the glass jug when the motor is off.
- Blades are very sharp. Handle with care!
- Never place your hands into the glass jug while the motor is on.
- To prevent damage to the blade and/or the electric motor the appliance must not be used for blending hard and dry substance.
- To protect against risk of electrical shock do not put the electric motor unit or power cord in water or other liquid.
- To reduce the risk of injury, never place the cutter-assembly blades on the base without attaching it to the jug properly.
- **WARNING: NEVER USE HOT LIQUID OR RUN THE APPLIANCE EMPTY.**
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - Farm houses.
  - By clients in hotels, motels and other residential type environments.
  - Bed and breakfast type environments.

 
# Introduction

Thank you for your recent purchase of this Morphy Richards  
Total Control Glass Jug Blender.

# Contents

|                                     |     |
|-------------------------------------|-----|
| Important Safety Instructions ..... | 2-3 |
| Introduction .....                  | 4   |
| Product Overview .....              | 5   |
| Before First Use .....              | 5   |
| Operating Instructions.....         | 6-8 |
| Care And Cleaning.....              | 9   |
| Exclusions.....                     | 9   |
| Disclaimer.....                     | 9   |
| Guarantee .....                     | 10  |

## Product Overview

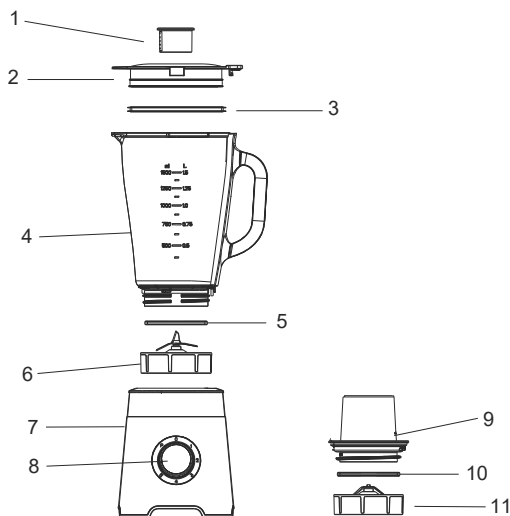

|                   |                                             |
|-------------------|---------------------------------------------|
| 1. Cap            | 7. Motor unit                               |
| 2. Lid            | 8. Speed control knob (5 Speeds with Pulse) |
| 3. Sealing ring 1 | 9. Grinder bowl                             |
| 4. Glass jug      | 10. Sealing ring 3                          |
| 5. Sealing ring 2 | 11. Grinder blade assembly                  |
| 6. Blade assembly |                                             |

## Before First Use

**You must read all instructions carefully before using this appliance.**

1. Remove all packing material and please check carefully, making sure that your blender is in good condition. It must have no cracks on the unit and no damage to the cord/plug. Do not discard any packaging until all accessories have been found.
2. You must confirm that the voltage indicated on the blender corresponds with the voltage in your home.
3. Remove any adhesive labels or stickers before use.
4. Clean the cap, lid, glass jug, grinder bowl and blades assembly before using for the first time. Only clean the motor unit with a damp cloth. Never immerse the motor unit in water or place under running water.

**Caution: Wash with care. The blades are very sharp. Never touch the blades with your finger!**

# Operating Instructions

## TO USE YOUR JUG BLENDER

### A. Jug blender:

1. Make sure the power cord is unplugged from the power outlet and the knob is in "O" position.
2. Blender assemble:
  - Place upside down the glass jug onto a flat surface, holding the jug handle, insert the blade assembly into the glass jug and lock the blade assembly by turning it clockwise until tight (See Fig. 1). To release the blade assembly, turn it in anti-clockwise direction.
  - Reposition the glass jug with its opening upwards. Wrap the sealing ring 1 around the lid and put it onto the glass jug. Place the cap exactly into the lid by fitting the small projection on both sides of the cap into the slots of the lid and turning the cap clockwise until tight (See Fig.2).
  - Finally, place the assembled glass jug onto the motor unit by aligning the strip on the assembled jug bottom (See Fig.3).

**Caution:** The glass jug and blending blade are now secured. To prevent damage, do not try to twist the glass jug and blending blade onto motor unit.

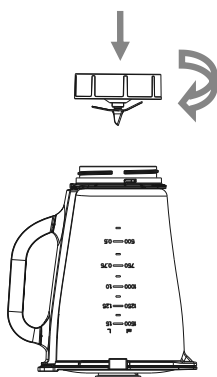 


Fig.1

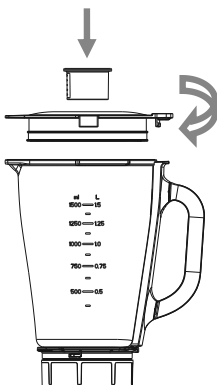 


Fig.2

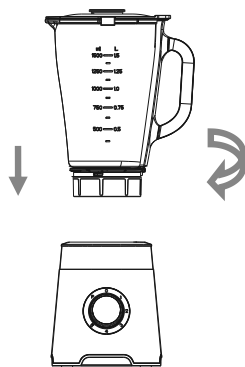 


Fig.3

3. Ensure the glass jug is in position tightly and speed selector to "O" position, then plug into power outlet and set speed selector to your desired setting.

**Note:** Make sure the lid is placed in position completely before operating, and never open the lid during operation.

## Operating Instructions

### Blender Operation

1. Peel or core the fruit or vegetables and then cut it into small pieces.
2. Place the food to be blended into the jug (See Fig.4). Usually, certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the MAX level as indicated on the jug.
3. If you want to add ingredients while the blender is operating, remove the cap and place through the lid opening (See Fig.5).



Fig. 4



Fig. 5

### RECIPE

| FOOD TYPE                 | SIZE                           | WEIGHT                        | SPEED             |
|---------------------------|--------------------------------|-------------------------------|-------------------|
| Carrot (apple, pear etc.) | Cut into<br>15mm x 15mm x 15mm | Carrot : 600g<br>Water : 900g | 5 speed           |
| Ice crush                 | 25mm x 25mm x 25mm             | 100g                          | Ice crush / clean |

**Note: Never use hot liquid or run the appliance empty.**

4. Put the lid on the jug. Be sure the cap is in place.
5. Plug the power cord into a standard wall outlet.
6. Choose the appropriate speed setting for operation.
7. For quick or delicate blending tasks, turn the key to "P" position and hold for a few seconds and then release, the key will reset to "O" position automatically. Operate several times until the consistency you want is obtained.
8. When crushing ice or hard food, keep one hand firmly on the lid.
9. When the consistence you desire is obtained, turn the speed selector to "O" position.

**Note:** \* For each use, the consecutive operation time should not exceed 2 minutes at least 10 minutes rest time must be maintained between two continuous cycles, let the unit cool to room temperature before performing next operation cycle.

\* If you want to stop the appliance during operation, turn the speed selector to "O" position anytime.

10. Turn the jug anti-clockwise and remove it from the motor unit, carefully take down the lid, then pour and serve.

## Operating Instructions

### Important Operating Tips

- For best circulation of food that are to be blended with some liquid, pour the liquid into the jug first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the jug as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 6 ice cubes. If more ice is needed, remove the cap and add cubes one by one through the lid opening.

### B. Grinder Attachment:

1. Place the motor unit on the flat horizontal surface and make sure it is unplugged.
2. Turn grinder bowl upside down and carefully unscrew the grinder blade assembly (See Fig.6).
3. Fill the grinder bowl with desired ingredients, do not fill more than half full. Screw the grinder blade assembly tightly on to the bowl (See Fig.7).
4. Turn the grinder the right way up and lock into place on the motor unit by turning clockwise (See Fig. 8). To release the grinder, turn it in anti-clockwise direction.

**Note: There is a safety interlock device at the bottom of grinder, if the grinder is not assembled in place, the grinder will not operate.**

5. Ensure the speed selector to "O" position.
6. Plug the appliance into power outlet and select the desired speed setting.
7. When the ingredients have been grounded to the desired consistency, turn the speed selector to "O" position.
8. Disconnect from power outlet once finished. Disassemble the grinder attachment from the motor unit (See Fig.9), keep the grinding bowl downward and unscrew the blade assembly by turning anticlockwise, then empty the grinding bowl and serve.
9. Do not run the appliance for more than 2 minutes per time, and only wait until the unit is cooled room temperature before performing next operation cycle.

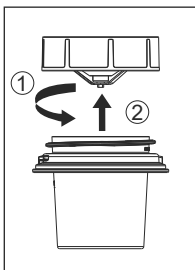 


Fig. 6

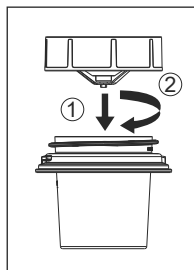 


Fig. 7

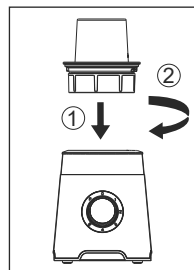 


Fig. 8

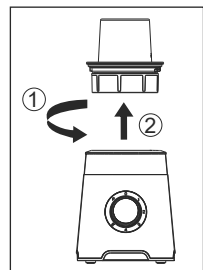 


Fig. 9

## Care And Cleaning

- Always unplug the appliance from the wall outlet before cleaning.
- Whenever possible, rinse the jug / grinder bowl unit immediately after processing to make clean-up easier.
- Quick cleaning method:  
Half fill the jug / grinder bowl with warm water and a small amount of detergent. Turn to "P" function and hold for 1-2 seconds and release, repeat 3-4 times. Then remove the jug and rinse it under running water.
- Do not fill the glass jug / grinder bowl with boiling water.
- Wash the cap, plastic lid, glass jug, grinder bowl and blade in warm soapy water. Rinse under running water and dry thoroughly. Never use rough scouring pads or abrasive cleaners on any plastic or metal parts as the surface may be damaged.
- For complete cleaning, you can put cap, plastic lid, glass jug, grinder bowl and sealing ring into the dishwasher for cleaning, they are dishwasher safe components, but the temperature setting shall not exceed 65°C.
- Never immerse the motor unit or power cord in water. Clean outside with a damp cloth and wipe with soft, dry cloth.
- Wipe any excess food particles from the power cord.
- Caution: Use extreme care when handling the Blender blade. Do not touch blades with your fingers. The Blades are very sharp and can cause injury if touched.

## Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
  2. The appliance has been used on a voltage supply other than that stamped on the products.
  3. Repairs have been attempted by persons other than our service staff (or authorized dealer).
  4. The appliance has been used for hire purposes or non-domestic use.
  5. The appliance is second hand.
  6. Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion.
- These guarantees do not confer any rights other than those expressly set out above and do not cover any claims for consequential loss or damage. These guarantees are offered as an additional benefit and do not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instruction.

## Disclaimer



Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

## Your 2 Years Warranty

**PLEASE AFFIX YOUR RECEIPT/PROOF OF PURCHASE HERE.  
IN THE EVENT OF A CLAIM UNDER THIS WARRANTY THE AFORESAID  
RECEIPT/PROOF OF PURCHASE MUST BE PRODUCED TOGETHER WITH THIS  
WARRANTY.**

|                   |                |
|-------------------|----------------|
| Model number      | (Lot number: ) |
| Product name      |                |
| Date of purchase  |                |
| Place of purchase |                |

1. The party selling the product ("the seller") to the original purchaser of this product ("the customer") hereby warrants that this product will be of good quality and, in good working order and, free of defects and suitable for its intended purpose under normal household use, for a period of 2 (two) years from the date of purchase ("warranty period") of this product.
2. In the event that the warranty period has not lapsed and the product is not of a good quality, or in good working order or, is defective or is not suitable for its intended purpose under normal household use, the customer may, subject to paragraph 3 below, return the product to the seller and have the following options available:
  - 2.1 Within the first 6 (six) months of the warranty: to receive a refund of the actual price paid or exchange the product for the same or similar product of the same purchased value;
  - 2.2 Within the second 6 (six) months of the warranty: to have the product exchanged for the same or similar product of the same purchased value.
3. The seller will not replace the product or refund the customer in terms of this warranty if the product:
  - 3.1 has been altered contrary to the instructions provided in the product manual;
  - 3.2 has been misused, abused or tampered with;
  - 3.3 is defective or not in working order due to ordinary wear and tear;
  - 3.4 is damaged resulting from the customer's gross negligence, recklessness, malicious behavior or criminal conduct;
  - 3.5 has been utilised for commercial use.
4. This warranty applies only to the product that has been purchased from the seller and not to any expendables attached to or installed on the product by the customer.
5. Any claim in terms of the warranty must be supported by the original proof of purchase.
6. Note that the exchange item will only carry the balance of the warranty period as from the original date of purchase.



