

fingers[®]



Quick Start Guide


I Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

II. In the box


- 1 x FINGERS SoundPower-20
- 1 x USB Charging Cable
- 1 x AUX Cable
- 1 x Quick Start Guide
- 1 x Brand Note

III. Connections

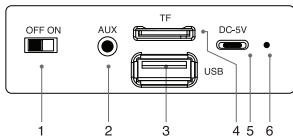

- | | |
|-------------------|----------------------|
| 1. On-Off Switch | 4. MicroSD Card Slot |
| 2. AUX Connection | 5. Charging Port |
| 3. USB Port | 6. LED Indicator |

IV. On-board Controls

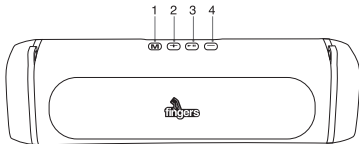

Function	What to do
1. MFB (Multi-Function Button)	
To switch between Bluetooth, USB, TF card, and AUX mode (Note: USB/TF/AUX modes can only be switched when corresponding device is inserted)	Short Press
To disconnect the Bluetooth connection and establish for Bluetooth connection with new Bluetooth device	Long Press
2. Volume Up/Next Track/Next FM Channel	
To go to Next Track/Next FM Channel	Short Press
To increase the volume	Long Press
3. Play/Pause	
To Play or Pause Music	Short Press
To Search / Save FM Channels	Long Press in FM mode
<i>Manage Calls</i>	
Receive call	Short Press
End call	Again, Short Press
Reject incoming call	Long Press
Redial last called number	Double Press
4. Volume Down/Previous Track/Previous FM Channel	
To go to Previous Track/Previous FM Channel	Short Press
To decrease the volume	Long Press

V. Charging

- A red light indicates that it is in DC charging mode.
- Once it is completely charged, the red LED glow disappears.

VI. Modes

You can enjoy your music in the following ways

i.BT ii.FM Radio iii.MicroSD iv.USB v.AUX

i. BT

- When the device is switched on, it automatically goes to BT mode.

- If any source is connected (USB, MicroSD or AUX), press **[M]** till BT Mode is heard.

- Make sure that Bluetooth is enabled on your device.

- Find the device list and select "FINGERS SoundPower-20".
A sound prompt of "Connected" is heard and it is ready to play.



Manage Calls

Can receive/end calls from the speaker if your mobile device is connected to the speaker.

ii. FM Radio

- Press on the "**[M]**" Button till the voice prompt of the word "FM Mode" is heard.

- Long press "**[▶||]**" to scan the stations automatically. You can again press the same Button to stop the scan.

- Once FM radio is tuned, you can short press "**[+]**" and "**[-]**" to select the desired FM Channel.

- Short press "**[▶||]**" to mute the FM.

Quick Tip: Plug the USB Cable to get a better FM Radio experience.

iii. MicroSD

- Insert the MicroSD card in the provided Slot.

- You can then play your favourite tracks directly from the MicroSD Card.

iv. USB

- Insert the USB device (Pen Drive) in the provided port.

- You can then play your favourite tracks directly from the USB.

v. AUX

- Insert the AUX external audio cable and the audio system will automatically play back with priority and prompt tone.

VII. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use a soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.

VIII. Product Specifications

Parameters

Wireless Protocol
Peak Output Power

Power Rating

Driver unit

Effective Range

Battery

Charging Time

Playback Time²

Playback Options

Microphone

Dimensions

Weight

Colours

SoundPower-20

Bluetooth v5.3

20 W

5 V / 1000 mA

4Ω 10 W x 2, Ø 52 mm

Wireless range up to 10 m

3000 mAh / 3.7 V

Up to 5.5 hours

Up to 9 hours

Bluetooth® | FM Radio¹ | USB | AUX | MicroSD

Built-in

80 (L) x 295 (W) x 90 (H) mm

125 g

Black



¹For FM Radio operation, USB-C cable needs to be connected as an antenna

²Tested under ideal conditions and in BT playback mode, Playback time may vary depending on usage, playback mode and volume levels,

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice.
• All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on www.fingers.co.in • This product falls under e-waste (Management & Handling) Rules, 2011, For proper disposal method, visit our website www.fingers.co.in

