




ACT RECOIL


The ACT Universal Cage Recoil Rig is a universal acra-swiss compatible shoulder rig for mirrorless and DSLRs cameras.

An ACT Recoil rig is designed for optimal balance and comfort when shoulder mounted and is easily configured to accommodate various shooting styles-tripod, cage, handheld, run'n'gun, low mode, and many more!

ACT Baseplate

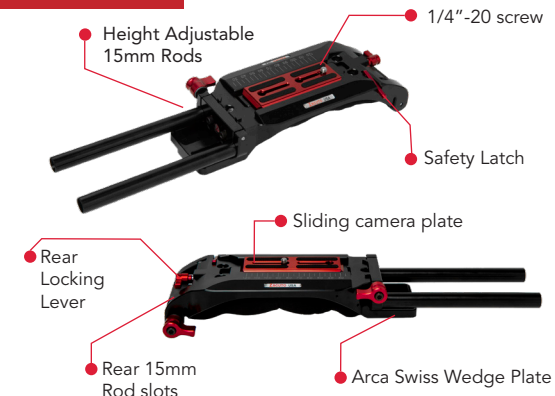

Tactical Handle

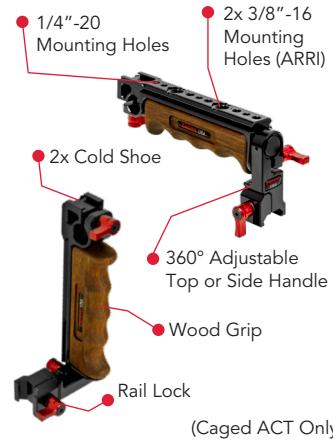

ACT EVF Pro



DSLR Cage



Axis Curve




Axis Micro




Right Trigger Grip



CAGED ACT RECOIL

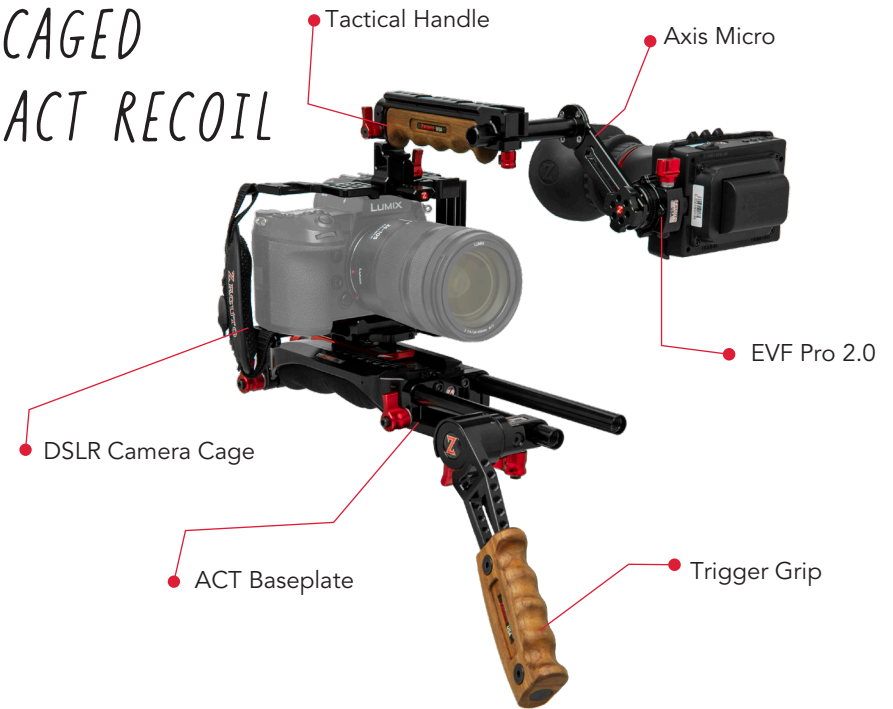


CAGELESS ACT RECOIL

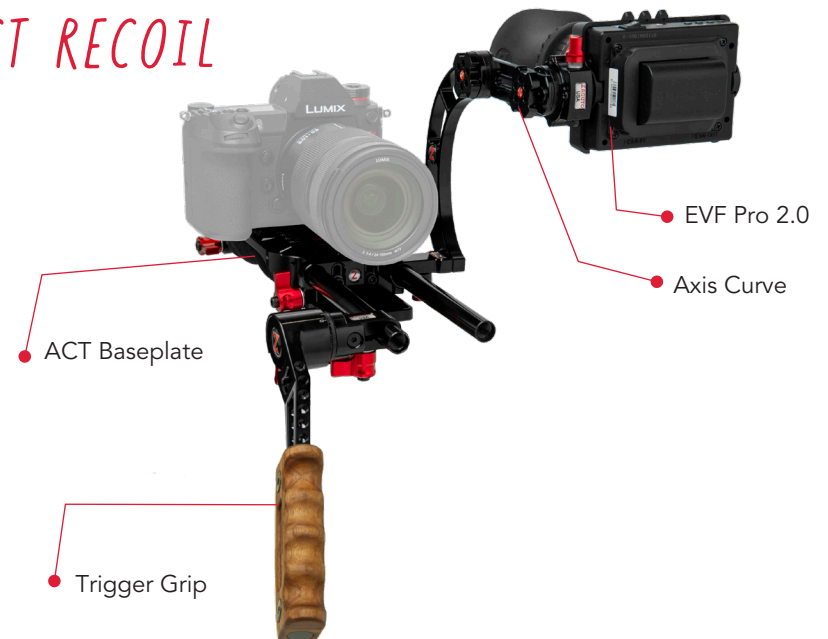

TACTICAL HANDLE POSITIONS

- Loosen the red lever and rotate handle to adjust position.

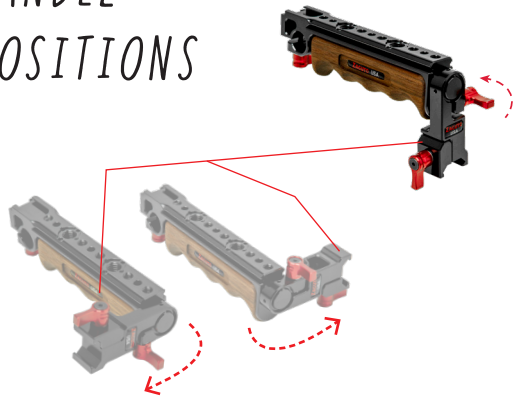

MOUNTING TO ACT MOUNTING PLATE

- Mount your ACT Camera Plate or ACT Baseplate directly to an ACT Mounting Plate for instant tripod readiness.



MOUNTING CAMERA TO ACT BASEPLATE

- Remove Camera Plate from baseplate by loosening the ratcheting lever and sliding the Camera Plate out the back end of the baseplate. Push up camera Safety Latch to unlock the Camera Plate. Screw camera to Camera Plate.
- Slide Camera Plate back into baseplate. Making sure to push in the Safety Latch release.
- The ACT Recoil System is designed to make it easier to keep your rig balanced when changing lenses. Instead of remounting the camera on the baseplate, simply slide the Camera Plate forward or back by using the ratcheting lever



- For shorter lenses, slide the Camera Plate forward. For longer lenses, slide the Camera Plate back.



ADJUSTING RODS

- Attach rods to ACT Baseplate by loosening ratcheting lever, sliding rods into place and then re-tighten lever.
- Adjust rod height by loosening both front allen screws equally. Slide rods up or down for desired position and re-lock allen screws.



ACT
RECOIL