



GE-637



组装说明手册

Keep the manual for future reference.





MAKING LEARNING PLAYING

手作乐趣 ♥ 无毒环保 ♥ 专利研发

亲子同乐 动手玩科学

科学玩具行销全球 20 余国,拥有欧、美、日、澳、中国...等多国专利注册, 符合中国台湾ST玩具、中国 CCC 等安全认证,专业研发获得国际多项殊荣。 结合科学原理,DIY实做、模型美学,启发孩童想像力与创造力, 是玩具也是教具,组模型也组思绪。

三倍乐趣 启动大脑神经元



手做模型组装 搭配好工具。 训练手眼协调力



科学动力学习 红外线感应 发条

多样创意玩法 6 合一风车小精灵

8 变太阳能机器人























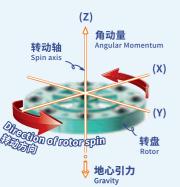

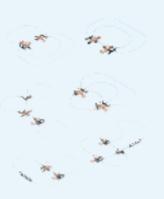



轨道平衡机器人 Wabo The Robot

目录 CONTENTS


自备工具 Tools You May Need1	三岔路转向器组装 3-Way Splitter Assembly 18
零件清单 Mechanical Parts List 1	十字路口转向器组装 Cross Switch Assembly 21
塑胶模型零件 Plastic Parts 2	翘翘板组装 Seesaw Device Assembly 22
组装须知 Read it Before Assembly 3	轨道组装 How to Assemble the Track23
底座组装 Lower Body Assembly 4	轨道拆卸 How to Disassemble the Track 23
转盘组装 Rotor Assembly7	游玩方式 How to Play 24
机器人组装 Body Assembly 8	轨道组合范例 Railway Designs 25
	故障排除 Trouble Shooting27

自备工具 Tools You May Need







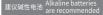



斜口钳 Diagonal Cutter


①螺丝起子 Screwdriver


卫生纸 Tissue Paper

电池1.5Vx2 Alkaline Battery x 2

零件清单 Mechanical Parts List

部分产品有锐利边角,组装时请特别注意 Product contains functional edges and shar										arp points.	
ı	P1	齿轮 Gear (粉红色 P	ink)	P2	齿轮 Gear (绿色 Green)			P3	齿轮 Gear (黃色 Yellow)		
			1 pc				1 pc		The state of the s		1 pc
ı	P4	P4 螺丝 Tapping Screw		P5	小螺丝 Small T	ll Tapping Screw P6			大螺丝 Big Tapping Screw		
			27 pcs			<u>.</u>	1 pc	(1:1	2 pcs
ı	P7	短圆轴 Round Shaft (Short)	P8	长圆轴 Round	l d Shaft (Long)	P9	钢球 St	eel Ball	P10	橡胶圈 Rub	ber Wheel
	1:1 3 pcs		2 pgs		8 pcs		1 pc				
L		5 pcs			2 pcs			o pos			i pc

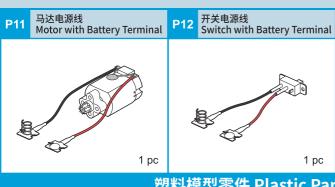

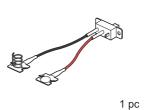





油包 Oil Bag


P13


莫型零件 Plastic Parts


请依照组装步骤将所需的零件剪下,请勿提早剪下零件,以免混淆。 Cut the plastic parts when they are required. Do not cut them in advance.

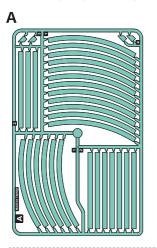


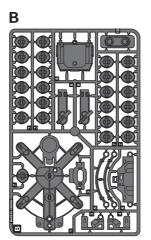

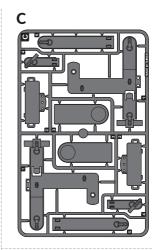

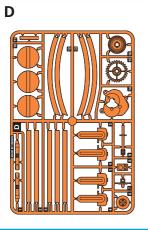

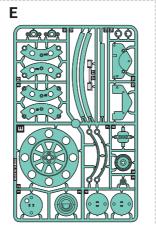

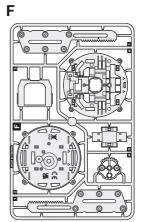

小技巧提醒 Read It Before Assembly




请详读以下组装小技巧 Please read through and follow the tips below before assembly.


请将毛边修剪干净 Remove burrs

■ 毛边务必修剪干净,以免游玩时动作失常。

Pleace cut off the burrs clean, or the product might not work functionally.



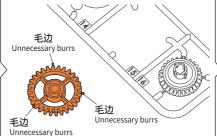

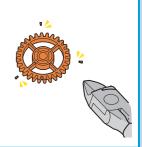

🧭 请勿使用以下方式 Pleace do not 🛛 🕢









小提醒 Reminder 建议使用专业模型钳 Suggest using model cutters



PM-200



PM-202

锁紧螺丝 Fasten tapping screws




请使用正确尺寸的起子锁螺丝。螺丝务必要锁紧,倘若螺丝未锁紧,可 能会导致组装崩解或是产品无法正常使用。


Use corresponding (size-compatible) screwdriver. Please lock screws all the way down to the bottom. If they are not fastened tightly enough, parts may come off. The product may consequently not work.






底座组装 Lower Body Assembly

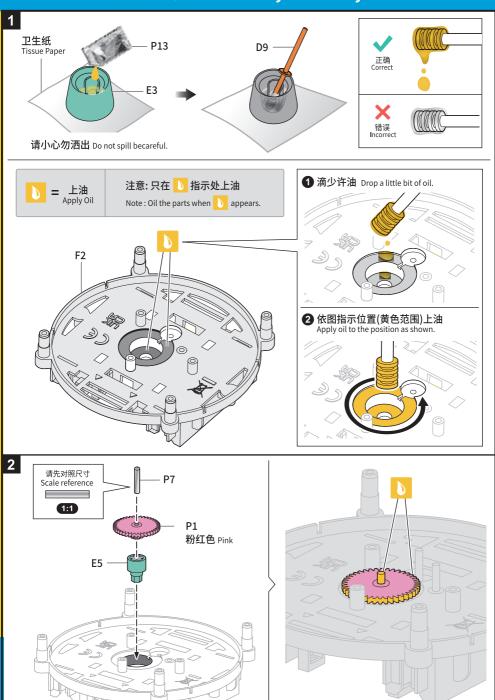

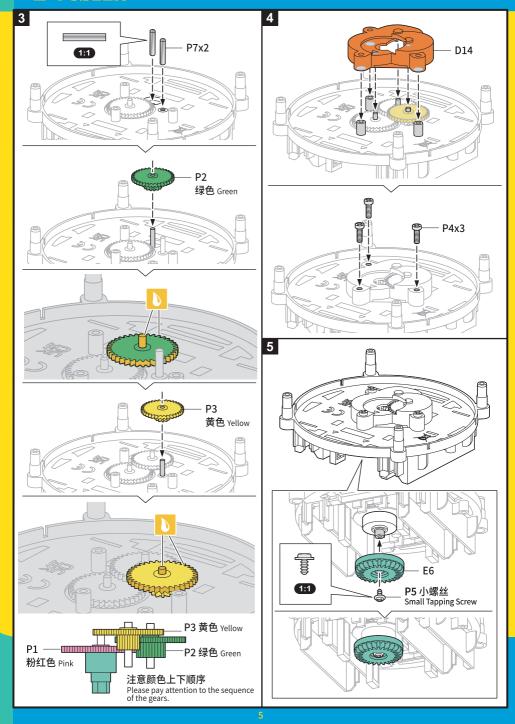


6 组装时请确认B5与箭头的相对位置


Please pay attention to the arrow placement while assembling B5.

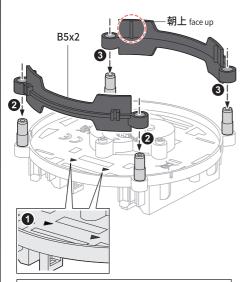

确认两边白柱有突出才是正确方向


Make sure you can see the top of white stubs at two sides.

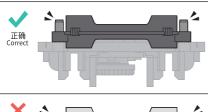


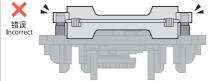


7

请注意**B5与E7上下方向勿装**错 Please do not place B5&E7 upside down.

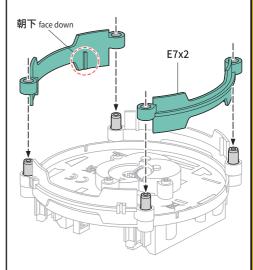

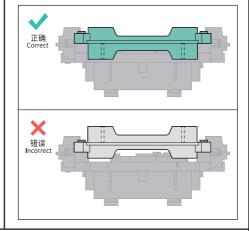



8

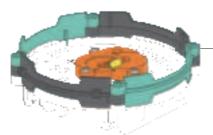



底座组装完成! Lower Body assembly finished!


转盘组装 Rotor Assembly

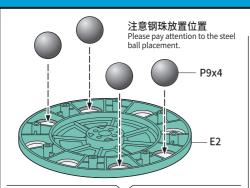


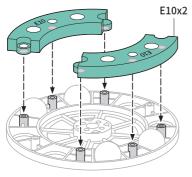


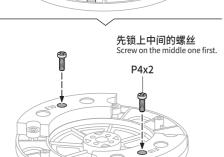


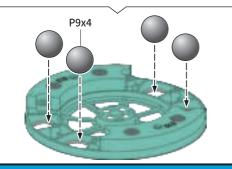

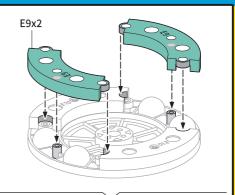


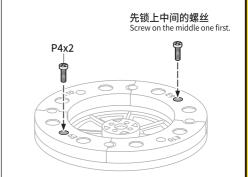


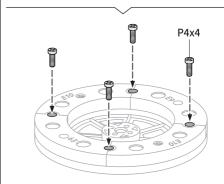


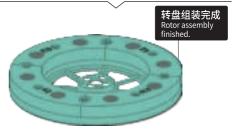



机器人组装 Body Assembly

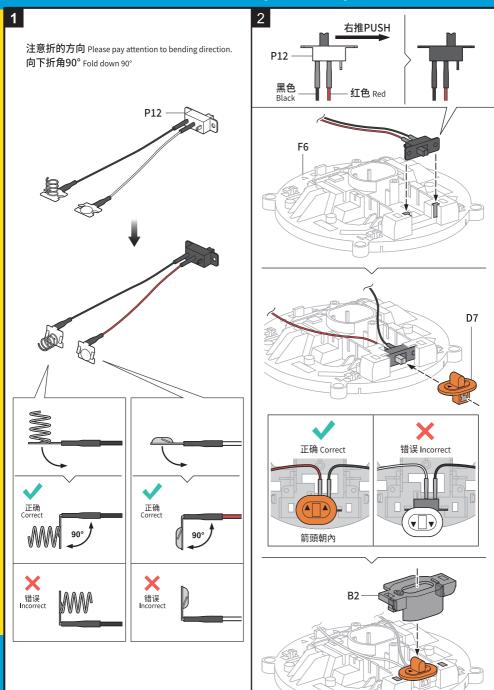


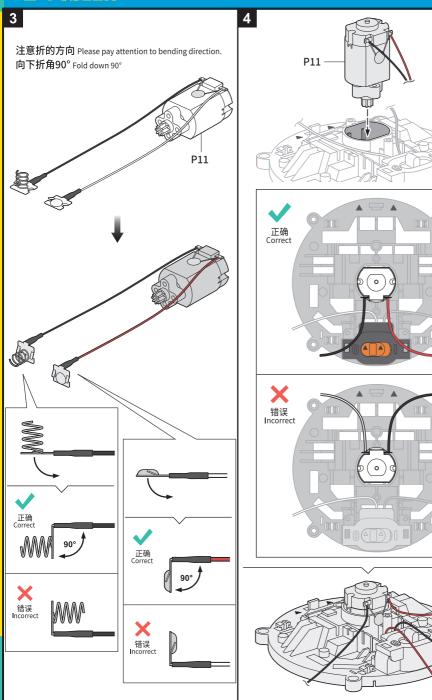


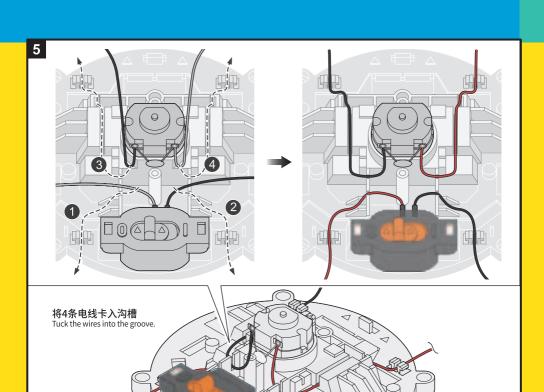


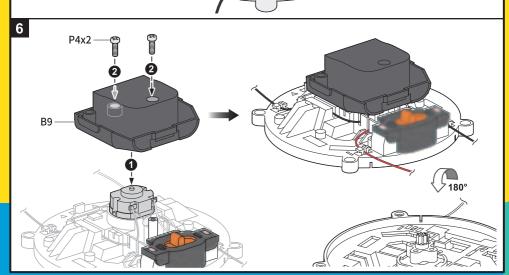


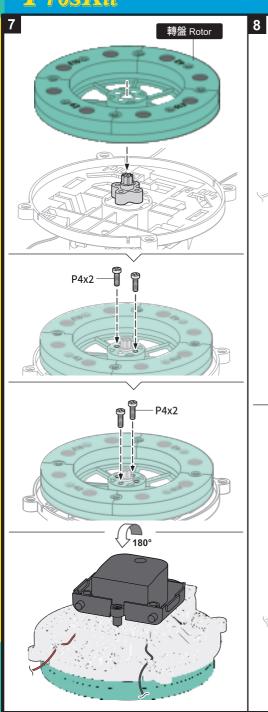


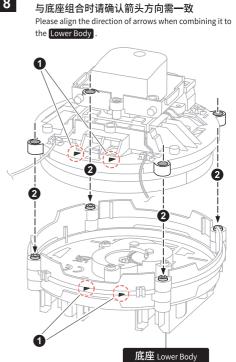


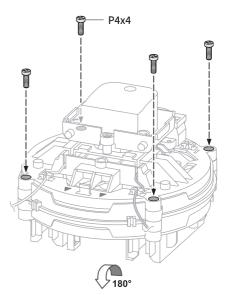


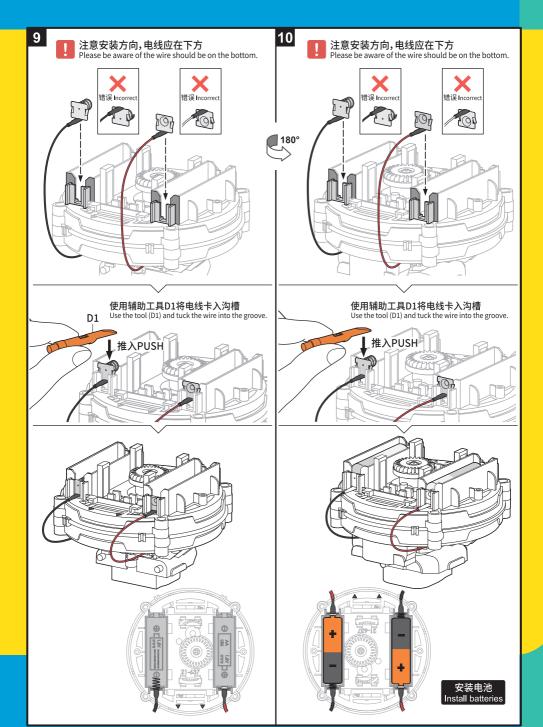

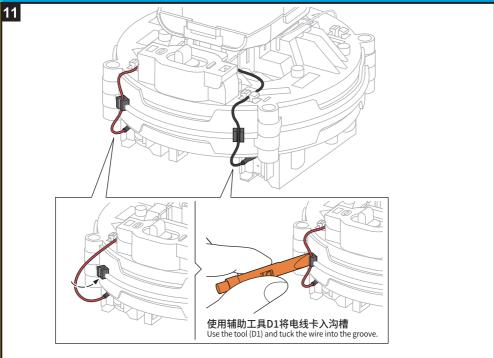


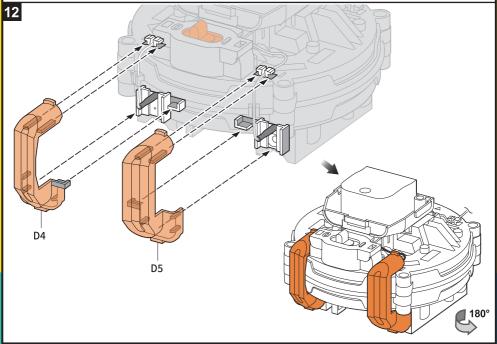


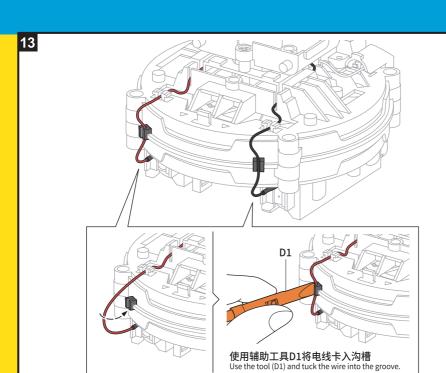


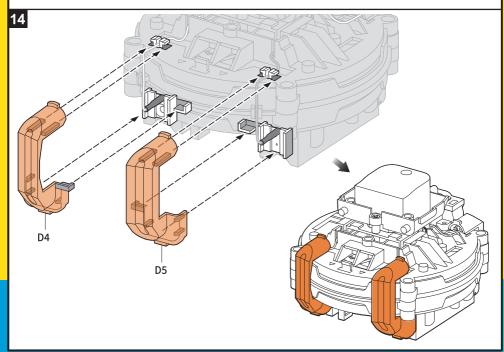


ProsKit®

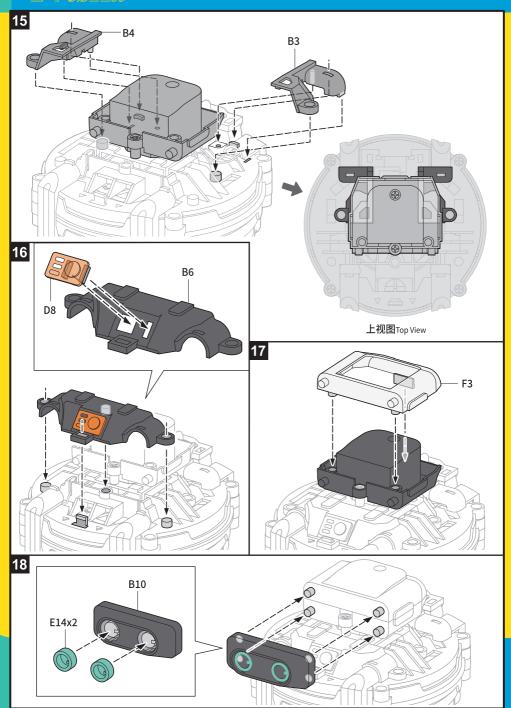


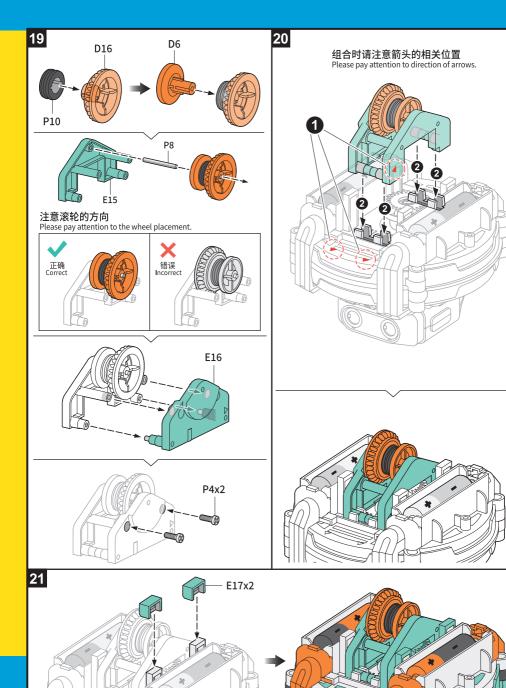


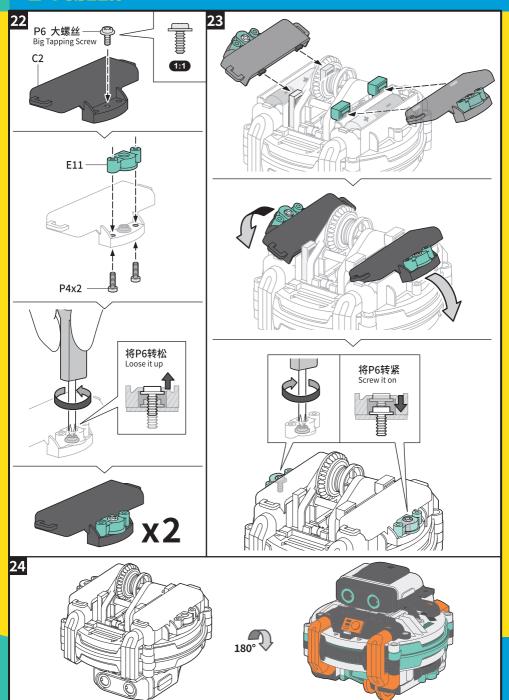



三岔路转向器组装 3-Way Splitter Assembly

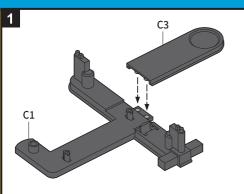


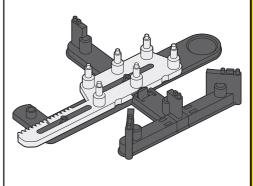


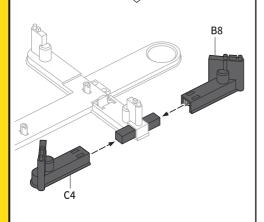

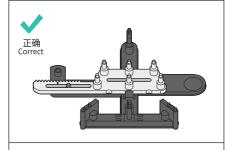


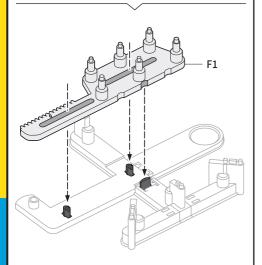


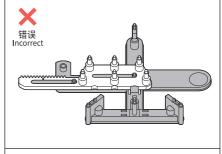

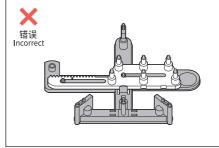


ProsKit®

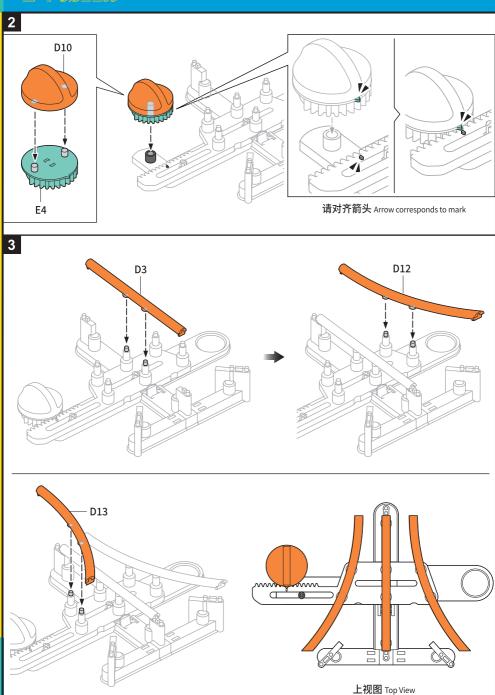


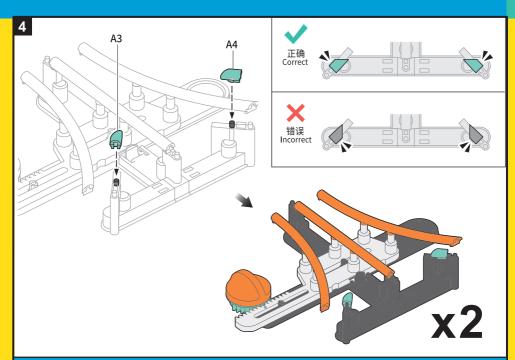



测试三岔路转向器 Test 3-Way Splitter

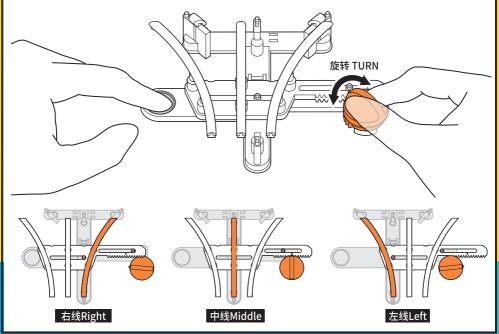



ProsKit® 十字路口转向器组装Cross Switch Assembly

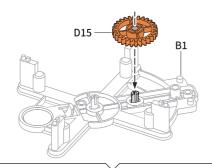

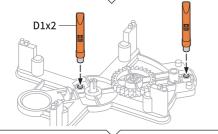

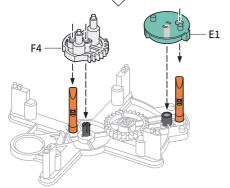


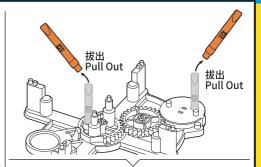

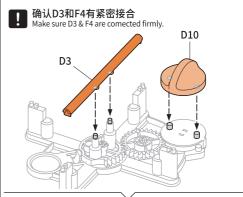





测试十字路口转向器Test Cross Switch

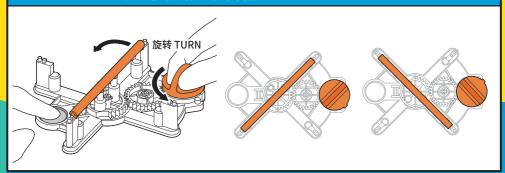


翘翘板组装 Seesaw Device Assembly

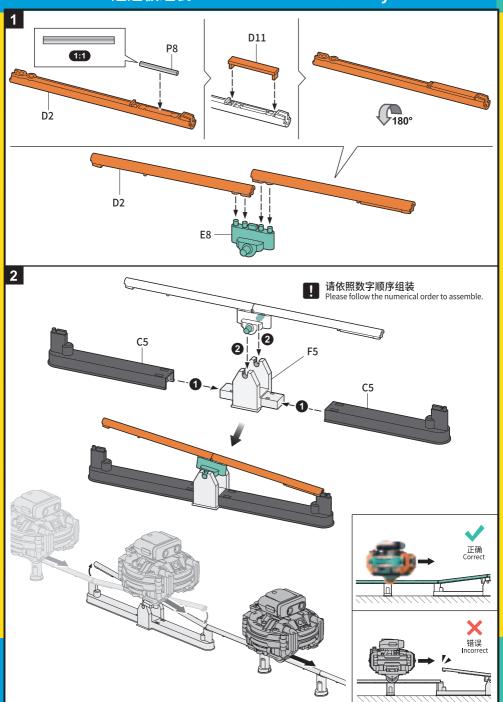


ProsKit[®] 轨道组装How to Assemble the Track

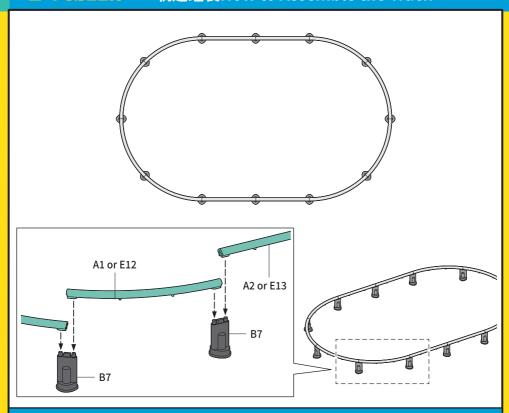

轨道拆卸How to Disassemble the Track

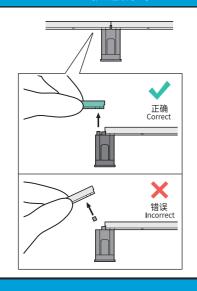


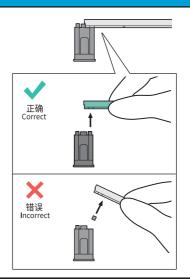



游玩方式How to Play




https://www.prokits.com.tw/RobotKit/GE-637/

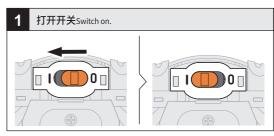


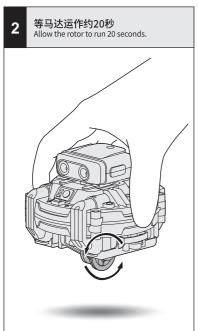


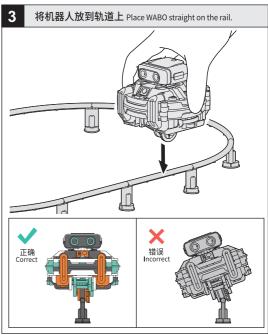

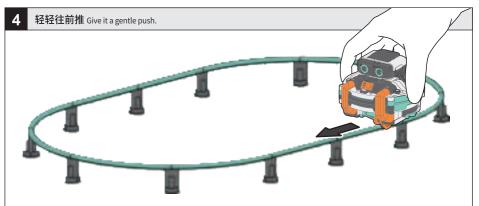

轨道组合范例 Railway Designs

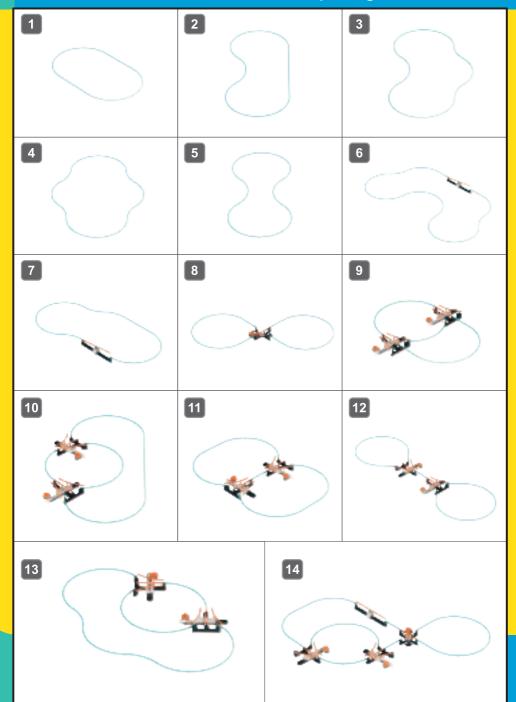

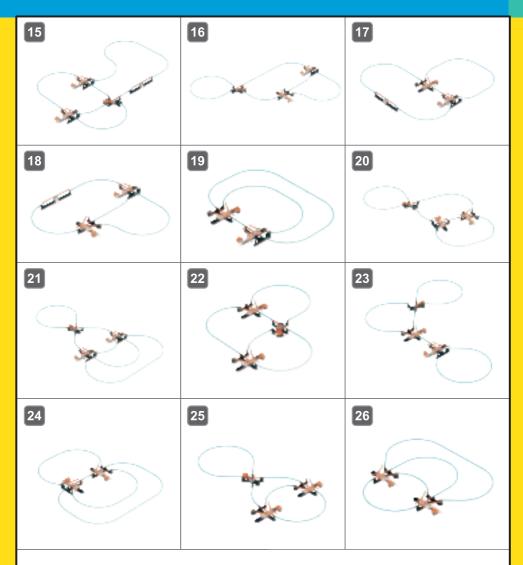

更多创意组合等你来发现!

More fun to be discovered!

你可以用轨道做无限组合,直走、转弯、绕圈,只要你能想像,任何形状都能变化,打造属于你独一无二的超级轨道。告诉你一个秘密,买越多组,变化乐趣更是无限放大喔!

Let's build an interesting monorail kingdom together with Wabo. You could also design your own unique one. Let's give it a try!



如需更换电池,请参考第17页,按步骤逆向执行。

To replace the battery, please refer to page 17 and follow he steps in reverse.

Α

如果WABO更换新电池后仍无法正常运作,请依以下步骤进行维修。

If Wabo fails to walk after the batteries are replaced, follow the steps below.

1.将WABO重新启动,开启后让马达转盘运转超过20秒后,再把WABO放在直线轨道上前进〈请参考第24页步骤 22~4 〉

Re-boost Wabo. Allow the rotor to run 20 seconds, and place it straight on the rail. (refer to page 24, step 2 ~ step 4)

2.請確認E17有組裝〈請參考第16頁步驟 21 〉 Make sure E17 is assembled. (refer to page 16, step 21)

В

If Wabo makes a loud noise after being activated, please oil the gears. (refer to page 4~5, step \ ~ step \ , and follow "Disassembly Tip")

C

如果WABO启动后猛烈晃动,请依以下步骤进行维修

If Wabo shakes violently after being activated, please follow the steps below.


- 1.请确认B9有牢固锁上〈请参考第10页步骤 6 〉 Make sure B9 is tightly screwed. (refer to page 10, step 6)
- 2.请确认转盘上的所有螺丝都有牢固锁上〈请参考第7页,并请遵循"拆卸技巧"拆开WABO〉


Check if the screws on the rotor are screwed firmly. (refer to page 7, and follow "Disassembly Tip")

3.请将连接马达与转盘的螺丝重新锁紧。〈请参考第11页步骤 7 〉

Re-lock the rotor on the motor. (refer to page 11, step 7

拆卸技巧 Disassembly Tip

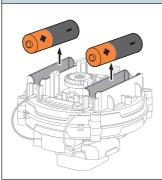

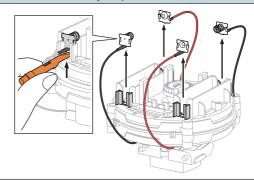



敬生 言口 Caution

内含小零件,请勿让三岁以下孩童使用,避免误食危险。不可对着人脸和眼部冲撞,避免造成意外伤害。

The toy contains small parts, please keep them away from children under 3 years old. Please keep attention on children while using cutting tools to avoid accidents.

太阳能系列

机械动力。

盐水动力[®]。 系列

空气动力学

液压动力。系列。







✓ **补配件申请**Accessories
Replacement



/ 官方网站 Official Website



- 电池移除或更换应由成人或在成人监督下进行。 Removal and replacement of batteries should be carried out by adults or under adult supervision.
- 请避免电池或电池连接器端子短路。 Avoid short circuiting the contacts in the battery compartment or the battery terminals.
- 充电电池应在成人监督下进行充电。 Rechargeable batteries are only to be charged under adult supervision.
- 充电电池在充电前应从玩具中取出。 Rechargeable batteries are to be removed from the toy before being charged.
- 请勿试图对非充电电池进行充电。 Do not attempt to recharge non-rechargeable batteries.

- 电池长期不用或电力耗尽时请取出以避免电池漏液。 Remove exhausted batteries from the product to avoid leakage.
- 请勿混用新旧电池及不同厂牌、种类的电池。 Do not mix used batteries and new batteries or batteries of different types.
- 请勿混合碱性、标准(碳锌)电池或充电(镍铬)电池使用。 Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- 电池放入前请先确认正确正负极性方向。 Batteries are to be inserted with the correct polarity.
- 本产品不能连接多于一个电源。 The toy is not to be connected to more than the recommended number of power supplies.





销售公司:上海宝工工具有限公司 上海市浦东新区康桥东路1365弄25号 服务热线: 400-1699-629

制造商/生产厂:宝工实业股份有限公司

www.prokits.com.tw

Email: pk@mail.prokits.com.tw

宝工实业股份有限公司 PROKIT'S INDUSTRIES CO., LTD ©2023 Prokit's Industries Co., LTD. All rights reserved. 2023001