

Asus RT-N10E Fibre Setup

Using your own router? No worries, we've got you covered!

Log into the gateway:

- 1. Ensure your device is connected to the Router (preferably via cable)
- 2. Open a web browser
- 3. Type the following in the address bar at the top: 192.168.1.1
- 4. Default Username: admin
- 5. Default Password: admin

This should then give access to the router's user interface

How to add correct settings for the Mercury network:

From the left menu select: WAN.

The Internet Connection page displays. Ensure the following settings are changed:

- 1. WAN Connection Type: PPPoE
- 2. Enable UPnP: Yes
- 3. Get the WAN IP automatically: Yes
- 4. Connect to DNS Server automatically: Yes
- 5. PPP Username: (your mercury acct number)@mercurybroadband.co.nz
- 6. Password: password123
- 7. Service Name: Leave blank
- 8. Connection Type: Continuous
- 9. MTU: 1492
- 10. Connect to DNS Server automatically: Yes
- 11. Select ISP: Manual
- 12. Internet: VID 10, PRIO 0
- 13. The rest can remain unchanged
- 14. Click: Apply

