


# User Manual

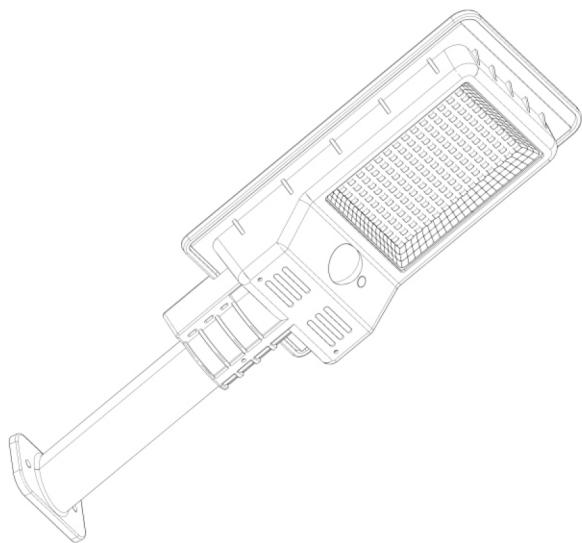

168LEDs Solar Motion Sensor Light

Thank you for purchasing our products. To ensure a better experience, please read this manual carefully before using the lights.

## PACKAGE LIST

- Solar Lights
- Bracket
- Screws
- User Manual

## SPECIFICATIONS

Solar Panel: 6V / 3W Monocrystalline Silicon  
Number of LEDs: 168 PCS  
Sensing Distance:  $\leq 32.8$  FT  
Battery: 2200mAh  
Color Temperature: 6500K

— 1 —

## HOW TO WORK

1. Press the switch to turn on the solar light.
2. It will charge during the day and work at night automatically .
3. Choose the working mode by pressing the **ON/OFF** button. (**Mode 1: Off +Motion Sensor Full Brightness Light. Mode 2:Dim Light+ Motion Sensor Full Brightness Light. Mode 3: 50% Brightness Light no motion sensor. Mode 4: Turn off**)

## INSTALLATION

1. Test the solar lights before installation.
2. Choose the mode you needed.
3. Connect the bracket and solar lamp with screws.
4. Install the solar lights with screws on the wall, eaves, or fence, etc.

**Recommended Installation Height: 8-16FT/2.5-5m**

— 2 —

## IMPORTANT

1. Product is only for outdoor use.
2. The installation location of the solar light must be exposed to direct sunlight for a long time and cannot be blocked by any objects, such as leaves, glass.
3. Please be careful to keep solar panel clean, no dust, debris or even snow.

## FAQ

**Q: The solar light doesn't work**

A: 1. Make sure the lamp is switch on.  
2. Continuous cloudy and rainy days, the battery is dead. Please wait for the weather to be clear, the lamp will resume work.

**Q: Motion sensor is insensitive**

A: The motion sensor is affected by temperature, humidity, and mounting height.

Contact us: **support @ icofru.com**

— 3 —