 


nickelodeon

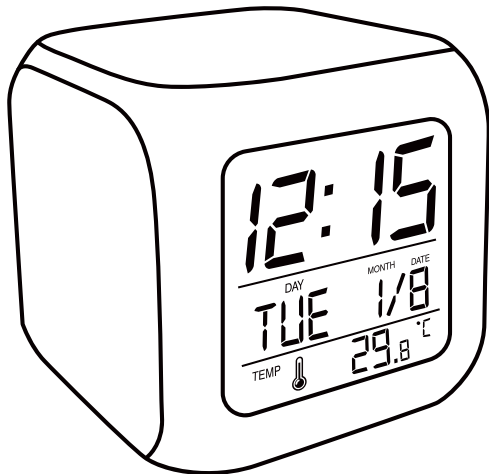

User Manual

LED Alarm Clock

TT-ACLED-494


WHAT'S IN THE BOX

- Alarm Clock
- User Manual


SPECIFICATIONS

Temperature Range:	0°C – 50°C or 32°F – 122°F
Time Format:	12 & 24HR
Screen Size:	52 x 52mm
Battery:	3 x AAA (not included)
Standby Time:	90 – 150 days
Dimensions:	78 x 78 x 78mm
Weight:	88g

 
PRODUCT DIAGRAM

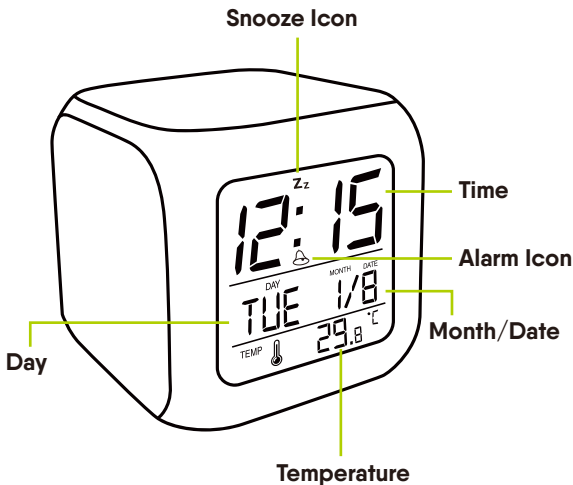

BOTTOM VIEW

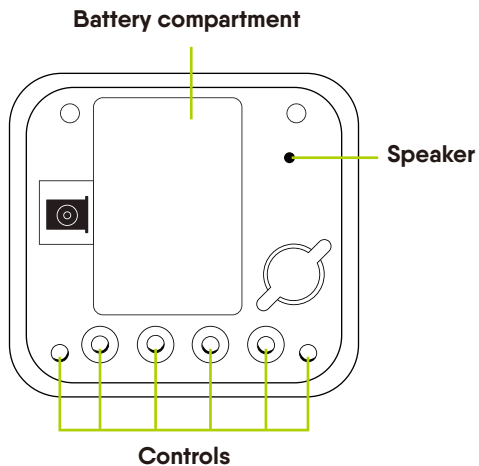 

CONTROLS

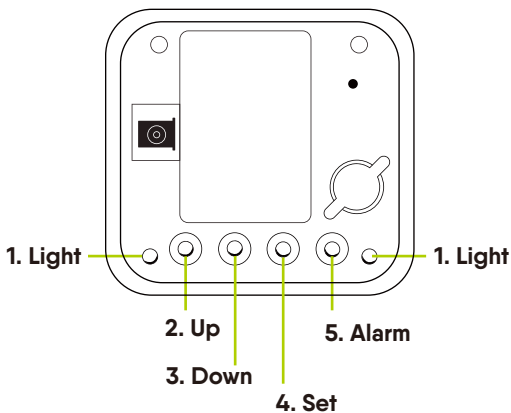 

1. Light

- Press to turn LED light on.
- Tapping the top of the clock can also turn on the LED light.
- The light will illuminate for a few seconds before turning off.

CONTROLS continued...

2. Up

- Press to increase value.
- In Time view tap to switch between 12 & 24HR time.
- In Alarm view press to turn alarm and snooze on.
- When the alarm is sounding, press to snooze (if snooze is activated).

3. Down

- Press to decrease value.
- In Time view tap to switch between Celsius and Fahrenheit temperature.
- In Alarm view tap to turn alarm and snooze on.

4. Set

- In Time view tap to set time.
- In Alarm view tap to set alarm.
- Press to move between fields when setting time or alarm.

5. Alarm

- Press to view the alarm time

OPERATING INSTRUCTIONS

Setting Time & Date

- Insert 3 x AAA batteries.
- Ensure the unit is powered on and in normal display mode.
- Press **"Set"** to activate setting of time and date.
- Adjust the values by pressing the **"Up"** or **"Down"** button.
- Press **"Set"** to move to the next field.
- The field sequence is as follows:
Hour > Minutes > Year > Month > Date > Exit.

Setting the Alarm

- Ensure the unit is powered on and in normal display mode.
- Make sure you have set the correct time.
- Press the **"Alarm"** button to switch to alarm mode.
- Press **"Set"** to activate setting of the alarm.
- Adjust the values by pressing the **"Up"** or **"Down"** button.
- Press **"Set"** to move to the next field.
- The field sequence is as follows:
Hour > Minutes > Snooze Duration > Music Type > Exit

OPERATING INSTRUCTIONS

continued...

- To activate the alarm, press the “**UP**” or “**DOWN**” button till you see a small “**Bell**” icon onscreen.
- To activate snooze, press the “**UP**” or “**DOWN**” button till you see a small “**Zz**” icon onscreen.
- Alarm will ring for 1 minute once the set time has been reached.
- The snooze alarm will ring after the first alarm once the snooze duration is reached.
- Press any button (except LED) during the alarm ring to turn the alarm sound off.

Note:

- The snooze duration is between 1 – 60 minutes. Careful when setting the Snooze value to 60 minutes as this will not sound the snooze alarm again for 1 hour.
- The snooze alarm will keep sounding after the elapsed time unless the “Zz” icon has been removed from the screen.

TROUBLESHOOTING

No Power:

- Check batteries and replace as required.

The Alarm keeps sounding:

- If you have a snooze alarm set as indicated by the “**Zz**” icon onscreen, then the alarm will activate every interval the snooze duration has been set e.g., if your snooze duration is set as 15, then the alarm will sound every 15 minutes after the initial alarm until the “**Zz**” icon has been removed from the screen.
- To remove the “**Zz**” icon press the a “**Up**” or “**Down**” button when in Alarm view.

Thank you for your purchase!

Laser Corporation is 100% Australian owned & operated. To get the most out of your product please read the user manual carefully and keep for future use.

For specific information relating to your product such as Spare Parts, FAQs, Warranty claims, and more, please scan the following QR code:



Visit our website



Check us out at
www.youtube.com/lasercoau

