

onn.

USER GUIDE

Wireless Open-Ear Earphones



100130685-EN-06302023

CONTENTS & INFORMATION

Features

OVERVIEW

SAFETY PRECAUTIONS

OPERATION

First time setup

Power on & Power off

Pairing

Play music

Phone calls

Charging

CLEANING & CARE

Cleaning

SPECIFICATIONS

TROUBLESHOOTING

Contents & Information

Overview

Safety Precautions

onn.

Charging Case

Charging Port

LED Indicator

Pairing Button

Charging Cable

Earphone

Mic2

Mic1

Ear Hook

Multi-angle Arm

Touch Control Area

LED Indicator

Green : battery > 50%

Orange : battery ≤ 50%

Red : battery ≤ 20%

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--Reorient or relocate the receiving antenna.
--Increase the separation between the equipment and receiver.
--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
FCC RF exposure statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Warning:
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Need help? We're here for you everyday from 7a.m.-9p.m. CST. Give us a call at: 1-888-516-2630.
Produced for Walmart Inc., Bentonville, AR 72716

Ver.01 06/30/23

FCCID: 2ADTV-30685

For product assistance
WE CAN HELP
1-888-516-2630

7 DAYS/WEEK
7:00am- 9:00pm CST

Find more at [Walmart.com](#)

THIS GUIDE CONTAINS
IMPORTANT SAFETY
INFORMATION.

PLEASE READ AND KEEP
FOR FUTURE REFERENCE.

Operation

FIRST TIME SETUP

Device may need to be charged before use.

onn.

Charging Case

Charging Port

LED Indicator

Pairing Button

Charging Cable

Earphone

Mic2

Mic1

Ear Hook

Multi-angle Arm

Touch Control Area

LED Indicator

Green : battery > 50%

Orange : battery ≤ 50%

Red : battery ≤ 20%

CAUTION

Only use a USB charging device that is 5V DC output.

1. Remove the protective films before the first use, then place both earphones back into charging case and close the lid.

2. When you open the lid again, earphones will enter into pairing mode automatically.

3. Find "onn. TWS Open-Ear Pro" in device Bluetooth settings.

POWER ON & POWER OFF

POWER ON

Open the charging case, earphones will power on and connect to last paired device automatically.

onn.

Charging Case

Charging Port

LED Indicator

Pairing Button

Charging Cable

Earphone

Mic2

Mic1

Ear Hook

Multi-angle Arm

Touch Control Area

LED Indicator

Green : battery > 50%

Orange : battery ≤ 50%

Red : battery ≤ 20%

POWER OFF

Place earphones back to charging case and close the lid, earphones will power off automatically.

PAIRING

HOW TO PAIR WITH ANOTHER DEVICE

1. Pairing to a single device disconnect earphones device they are currently paired to search for earphones on new device connect earphones.

2. When it is not connected to your current device, place both earphones back to charging case, hold the pairing button for 2 sec, now you can search it from another device.

onn.

Charging Case

Charging Port

LED Indicator

Pairing Button

Charging Cable

Earphone

Mic2

Mic1

Ear Hook

Multi-angle Arm

Touch Control Area

LED Indicator

Green : battery > 50%

Orange : battery ≤ 50%

Red : battery ≤ 20%

HOW TO PAIR WITH 2 DEVICES AT THE SAME TIME (MULTIPOINT CONNECT)

1. Place both earphones back into charging case.

2. Keep the lid open meanwhile press and hold the pairing button for 2 sec, now you can search it from your second device.

PLAY MUSIC

Control	Action	Result
	x2 Tap (Either one)	Play / Pause
	x3 Tap (Either one)	Voice assistant
	Hold 2 sec (Right one)	Next track
	Hold 2 sec (Left one)	Previous track

PHONE CALLS

Control	Action	Result
	x2 Tap (Either one)	Answer incoming call
	x2 Tap (Either one)	End current call
	Hold 2 sec (Either one)	Reject incoming call

CHARGING

CHARGE EARPONES

Place earphones back into charging case, earphones start to charge when you see a blue LED flash on earphones. Close the lid, earphones may take up to 15 hours to fully charge when at 0% battery.

onn.

Charging Case

Charging Port

LED Indicator

Pairing Button

Charging Cable

Earphone

Mic2

Mic1

Ear Hook

Multi-angle Arm

Touch Control Area

LED Indicator

Green : battery > 50%

Orange : battery ≤ 50%

Red : battery ≤ 20%

CHARGE THE CASE

It is recommended that you use the provided charging cable, connect USB-A end to 5V power adapter or other devices, connect USB-C end to the charging port of the case.

Note: It takes around 2 hours to get the case fully charged when at 0% battery.

onn.

Charging Case

Charging Port

LED Indicator

Pairing Button

Charging Cable

Earphone

Mic2

Mic1

Ear Hook

Multi-angle Arm

Touch Control Area

LED Indicator

Green : battery > 50%

Orange : battery ≤ 50%

Red : battery ≤ 20%

About 2 hours

Charging: Red LED light is on

Fully charged: Green LED light is on

CLEANING

1. Wipe down surfaces with a cleaning cloth.

2. Never use abrasive pads to clean device.

3. Avoid using liquids to clean device.

Specifications

Weight

0.19 lb

Product Dimensions (L x W x H)

0.31 x 0.2 x 0.09 inches

94.8*59.8*28.5mm

Troubleshooting

Problem	Prevention/Solution
Cannot find "onn. TWS Open-Ear Pro" on my Bluetooth device.	• Ensure Bluetooth function is activated on Bluetooth device. • Double check if the earphones already connected with last-time paired device. • Press and hold 2 sec PAIRING BUTTON on charging case, to let it enter to pairing mode. Or press and hold 10 sec to reset this product.
Sound is not produced.	• Ensure you have earphones connected with Bluetooth device, and increase volume from your Bluetooth device.
Cannot power on	• Charge the earphones and the charging case.