




QUICK START GUIDE

WHAT'S INSIDE

- A Vacuum
- B Handle & Hose
- Wand
- Hose Holder
- Duster Crevice Tool
- Upholstery Tool
- Dusting Brush


ASSEMBLY

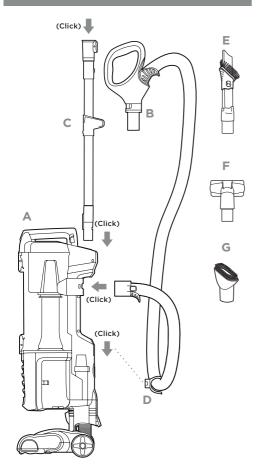


NOTE: For proper operation, ensure all parts are firmly CLICKED into place.

EMPTYING THE DUST CUP

Empty the dust cup after each use.

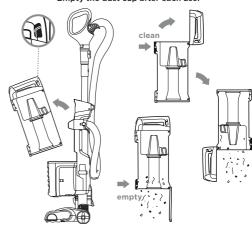

MAINTENANCE

 


Remove dust cup to access foam and felt filters. Next, press down top of filter door. Tilt filter door and lift out. Press tab at top of HEPA filter and pull away from the base of the vacuum.

To reinstall, insert HEPA filter into unit and replace the filter door.

Wash filters every 3 months to keep the suction strong.

Rinse filters with water only and allow to air-dry completely. Tap loose dirt from foam filters as needed between washes.

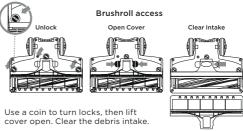

Shark's Zero- $M^{\text{\tiny TM}}$ self-cleaning brushroll delivers non-stop hair removal. Remove any blockages or objects stuck on or around the brushroll.

If any hair is wrapped around brushroll, extending cleaning time will help it clear.

2 WAYS TO CLEAN

FLOOR CLEANING SUCTION CONTROL Adjust your suction depending on your floor type. MIN: to reduce suction and increase maneuverability on carpets. MAX: to increase suction on bare floors. OR

CARPET

Press switch to II

for low and high pile

carpet cleaning.

To engage brushroll, step on floor

nozzle and tilt handle back.

ABOVE-FLOOR CLEANING

HARD FLOOR Press switch to I for

hard floor surfaces.

