
 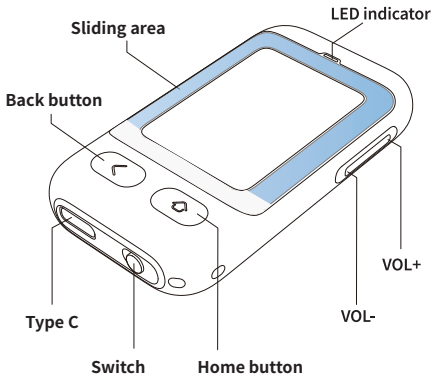


# **CheerTok Air**

# **User Manual**

(Dual key version)

# Basic Operations



## **Turn ON/OFF**

Turn switch button to the left will power on device, turn to the right will shut down.

## **Connection**

When device turned on, blue LED will flash regularly, and "CheerTok Air" can be found by your host device. Once get paired, it will connect back to the host automatically next time.

## **Re-pairing**

Long press camera button then turn on, device will reset and can be found by new hosts.


# Mode Switch

Press the VOL- button and turn on the device to switch between normal mode (CheerTok Air) and Android special mode (CheerTok Special). The Android special mode operates more smoothly under the Android system. However, due to system limitations, when the video is played horizontally, the pointer can only reach 2/3 of the screen. Switching back to the normal mode can solve this problem.


# Connect to Android

Open "Settings" -> "Bluetooth" -> turn on Bluetooth and search, you can find the CheerTok Air device, click to connect.

## Settings

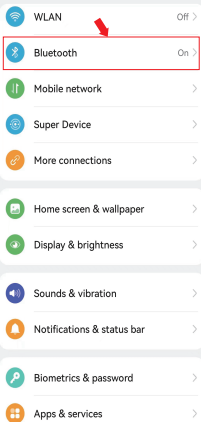



## Bluetooth

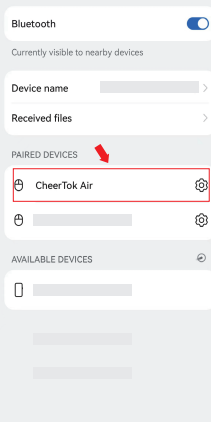

# Connect to iPad/iPhone

Open "Settings" -> "Bluetooth" -> search for devices to connect to "CheerTok Air". When connected, if the mouse pointer is not displayed, you can turn on the cursor by opening "Settings" -> "Accessibility" -> "Touch" -> "AssistiveTouch" (see the picture below).

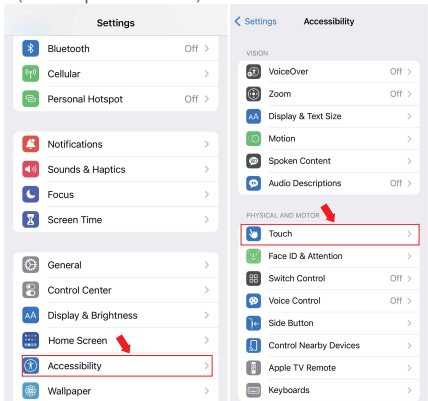

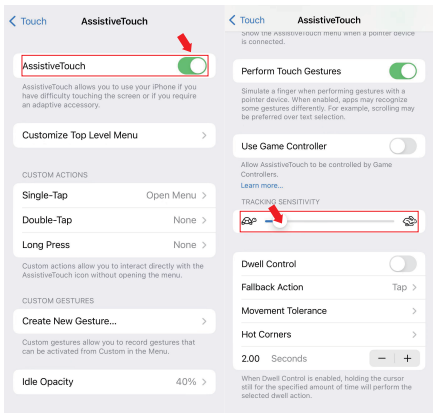

## Note

To ensure a good user experience  
Be sure to adjust the tracking sensitivity


# Touchpad operations

## ① Move within touchpad


Cursor moving

## ② Click on the touchpad

Clicking on the screen

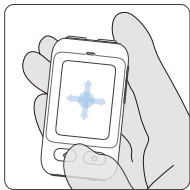

①

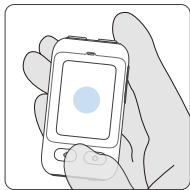

②




③ **Slide on vertical bar**

Page sliding up and down /  
Short video switch up and down

④ **Slide on top bar**

Screen switch left/right

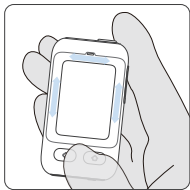

③ ④

# Buttons function

## **VOL+/-**

VOL+/- button to adjust the volume

## **Back button**

Short press: return to the previous page,  
or exit the camera mode

## **Home button**

Short press: return to the home page

## **Camera button**

 


Click Camera button/VOL+/- : take photo

# Record/Play Shortcuts


- ① **Start recording**  
Long press Fn button until green light on
- ② **Recording gestures**  
Touch, buttons, screenshots, etc.
- ③ **Stop recording**  
Tap Fn key, then green light turns off
- ① **Playing**  
Single playback (Tap Fn key, the green light flashes quickly)  
Loop playing (double click Fn key, the green light blinks slowly)
- ② **End playing**  
Tap Fn key, the green light goes off

# Music control




**Fn+Camera button:**

play/pause music

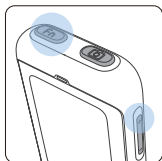

**Fn+VOL+:**

Previous song

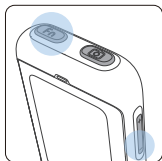

**Fn + VOL-:**

next song

# Explorer Edition Features

Below features are not supported by  
iOS or some Android devices



## Double-click:

Wake up camera; switch between photo/video mode. Will enter camera mode, purple LED on.



## Triple-click:

switch between front/main



## In camera mode,

slide the vertical bar will adjust the focal length

## When playing Tiktok,

slide bottom bar will drag video progress bar

## Cursor Reposition



(Only available in Android special mode)

Long press camera button till LED turns green.

Move cursor to the target position with camera button pressed.

Release camera button to complete cursor reposition.

Cursor will click on the new position when camera button pressed.

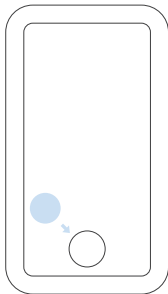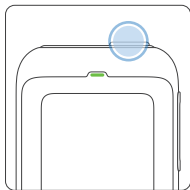

# Product parameters

Project	Specification
Product name	CheerTok Air
Product model	CHP03
Weight	24 g
Input Voltage	5V
Battery Life	20+ day
Battery Capacity	200 mAh
Charging Duration	1.5 h
Dimensions	69×38×11 mm
Bluetooth version	BLE 5.0
Operating environment	-10°C ~ 40°C (14°F ~104°F)
Compatibility	iOS 14 or above, Android 8 or above