

Product Model

POW-SunSmart 6.5KP



# POWMr

SOLAR STORAGE INVERTER

User Manual

## Important Safety Instructions

Please keep the user manual properly for future reference!



**Warning:** It is essential to read, understand, and adhere to all safety instructions provided in this document. Failure to comply with safety regulations may result in property damage or personal injury.

### ➤ Basic Guidelines

1. Before using the equipment, carefully review all relevant sections of the device, battery, and instruction manual for all guidance and warning signs.
2. Caution: To reduce the risk of injury, if you choose to use lead-acid batteries, please charge only deep cycle lead-acid batteries. Other types of lead-acid batteries may rupture, causing personal injury.
3. This product does not contain user-serviceable parts. Do not disassemble the equipment. When maintenance or cleaning is required, take it to a qualified service center. Improper reassembly may pose risks of short-circuiting and fire. If any panel displays a malfunction, do not remove the front panel or operate the product. All operating procedures must be performed by trained professionals.
4. To reduce the risk of electric shock, disconnect all wiring before performing any maintenance and cleaning. Switching off the main unit alone does not eliminate the risk of electric shock.
5. Caution: Only qualified personnel should assemble the equipment with the battery.
6. Charging frozen batteries is prohibited.
7. Exercise extreme caution when using metal tools or placing them around the battery. Dropping tools can generate sparks or cause unpredictable risks such as short-circuiting the battery or other electronic components, potentially leading to explosions.
8. When disconnecting AC or DC terminals, strictly follow the installation steps as outlined in the instruction manual's installation section.
9. Before using this product, read the provided instructions to familiarize yourself with safety features and operating instructions. This product is designed and tested according to international standards. The equipment must be used exclusively for its intended purpose.

### ➤ Installation

1. Do not use this product in areas where there is a risk of gas or dust explosions. Prior to use,

consult with the battery manufacturer's relevant literature to ascertain the compatibility of this product with the battery. Always adhere to the safety instructions provided by the battery manufacturer.

2. This is a safety-class product equipped with a protective grounding terminal. Continuous protective grounding must be provided by the AC input/output terminals.
3. Grounding Instructions: The inverter/charger should be connected to a permanent grounding wire system to ensure full compliance with local requirements and regulations for installing the inverter. When grounding protection may have been compromised, the product must be shut down to prevent accidental electric shock.
4. To ensure optimal operation of the inverter/charger, adhere to the required specifications and select appropriate cable sizes, which are crucial for the correct operation of the inverter/charger.
5. Before connecting to the mains power, ensure that the available power supply meets the parameters specified in the product manual.
6. Do not short-circuit the AC output and DC input. Do not connect the mains power when the DC output is short-circuited.
7. Ensure that the equipment is used in conditions compliant with standards. Do not operate the product in moist or dusty environments. Ensure there is sufficient clearance space around the product and check that ventilation holes are not blocked.
8. Ensure that the required system voltage does not exceed the capacity of the product.

#### ➤ **Transportation and Storage**

1. Ensure that the power and battery cables are disconnected before storing or transporting the product.
2. If the equipment is not in its original packaging during transportation, any transport damage is not the responsibility of the manufacturer.
3. Store the product in a dry environment, with storage temperature between -10°C to 55°C.
4. Refer to the battery manufacturer's manual for information on battery transportation, storage, charging, recharging, and disposal.

Please follow these instructions diligently to ensure safe installation, operation, transportation, and storage of the product.

## Table of Contents

|                                                          |           |
|----------------------------------------------------------|-----------|
| <b>Important Safety Instructions .....</b>               | <b>1</b>  |
| <b>1 Overview .....</b>                                  | <b>3</b>  |
| 1.1 Scope .....                                          | 3         |
| 1.2 Target Audience.....                                 | 3         |
| 1.3 Manual Usage .....                                   | 3         |
| <b>2 Product Overview .....</b>                          | <b>4</b>  |
| 2.1 Features.....                                        | 4         |
| 2.2 System Basic Architecture .....                      | 6         |
| 2.3 Product Appearance .....                             | 7         |
| <b>3 Installation.....</b>                               | <b>8</b>  |
| 3.1 Unboxing and Inspection .....                        | 8         |
| 3.2 Installation Tools .....                             | 8         |
| 3.3 Installation Location.....                           | 9         |
| 3.4 Removal of terminal cover and insect-proof net ..... | 10        |
| 3.5 Inverter Installation .....                          | 10        |
| <b>4 Wiring.....</b>                                     | <b>11</b> |
| 4.1 Wiring mode (depends on the output mode) .....       | 11        |
| 4.2 Cable and circuit breaker model .....                | 14        |
| 4.3 GRID, LOAD and Gen wiring.....                       | 16        |
| 4.4 Battery wiring .....                                 | 16        |
| 4.5 PV wiring .....                                      | 17        |
| 4.6 Dry contact wiring .....                             | 18        |
| 4.7 Grounding .....                                      | 18        |
| <b>5 Operation.....</b>                                  | <b>19</b> |
| 5.1 Starting the Inverter .....                          | 19        |
| 5.2 Operation and display panel.....                     | 19        |
| 5.3 LCD Screen Settings.....                             | 24        |
| 5.4 Timed charge/discharge function.....                 | 33        |
| 5.5 Battery parameters .....                             | 34        |

|                                                                                                          |           |
|----------------------------------------------------------------------------------------------------------|-----------|
| <b>6 Communication .....</b>                                                                             | <b>36</b> |
| 6.1 Overview .....                                                                                       | 36        |
| 6.2 USB-B port .....                                                                                     | 36        |
| 6.3 WIFI port .....                                                                                      | 37        |
| 6.4 RS485/CAN port .....                                                                                 | 37        |
| 6.5 Dry contact port .....                                                                               | 38        |
| <b>7 Fault Codes and Response Measures .....</b>                                                         | <b>39</b> |
| 7.1 Fault codes .....                                                                                    | 39        |
| 7.2 Troubleshooting .....                                                                                | 42        |
| <b>8 Protection Function and Product Maintenance .....</b>                                               | <b>44</b> |
| 8.1 Protection function .....                                                                            | 44        |
| 8.2 Maintenance .....                                                                                    | 46        |
| <b>9 Data sheet .....</b>                                                                                | <b>47</b> |
| <b>10 Parallel Wiring .....</b>                                                                          | <b>49</b> |
| 10.1 Parallel operation .....                                                                            | 49        |
| 10.2 Cautions for parallel connection .....                                                              | 49        |
| 10.3 Wiring diagram for single-phase parallel connection (phase difference between L1 and L2: 0°) .....  | 51        |
| 10.4 Wiring diagram for two-phase parallel connection (phase difference between L1 and L2: 0°) .....     | 54        |
| 10.5 Wiring diagram for split-phase parallel connection (phase difference between L1 and L2: 180°) ..... | 59        |
| 10.6 Wiring diagram for three-phase parallel connection .....                                            | 62        |

## **1 Overview**

### **1.1 Scope**

This user manual provides information, operation, and maintenance guidance for the POW-SunSmart series inverter-charger integrated machines. The POW-SunSmart series products are all-in-one solar inverters developed by PowMr for solar energy storage systems, suitable for various residential or commercial applications.

### **1.2 Target Audience**


This manual is intended for professional technical personnel involved in the installation, operation, and maintenance of solar inverter, as well as end-users seeking technical information.

### **1.3 Manual Usage**

1. Before using the product, carefully review this user manual and keep it stored in an easily accessible location.
2. All information in the user manual, including images and symbols, is the property of PowMr. Unauthorized use of any portion or all of the content is prohibited for individuals outside the company.
3. Considering the possibility of updates and revisions to the manual content, users are advised to use the accompanying manual as a reference. For the latest user manual, users can visit the official website or contact customer service.

## 2 Product Overview

POW-SunSmart 6.5KP is a new type of solar storage inverter that integrates PV storage, mains charge, and energy storage and outputs sinusoidal AC. Equipped with DSP control and advanced control algorithm, it has high response speed and good reliability, and applies to industrial scenarios.

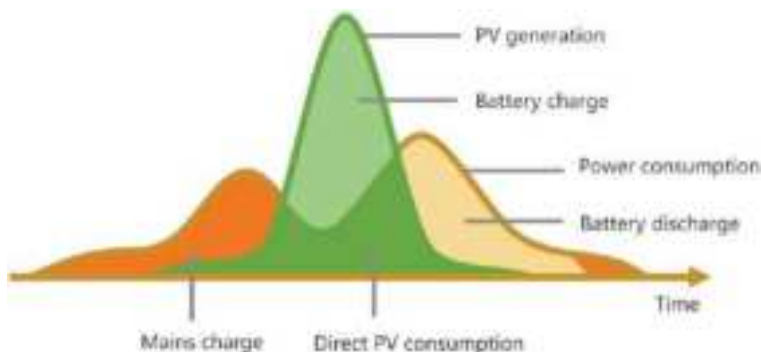

### 2.1 Features

- Support the connection of various types of energy storage batteries such as lead-acid battery and lithium-ion battery
- Have the dual activation function during lithium-ion battery sleep, that is, access to mains/PV power can activate the lithium-ion battery
- Support split-phase/single-phase pure sine wave output
- Support adjusting the voltage of each phase within the range of 100 Vac, 105 Vac, 110 Vac, 120 Vac and 127Vac
- Support two-channel PV input and have the function of simultaneous two-channel maximum power point tracking (MPPT) for charging/carrying capacity
- Support two-channel MPPT, with an efficiency of up to 99.9% and a maximum single-channel current of 18 A, perfectly fitting high-power modules
- Provide four charge modes: only PV, mains first, PV first, and mains + PV
- Have the timed charge and discharge function, that is, users can set the charge and discharge time according to the time-of-use price to save electricity costs


- Have the energy-saving mode, reducing no-load energy losses
- Provide two output modes: mains bypass output and inverter output, achieving uninterrupted power supply
- Support LCD display of dynamic flowchart, updating system data and operating status at any time
- Provide 360 ° protection, including short circuit protection, overcurrent protection, overvoltage and undervoltage protection, and overload protection
- Support CAN, USB, RS485 communication

## 2.2 System Basic Architecture


The following illustration depicts the basic application of the inverter/charger. A complete system consists of the following parts:

1. **PV module:** It converts solar energy into DC to charge batteries or into AC to supply power to loads.
2. **Mains or generator:** Connected to AC input, it can charge batteries while supplying power to loads. When the battery and PV module supply power to the load, the system can generally operate without mains or generator.
3. **Battery:** The function of a battery is to ensure normal power supply for the system load when there is insufficient PV power and no mains.
4. **Household load:** It can connect various household and office loads, including refrigerators, lighting fixtures, TVs, fans, air conditioners, and other AC loads.
5. **Inverter:** It is the energy conversion device of the entire system.

Additional system architectures can be consulted with system integrators based on your requirements. This inverter can provide power to various electrical appliances in residential or office environments, including lamps, fans, refrigerators, air conditioners, and other motor-type appliances.

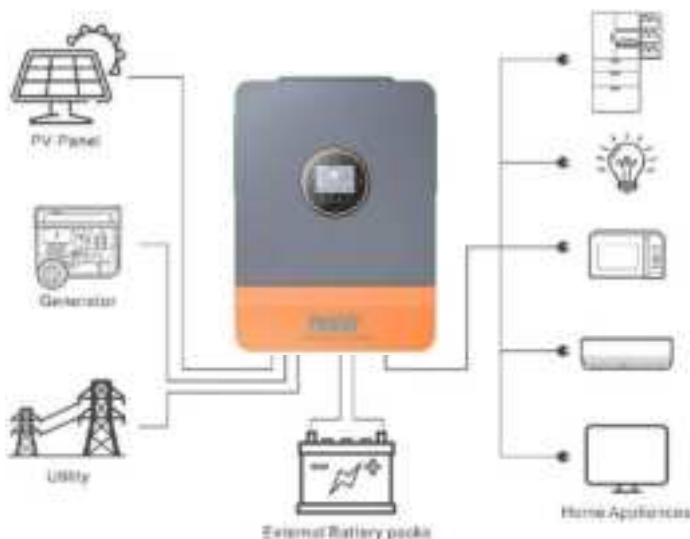

2.3 Product Appearance

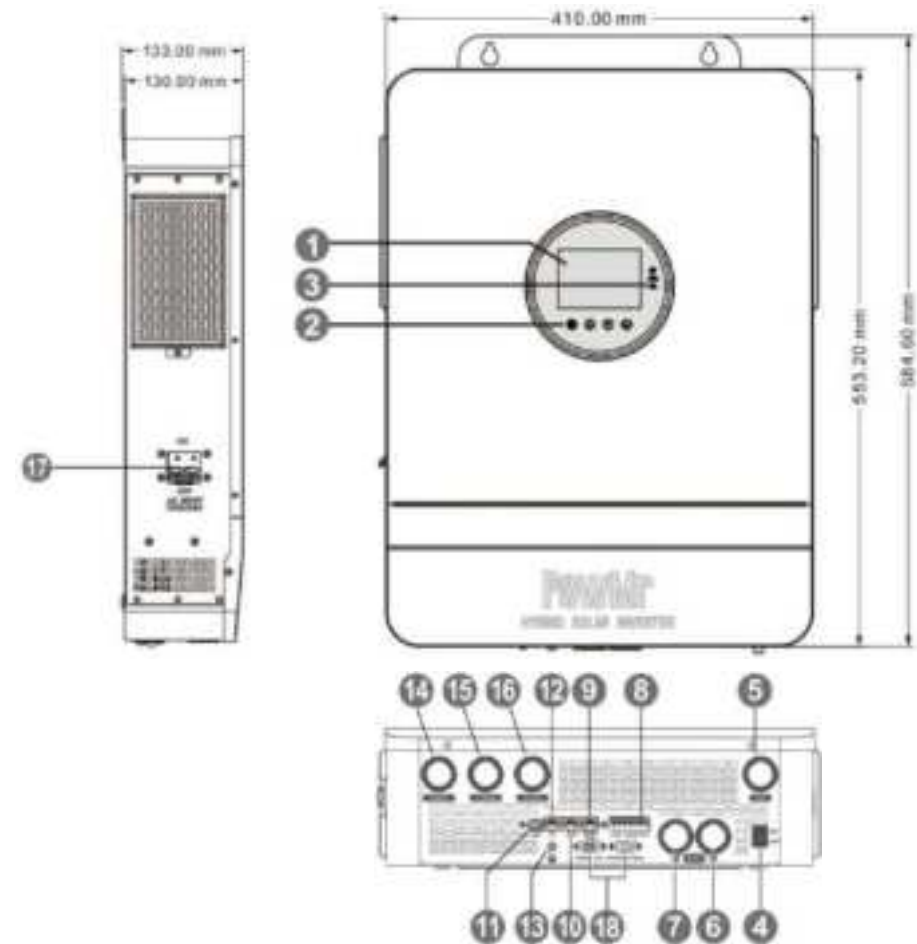

|   |                       |    |                       |    |                             |
|---|-----------------------|----|-----------------------|----|-----------------------------|
| 1 | LCD screen            | 7  | Battery negative port | 13 | Grounding screw             |
| 2 | Physical button       | 8  | Dry contact           | 14 | AC output (L1+L2+N)         |
| 3 | LED indicator         | 9  | RS485/CAN port        | 15 | AC input (L1+L2+N)          |
| 4 | ON/OFF rocker switch  | 10 | WIFI port             | 16 | Generator port (L1+L2+N)    |
| 5 | PV input              | 11 | USB-B port            | 17 | AC input circuit breaker    |
| 6 | Battery positive port | 12 | CT                    | 18 | Parallel communication port |

## 3 Installation

### 3.1 Unboxing and Inspection

Before assembly, please inspect the unit to ensure that the items in the packaging are undamaged.

Inside the package, you will find the following items:

- Inverter device
- Instruction manual
- Explosion screws
- Battery fuses

### 3.2 Installation Tools

Before installation, please prepare the following tools.

| Category           | Tools                                                                                                       |                                                                                                        |                                                                                                              |
|--------------------|-------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
| General Tools      | Multimeter<br>             | Protective gloves<br> | Insulated safety shoes<br>  |
|                    | Protective clothing<br>   | Safety goggles<br>   | Antistatic wrist strap<br> |
| Installation Tools | Electric screwdriver<br> | Socket wrench<br>   | Wire stripper<br>         |
|                    | Phillips screwdriver<br> | Electric drill<br>  | Hammer<br>                |


### 3.3 Installation Location

Before selecting an installation location, consider the following points:

- Install on a solid surface.
- Position the inverter at eye level for easy viewing of the LCD display.
- Maintain approximately 20cm spacing on each side and approximately 50cm spacing above and below the device for proper air circulation and heat dissipation.
- Ensure ambient temperature remains between  $-10^{\circ}\text{C}$  to  $55^{\circ}\text{C}$  for optimal operation.
- It is recommended to install the device vertically against the wall.
- Ensure other objects, as shown in the diagram, maintain sufficient distance from the inverter surface to ensure adequate heat dissipation and provide enough space for wiring removal.



**Suitable for installation on concrete or other non-combustible walls.**

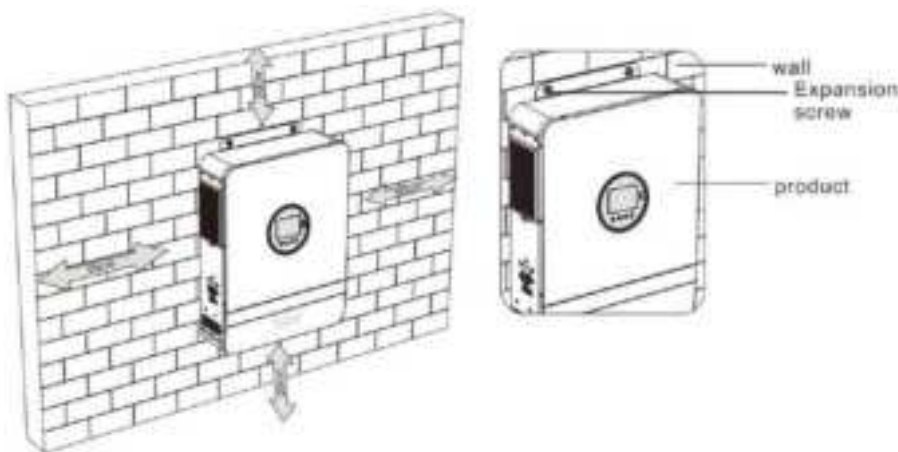


#### **DANGER**

- Do not install the inverter near highly flammable materials
- Do not install the inverter in potentially explosive areas
- Do not install the inverter and lead-acid battery in enclosed spaces
- Do not install the inverter on combustible building materials.

#### **CAUTION**

- Do not install the inverter in direct sunlight
- Do not install or use the inverter in damp environments

## 3.4 Removal of terminal cover and insect-proof net

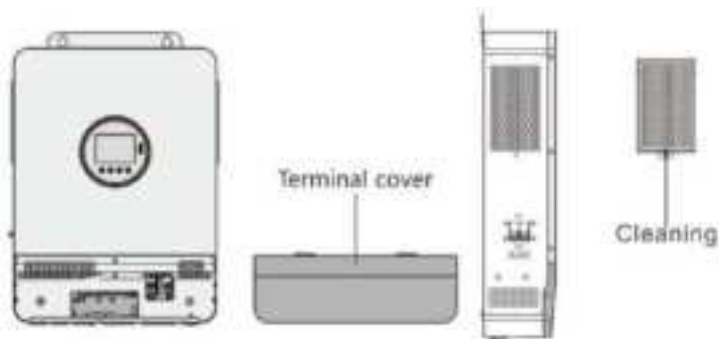


### NOTICE

- When using the inverter in areas with poor air quality, the dustproof net is easily blocked by air particles. Please regularly remove and clean it to avoid affecting the air flow rate inside the inverter; otherwise it may cause inverter overheating (19/20 fault), and affect power supply and the service life of the inverter.

## 3.5 Inverter Installation


Drill 4 installation holes of the specified sizes on the wall with an electric drill, insert 2 expansion screws above, and fix the inverter with 2 M5 screws below.

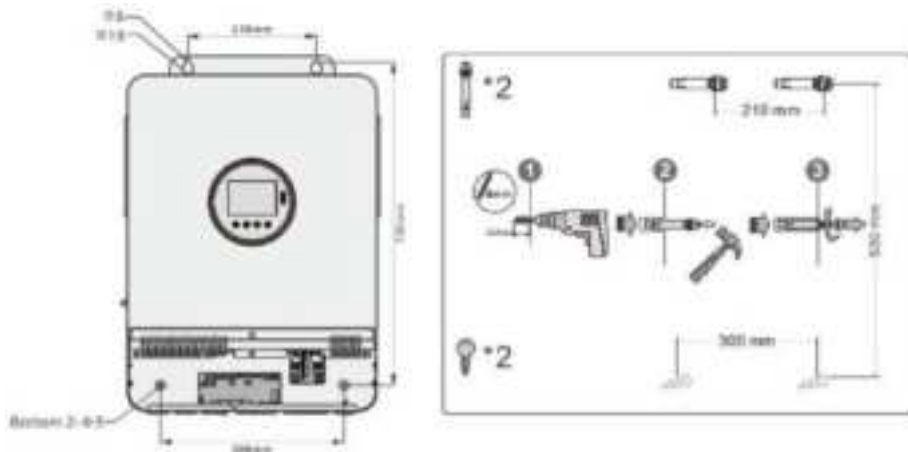

4 Wiring


4.1 Wiring mode (depends on the output mode)

4.1.1 Split-phase mode (default)

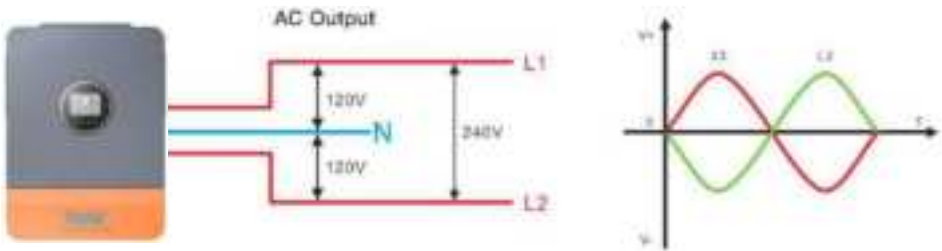


| Item                          | Description                        |
|-------------------------------|------------------------------------|
| Applicable model              | POW-SunSmart 6.5KP                 |
| AC output phase voltage (L-N) | 100 VAC-120 VAC, 120 VAC (default) |
| AC output line voltage (L-L)  | 200 VAC-240 VAC, 240 VAC (default) |

4.1.2 Single-phase mode

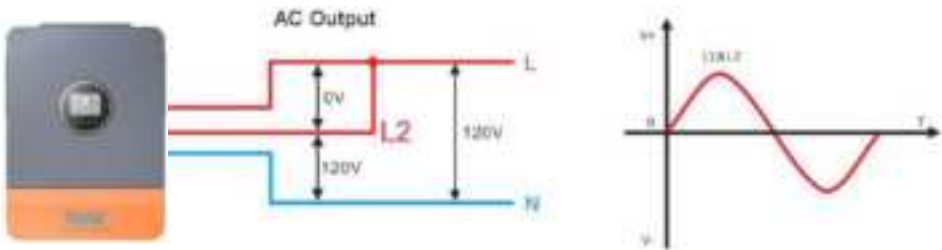

| Item                          | Description                        |
|-------------------------------|------------------------------------|
| Applicable model              | POW-SunSmart 6.5KP                 |
| AC output phase voltage (L-N) | 100 VAC-120 VAC, 120 VAC (default) |


## Split-phase Mode

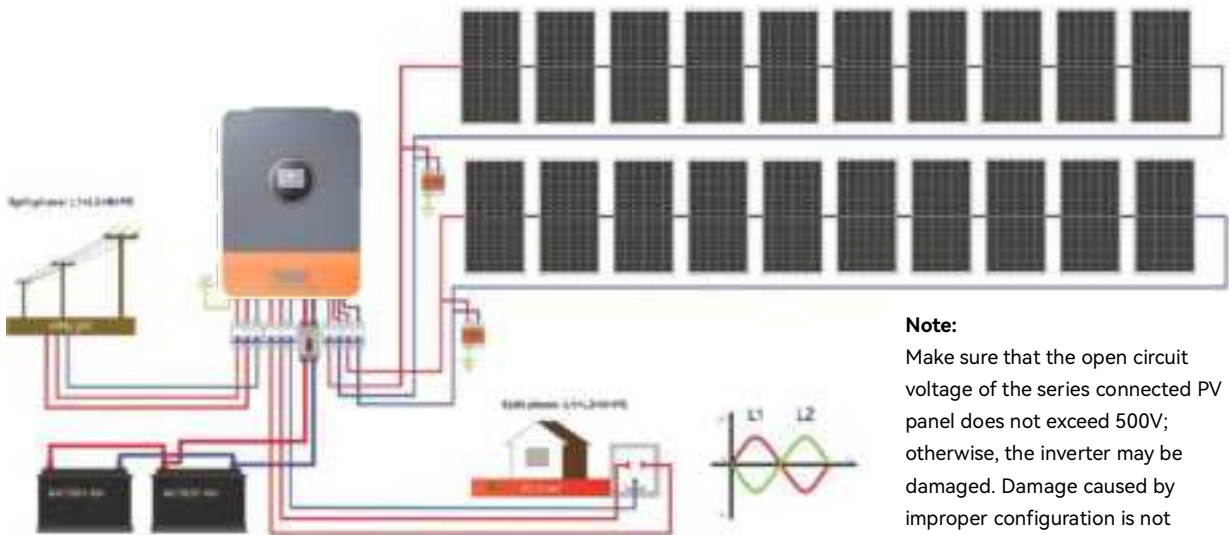

### Note:

Make sure that the open circuit voltage of the series connected PV panel does not exceed 500V; otherwise, the inverter may be damaged. Damage caused by improper configuration is not covered by the warranty.

## Single-phase Mode

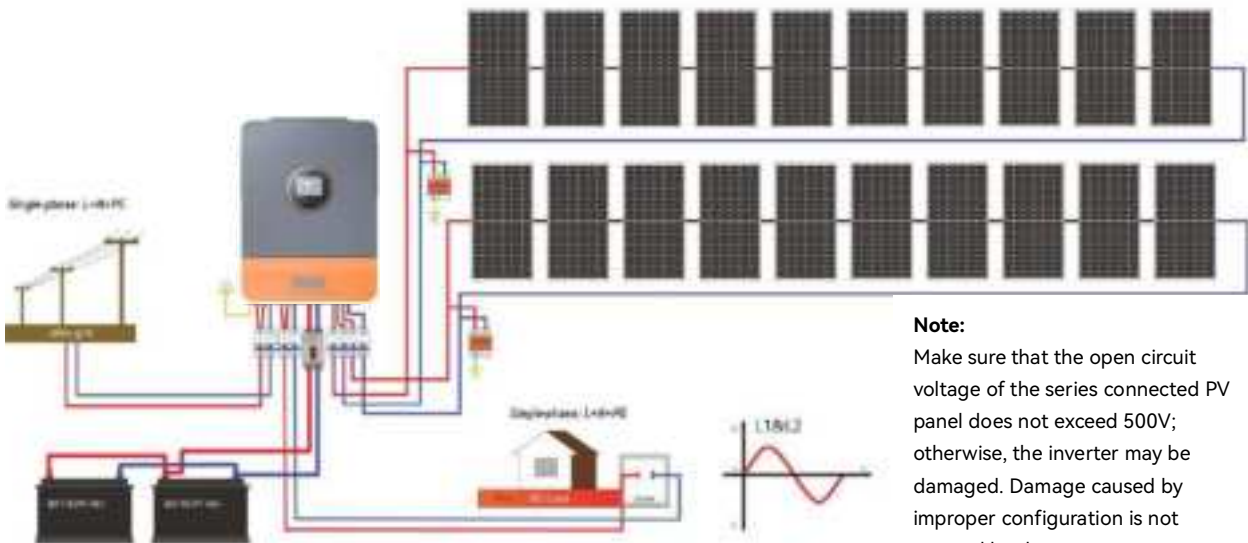

**Note:**

Make sure that the open circuit voltage of the series connected PV panel does not exceed 500V; otherwise, the inverter may be damaged. Damage caused by improper configuration is not covered by the warranty.

## 4.2 Cable and circuit breaker model

### 4.2.1 PV INPUT

| Inverter Model     | Cable Size              | Max. Input Current | Circuit Breaker Model |
|--------------------|-------------------------|--------------------|-----------------------|
| POW-SunSmart 6.5KP | 4mm <sup>2</sup> /12AWG | 18A/18A            | 2P-25A                |

### 4.2.2 Grid input

| Inverter Model     | Output Mode       | Diagram | Max. Current         | Cable Size                                                   | Circuit Breaker Model |
|--------------------|-------------------|---------|----------------------|--------------------------------------------------------------|-----------------------|
| POW-SunSmart 6.5KP | Split-phase mode  |         | 40A<br>(L1/L2/N)     | 10mm <sup>2</sup> / 8AWG<br>(L1\L2\N)                        | 3P-40A                |
|                    | Single-phase mode |         | 40A(L1/L2)<br>80A(N) | 10mm <sup>2</sup> /8AWG(L1/L2)<br>20mm <sup>2</sup> /4AWG(N) | 2P-80A                |

 
### 4.2.3 Generator input

| Inverter Model     | Output Mode       | Diagram | Max. Current         | Cable Size                                                   | Circuit Breaker Model |
|--------------------|-------------------|---------|----------------------|--------------------------------------------------------------|-----------------------|
| POW-SunSmart 6.5KP | Split-phase mode  |         | 40A<br>(L1/L2/N)     | 10mm <sup>2</sup> / 8AWG<br>(L1\L2\N)                        | 3P-40A                |
|                    | Single-phase mode |         | 40A(L1/L2)<br>80A(N) | 10mm <sup>2</sup> /8AWG(L1/L2)<br>16mm <sup>2</sup> /4AWG(N) | 2P-80A                |

### 4.2.4 Battery



| Inverter Model     | Cable Size              | Max. Current | Circuit Breaker Model |
|--------------------|-------------------------|--------------|-----------------------|
| POW-SunSmart 6.5KP | 35mm <sup>2</sup> /2AWG | 150A         | 2P-160A               |

4.2.5 AC output

| Inverter Model     | Output Mode       | Diagram                                                                           | Max. Current         | Cable Size                                                   | Circuit Breaker Model |
|--------------------|-------------------|-----------------------------------------------------------------------------------|----------------------|--------------------------------------------------------------|-----------------------|
| POW-SunSmart 6.5KP | Split-phase mode  |  | 40A<br>(L1/L2/N)     | 10mm <sup>2</sup> / 8AWG<br>(L1\N2\N)                        | 3P-40A                |
|                    | Single-phase mode |  | 40A(L1/L2)<br>80A(N) | 10mm <sup>2</sup> /8AWG(L1/L2)<br>16mm <sup>2</sup> /6AWG(N) | 2P-80A                |


NOTICE

The cable size is for reference only. If the distance between the PV array and the inverter or between the inverter and the battery is long, using thicker cables will reduce voltage drop and improve system performance.
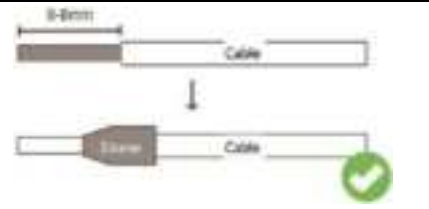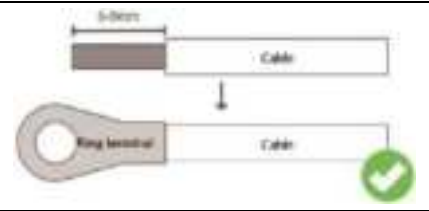
|                                                                                                                                                                                                                                                                                         |                                                                                    |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <p><b>PV input, AC input, and AC output terminals</b></p> <ol style="list-style-type: none"><li>1. Use a wire stripper to strip off 6 mm–8 mm long insulation layer of the cable.</li><li>2. Fix a sleeve at the end of the cable. (the sleeve is to be prepared by the user)</li></ol> |   |
| <p><b>Battery terminal</b></p> <ol style="list-style-type: none"><li>1. Use a wire stripper to strip off 6 mm–8 mm long insulation layer of the cable.</li><li>2. Fix a ring terminal (attached) at the end of the cable.</li></ol>                                                     |  |

## 4.3 GRID, LOAD and Gen wiring

Connect the live wire, neutral wire, and ground wire according to the cable position and sequence shown in the following figure.

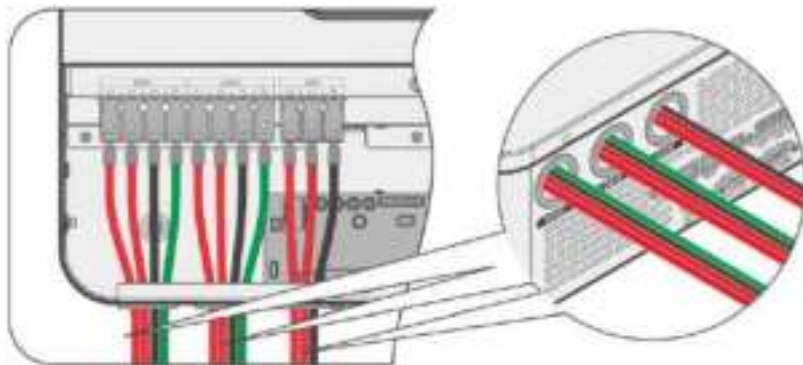


### **DANGER**

- Before connecting AC input and output, be sure to disconnect the circuit breaker to avoid the risk of electric shock. Do not conduct live operation.
- Please check whether the cables used are sufficient to meet the requirements. Cables that are too thin or of poor quality may pose serious safety hazards.

## 4.4 Battery wiring

Connect the positive and negative cables of the battery according to the cable position and sequence shown in the following figure

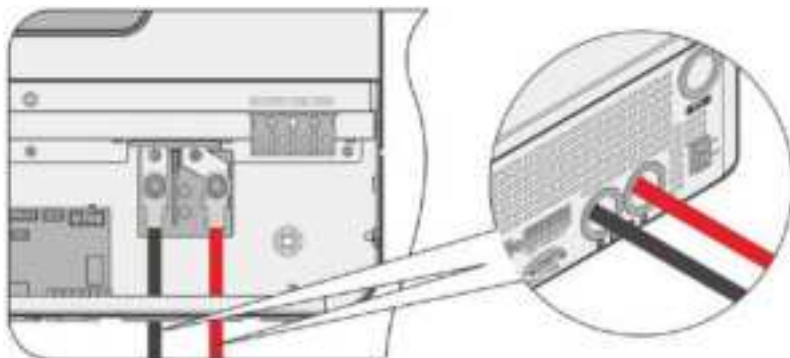


**DANGER**

- Before connecting the battery, be sure to disconnect the circuit breaker to avoid the risk of electric shock. Do not conduct live operation.
- Please check the positive and negative terminals of the battery for correct connection and no reverse connection; otherwise it may damage the inverter.
- Please check whether the cables used are sufficient to meet the requirements. Cables that are too thin or of poor quality may pose serious safety hazards.

**4.5 PV wiring**


Connect the positive and negative terminals of the two-channel PV modules according to the cable position and sequence shown in the following figure.

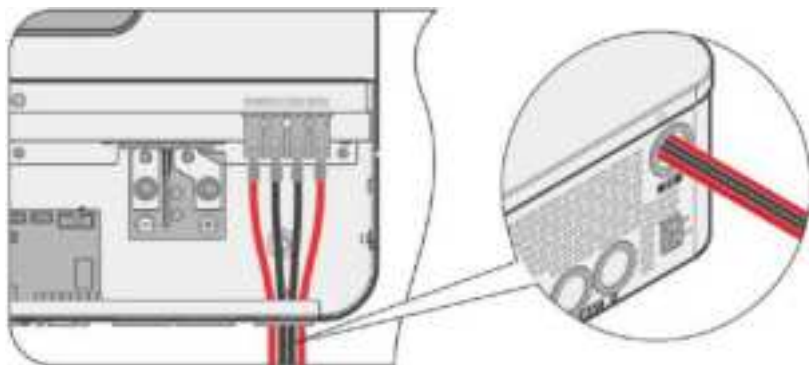**DANGER**

- Before connecting PV modules, be sure to disconnect the circuit breaker to avoid the risk of electric shock. Do not conduct live operation.
- Please make sure that the open circuit voltage of the series connected PV modules does not exceed the maximum open circuit voltage of the inverter (in ASP series, this value is 550 V); otherwise, the inverter may be damaged.


## 4.6 Dry contact wiring

Use a small-sized screwdriver to push back in the direction indicated by the arrow, and then insert the communication cable into the dry contact port. (Communication cable section:  $0.2\text{mm}^2\text{--}1.5\text{mm}^2$ )

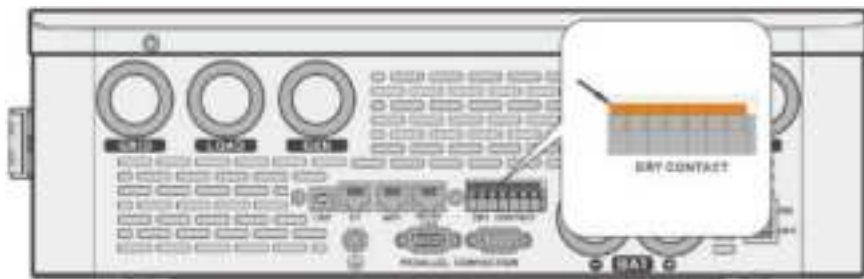

## 4.7 Grounding

Please ensure that the grounding terminal is reliably connected to the grounding busbar.

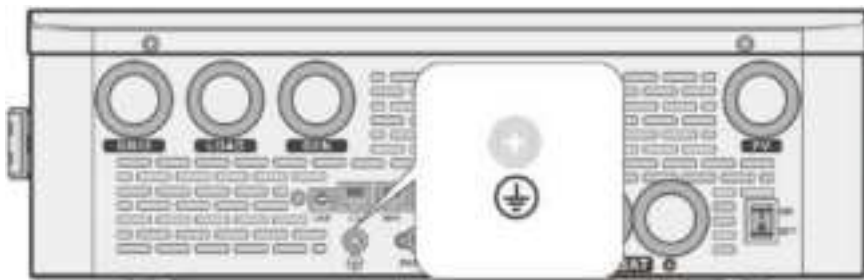

### NOTICE

- The grounding cable size shall not be less than  $4\text{ mm}^2$  and shall be as close as possible to the grounding point.

## 5 Operation


### 5.1 Starting the Inverter

After confirming reliable wiring and correct wiring sequence, restore the terminal cover to its original position.

- Step 1.** Close the circuit breaker of the battery.
- Step 2.** Press the rocker switch at the bottom of the inverter, and the screen and indicator will light up, indicating that the inverter is enabled.
- Step 3.** Close the circuit breakers for PV input, AC input, and AC output in sequence.
- Step 4.** Start loads one by one in order of power from small to large.

### 5.2 Operation and display panel

The operation and display panel of the inverter includes one LCD screen, three indicators, and four physical buttons.

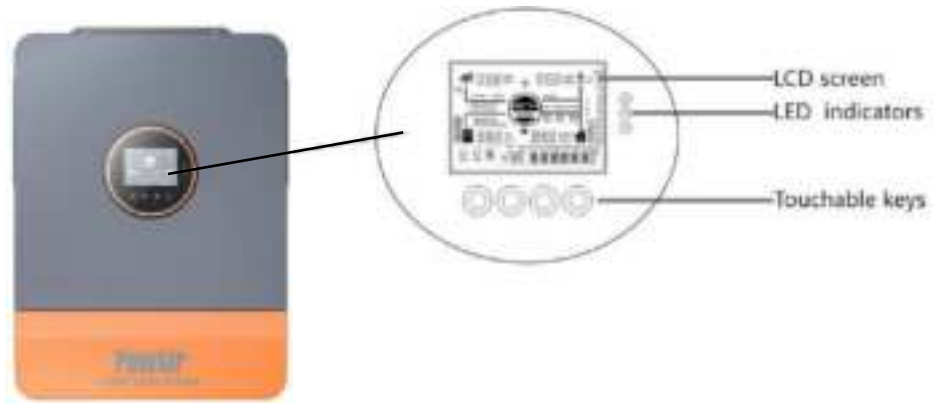

#### ➤ Physical button

| Physical button | Description                             |
|-----------------|-----------------------------------------|
|                 | Enter/Exit the setup menu.              |
|                 | Go to the next option.                  |
|                 | Go to the previous option.              |
|                 | Confirm/Enter the option in setup menu. |

| Indicators | Color  | Description                            |
|------------|--------|----------------------------------------|
| AC/INV     | Yellow | Steady on: utility grid bypass output. |
|            |        | Flash: inverter output.                |
| CHARGE     | Green  | Steady on: charging complete.          |
|            |        | Flash: charging.                       |
| FAULT      | Red    | Steady on: level-1 fault.              |
|            |        | Flash: level-2 fault.                  |
|            |        | Off: level-3 fault or level-4 fault.   |

[illegible]

| Icon                                                                                | Description             | Icon                                                                                | Description |
|-------------------------------------------------------------------------------------|-------------------------|-------------------------------------------------------------------------------------|-------------|
|  | PV panel                |  | Main        |
|  | Battery                 |  | Generator   |
|  | The inverter is working |  | Load        |

|                                                                                     |                                                       |                                                                                     |                                  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------|
|    | The inverter is communicating with the data collector |    | The buzzer is in mute mode       |
|     | Power flow direction                                  |                                                                                     |                                  |
|    | The inverter is in standby mode                       |    | The inverter is working normally |
|    | There is a fault                                      |    | Settings                         |
|    | Load power: 80%–100%                                  |    | SOC: 80%–100%                    |
|    | Load power: 60%–79%                                   |    | SOC: 60%–79%                     |
|    | Load power: 40%–59%                                   |    | SOC: 40%–59%                     |
|    | Load power: 20%–39%                                   |    | SOC: 20%–39%                     |
|    | Load power: 5%–19%                                    |    | SOC: 5%–19%                      |
|    | Battery under-voltage                                 |    | Battery over-discharge           |
|  | Overload                                              |  | BMS fault                        |
|  | System communication error                            |  | System under-voltage             |
|  | System overvoltage                                    |  | Too low system temperature       |
|  | Too high system temperature                           |  | System overcurrent               |
|  | Battery full power                                    |  | User-defined battery             |
|  | Sealed lead-acid battery                              |  | Flooded lead-acid battery        |
|  | Gel lead-acid battery                                 |  | Ternary Li-ion battery           |

|                   |                                                  |                    |                                                |
|-------------------|--------------------------------------------------|--------------------|------------------------------------------------|
| <b>LFP</b>        | LFP Li-ion battery                               | <b>ECO</b>         | Energy-saving mode                             |
| <b>PV LOAD</b>    | PV power is loading                              | <b>PV CHG</b>      | PV power is charging the battery               |
| <b>AC CHG</b>     | AC input power is charging the battery           | <b>MAIN FIRST</b>  | The output mode of the inverter is mains first |
| <b>BYPASS</b>     | The output mode of the inverter is mains bypass  | <b>SOLAR FIRST</b> | The output mode of the inverter is PV first    |
| <b>BATT FIRST</b> | The output mode of the inverter is battery first |                    |                                                |

➤ Real-time parameters view

On the screen, press the UP/DOWN button to view real-time data of the inverter in operation.

NOTICE

Main Screen

→

View Real-Time Data

Real-Time Data




| Page | PV                         | Battery                     | AC input                         | Load                            | General                |
|------|----------------------------|-----------------------------|----------------------------------|---------------------------------|------------------------|
| 1    | PV input voltage           | Battery voltage             | Ac input voltage                 | Single-phase voltage            | Current time           |
| 2    | PV input current           | Battery current             | AC input current                 | Single-phase current            | Current date           |
| 3    | PV input power             | Battery voltage             | AC total input power             | Single-phase active power       | PV gross generation    |
| 4    | PV generation for the day  | Battery current             | AC charging capacity for the day | Single-phase apparent power     | Total load consumption |
| 5    | PV heat sink temperature   | Heat sink temperature       | Mains frequency                  | Inverter output frequency       | RS485 address          |
| 6    | Rated open circuit voltage | Rated battery voltage       | Bus voltage                      | Rated output frequency          | Software version       |
| 7    | Max. PV charge current     | Max. battery charge current | Max. mains charge current        | Total output active power       | /                      |
| 8    |                            |                             | /                                | Total output apparent frequency | /                      |

23

## 5.3 LCD Screen Settings

### NOTICE

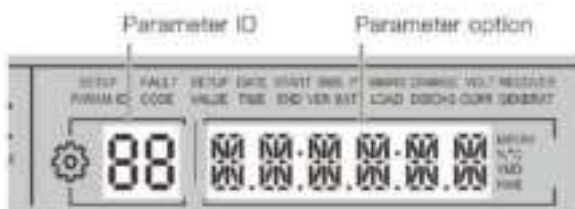

| No. | Item           | Option        | Description                                                                                                                                                                                                                                                                                                                                                                                         |
|-----|----------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 00  | Exit           | ESC           | Exit the setup menu.                                                                                                                                                                                                                                                                                                                                                                                |
| 01  | AC output mode | UTI (default) | Photovoltaic energy priority with the load, photovoltaic is not enough, the grid power and photovoltaic mixed load, photovoltaic energy is enough with the load, the excess energy to charge the battery, the grid power only starts charging when the battery is too discharged (06 Settings as "OSO(only PV)", the grid power will not charge), the battery is only discharged when off the grid. |
|     |                | SBU           | Inverter first. The PV mode is to be applied first for loading, and only when the battery voltage is lower than the set value in the item 4, it will switch to the mains mode for loading. When the battery voltage is higher than the set value in                                                                                                                                                 |

|    |                                    |                   |                                                                                                                                                                                                                                                                                                                                                                          |
|----|------------------------------------|-------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                    |                   | the item 5, it will switch back to the PV mode from the mains mode.                                                                                                                                                                                                                                                                                                      |
|    |                                    | SOL               | The PV mode is to be applied first and when the PV power is unavailable or the battery voltage is lower than the set value in the item 4, it will switch to the mains mode.                                                                                                                                                                                              |
|    |                                    | SUB               | Solar energy priority charging, insufficient solar energy, grid energy and solar energy hybrid charging (if 06 Settings as “OSO(only PV)”, the grid energy will not charge) and grid with load, when solar energy is enough to charge, excess energy not enough to load, excess solar energy and grid will hybrid load, the battery is discharged only when off the grid |
| 02 | AC input frequency                 | 50.0              | In bypass mode, the AC output frequency will adapt to the mains frequency, and in other cases, the output will follow the preset value.                                                                                                                                                                                                                                  |
|    |                                    | 60.0<br>(default) |                                                                                                                                                                                                                                                                                                                                                                          |
| 03 | AC input voltage range             | UPS<br>(default)  | When the output voltage is 120/110 V, the input voltage range is 90 V–140 V.                                                                                                                                                                                                                                                                                             |
|    |                                    | APL               | When the output voltage is 100/105 V, the input voltage range is 85 V–140 V.                                                                                                                                                                                                                                                                                             |
| 04 | Battery to mains voltage threshold | 43.6<br>(default) | When the parameter item 01 is SBU or SOL and the battery voltage is lower than the threshold, the output switches from inverter to mains. Setting range: 40 V–52 V.                                                                                                                                                                                                      |
| 05 | Mains to battery voltage threshold | 57.6<br>(default) | When the parameter item 01 is SBU or SOL and the battery voltage is higher than the threshold, the output switches from mains to inverter. Setting range: 48 V–60 V.                                                                                                                                                                                                     |
| 06 | Battery charge mode                | SNU<br>(default)  | When both PV power and mains are used to charge the battery at one time, the PV charge first and when the PV power is insufficient, the mains tags in. Only in bypass mode can both PV power and mains be used to charge the battery at one time, and only the PV charge mode can                                                                                        |

|    |                                                   |               |                                                                                                                                                                                                             |
|----|---------------------------------------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                                   |               | be enabled during inverter operation.                                                                                                                                                                       |
|    |                                                   | OSO           | Do not enable the mains charge mode when in only PV charge mode.                                                                                                                                            |
| 07 | Battery charge current                            | 60A           | POW-SunSmart 6.5KP setting range:0-140A.                                                                                                                                                                    |
| 08 | Battery type                                      | USER          | User-defined, and in this type, you can set all battery parameters.                                                                                                                                         |
|    |                                                   | SLD           | Sealed lead-acid battery.                                                                                                                                                                                   |
|    |                                                   | FLD           | Flooded lead-acid battery.                                                                                                                                                                                  |
|    |                                                   | GEL (default) | Gel lead-acid battery.                                                                                                                                                                                      |
|    |                                                   | L14/L15/L16   | LFP battery L14/L15/L16, corresponding to 14, 15, and 16 series of LFP batteries.                                                                                                                           |
|    |                                                   | N13/N14       | Ternary Li-ion battery N13/N14, corresponding to 13 and 14 series of ternary Li-ion batteries.                                                                                                              |
|    |                                                   | NOb           | No battery.                                                                                                                                                                                                 |
| 09 | Battery boost charge voltage                      | 56.8          | Setting range: 48 V-58.4 V, with a step of 0.4V, available for user-defined and lithium-ion battery types.                                                                                                  |
| 10 | Boost charge duration                             | 120           | The continuous charging time when the voltage reaches the set voltage during constant voltage charging, with a setting range of 5 min-900 min and a step of 5 min.                                          |
| 11 | Battery floating charge voltage                   | 55.2          | Setting range: 48 V-58.4 V, with a step of 0.4 V. This parameter cannot be set after successful BMS communication.                                                                                          |
| 12 | Battery over-discharge voltage (delayed shutdown) | 42            | When the battery voltage is lower than the voltage and triggers the set value in the item 13, it will turn off the inverter output. Setting range: 40 V-51.2 V, with a step of 0.4 V.                       |
| 13 | Battery over-discharge delay time                 | 5             | When the battery voltage is lower than the set value in the item 12 and triggers the delay time set in this parameter item, it will turn off the inverter output. Setting range: 5s-50s, with a step of 5s. |
| 14 | Battery under-                                    | 44            | When the battery voltage is lower than the threshold, it will give an under-voltage alarm                                                                                                                   |

|    |                                  |               |                                                                                                                                                                                               |
|----|----------------------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | voltage alarm threshold          |               | and the output will not shut down. Setting range: 40 V–52 V, with a step of 0.4 V.                                                                                                            |
| 15 | Battery discharge limit voltage  | 40            | When the battery voltage is lower than the value, the output immediately shuts down. Setting range: 40 V–50 V, with a step of 0.4 V, available for user-defined and Li-ion batteries          |
| 16 | Battery equalizing charging      | DIS(default)  | Disable equalizing charge.                                                                                                                                                                    |
|    |                                  | ENA           | Enable equalizing charge, but only available for flooded lead-acid batteries, sealed lead-acid batteries, and user-defined ones.                                                              |
| 17 | Equalizing charge voltage        | 58            | Setting range: 48 V–59.2 V, with a step of 0.4 V, but only available for flooded lead-acid batteries, sealed lead-acid batteries, and user-defined ones.                                      |
| 18 | Equalizing charge duration       | 120           | Setting range: 5 min – 900 min, with a step of 5 min, but only available for flooded lead-acid batteries, sealed lead-acid batteries, and user-defined ones.                                  |
| 19 | Equalizing charge delay time     | 240           | Setting range: 5 min – 900 min, with a step of 5 min, but only available for flooded lead-acid batteries, sealed lead-acid batteries, and user-defined ones.                                  |
| 20 | Equalizing charge interval       | 30            | Setting range: 0 day – 30 days, with a step of 1 day, but only available for flooded lead-acid batteries, sealed lead-acid batteries, and user-defined ones.                                  |
| 21 | Equalizing charge Enable/Disable | DIS (default) | Stop equalizing charge immediately.                                                                                                                                                           |
|    |                                  | ENA           | Start equalizing charge immediately.                                                                                                                                                          |
| 22 | Energy-saving mode               | DIS (default) | Disable energy-saving mode.                                                                                                                                                                   |
|    |                                  | ENA           | Enable energy-saving mode, and when the load power is below 50 W, it will turn off the inverter output after a 5-minute delay. When it exceeds 50 W, the inverter will automatically restart. |
| 23 | Overload auto                    | DIS           | Disable overload auto restart and when overload occurs, it will turn off the output and                                                                                                       |

|    |                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                    |
|----|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | restart                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | the inverter will no longer resume startup.                                                                                                                                                                        |
|    |                             | ENA<br>(default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Enable overload auto restart, and If overload occurs, the output will be turned off, and after a delay of 3 min, the output will restart. After 5 cumulative attempts, the inverter will no longer resume startup. |
| 25 | Buzzer alarm                | DIS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Disable buzzer alarm.                                                                                                                                                                                              |
|    |                             | ENA<br>(default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Enable buzzer alarm.                                                                                                                                                                                               |
| 26 | Mode switch prompt          | DIS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Disable prompt when the status of the main input source changes.                                                                                                                                                   |
|    |                             | ENA<br>(default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Enable prompt when the status of the main input source changes.                                                                                                                                                    |
| 27 | Inverter to bypass switch   | DIS                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Disable auto switch to mains for loading in case of inverter overload.                                                                                                                                             |
|    |                             | ENA<br>(default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | Enable auto switch to mains for loading in case of inverter overload.                                                                                                                                              |
| 28 | Grid charge current         | 60A                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | POW-SunSmart 6.5KP setting range:0-80A.                                                                                                                                                                            |
| 30 | RS485 communication address | ID: 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Setting range: 1-254.                                                                                                                                                                                              |
| 31 | Parallel mode               | SIG (default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Single inverter operation                                                                                                                                                                                          |
|    |                             | PAL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Parallel operation                                                                                                                                                                                                 |
|    |                             | 2P0/2P1/2P2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Two-phase parallel operation                                                                                                                                                                                       |
|    |                             | <p>Set to "2P0" for the machine screens connected to P1<br/>Assuming that the output voltage of the setting item [38] is set to 120 VAC</p> <p>1) When all the inverters connected to P2 are set to "2P1" on the screen, the voltage phase difference between P1 and P2 is 120°, the voltage between the live wire L1 of phase-P1 and the live wire L2 of phase-P2 is <math>120 \times 1.732 = 208</math> VAC, and the voltage of L1-N and L2-N is 120 VAC.</p> <p>2) When all the inverters connected to P2 are set to "2P2" on the screen, the voltage phase difference between P1 and P2 is</p> |                                                                                                                                                                                                                    |

|    |                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                                                                                                                                             |
|----|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                                      | 180°, the voltage between the live wire L1 of phase-P1 and the live wire L2 of phase-P2 is $120 \times 2 = 240$ VAC, and the voltage of L1-N and L2-N is 120 VAC.                                                                                                                                                                                                                                                                                                                                                                                                                  |                                                                                                                                                                             |
|    |                                                      | 3P1/3P2/3P3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Three-phase parallel operation                                                                                                                                              |
|    |                                                      | Set to "3P1" on the screen for all the inverters connected to P1; set to "3P2" on the screen for all the inverters connected to P2; and set to "3P3" on the screen for those connected to P3.<br>1) Assuming that the output voltage of the setting item [38] is set to 120 VAC: then the voltage phase difference of P1-P2, P1-P3, and P2-P3 is 120°, the voltage between the live wire L1 of phase-P1 and the live wire L2 of phase-P2 is $120 \times 1.732 = 208$ VAC, and similarly the voltage of L1-L3 and L2-L3 is 208 VAC; the voltage of L1-N, L2-N, and L3-N is 120 VAC. |                                                                                                                                                                             |
| 32 | RS485 communication function                         | DIS (default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Enable PC and Remote Monitoring Protocol.                                                                                                                                   |
|    |                                                      | 485                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Enable the BMS communication function based on RS485 communication.                                                                                                         |
|    |                                                      | CAN                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Enable the BMS communication function based on CAN communication.                                                                                                           |
| 33 | BMS communication                                    | Select the corresponding communication protocol in item 33 when you set it to 485 or CAN in item 32.                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                                                                             |
|    |                                                      | PAC = PACE, RDA = Ruida, AOG = Aoguan, OLT = Oliter, HWD = Sunwoda, DAQ = Daqin, WOW = SRNE, PYL = Pylontech, UOL = Vilion.                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                                                                                                                                                                             |
| 35 | Battery under-voltage recovery threshold             | 52                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | When the battery is under voltage, the battery voltage needs to be greater than the threshold to restore the AC output of the battery inverter. Setting range: 44 V–54.4 V. |
| 37 | Recharge voltage threshold for fully charged battery | 52                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | After the battery is fully charged, the inverter stops charging, and recovers charging when the battery voltage is lower than the threshold. Setting range: 44 V–54 V.      |
| 38 | AC output voltage                                    | 120                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Setting range: 100/105/110/120 /127VAC.                                                                                                                                     |
| 39 | Charge current limit (when BMS works)                | LCSET                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | The maximum battery charge current is not greater than the set value of [item 07].                                                                                          |
|    |                                                      | LCBMS (default)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | The maximum battery charge current is not greater than the maximum value of BMS.                                                                                            |

|    |                                       |               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----|---------------------------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                       | LCINV         | The maximum battery charge current is not greater than the logical judgment value of inverter.                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 40 | Period-1 battery charge start time    | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 41 | Period-1 battery charge end time      | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 42 | Period-2 battery charge start time    | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 43 | Period-2 battery charge end time      | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 44 | Period-3 battery charge start time    | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 45 | Period-3 battery charge end time      | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 46 | Timed battery charge function         | DIS (default) | Disable the function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|    |                                       | ENA           | After the timed mains charge/loading function is enabled, the power supply mode will turn into SBU, where mains is available for power supply in the set period or after battery over-discharge. If the timed discharge function is enabled at the same time, the power supply mode of the system will be changed into UTI, where mains is only available for power supply in the set charge period, and the system only switches to the power supply of battery inverter during the set discharge period or mains failure. |
| 47 | Period-1 battery discharge start time | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 48 | Period-1 battery discharge end time   | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 49 | Period-2 battery                      | 00:00:00      | Setting range: 00:00:00-23:59:00.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

|    |                                       |               |                                                                                                                                                                                                                                 |
|----|---------------------------------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | discharge start time                  |               |                                                                                                                                                                                                                                 |
| 50 | Period-2 battery discharge end time   | 00:00:00      | Setting range: 00:00:00–23:59:00.                                                                                                                                                                                               |
| 51 | Period-3 battery discharge start time | 00:00:00      | Setting range: 00:00:00–23:59:00.                                                                                                                                                                                               |
| 52 | Period-3 battery discharge end time   | 00:00:00      | Setting range: 00:00:00–23:59:00.                                                                                                                                                                                               |
| 53 | Timed battery discharge function      | DIS (default) | Disable the function.                                                                                                                                                                                                           |
|    |                                       | ENA           | After the timed battery discharge function is enabled, the power supply mode will be changed into UTI, where the system only switches to the power supply of battery inverter during the set discharge period or mains failure. |
| 54 | Current date                          | 00:00:00      | Year/Month/Day<br>Setting range: 00:01:01–99:12:31.                                                                                                                                                                             |
| 55 | Current time                          | 00:00:00      | Setting range: 00:00:00–23:59:59.                                                                                                                                                                                               |
| 56 | Leakage current protection enable     | DIS(default)  | Disable leakage current protection.                                                                                                                                                                                             |
|    |                                       | ENA           | Enable leakage current protection.                                                                                                                                                                                              |
| 57 | Charge stop current                   | 3             | The charge stops when the charge current is less than the set value. (unit: A)                                                                                                                                                  |
| 58 | SOC setting for discharge alarming    | 15            | When the capacity is less than the set value, the SOC alarms. (unit: %, only available during normal BMS communication)                                                                                                         |
| 59 | SOC setting for discharge cutoff      | 5             | When the capacity is less than the set value, the discharge stops. (unit: %, only available during normal BMS communication)                                                                                                    |
| 60 | SOC setting for charge cutoff         | 100           | When the capacity is greater than the set value, the charge stops. (unit: %, only valid during normal BMS communication)                                                                                                        |
| 61 | SOC setting for switching to mains    | 10            | When the capacity is less than the set value, it switches to mains. (unit: %, only available during normal BMS communication)                                                                                                   |
| 62 | SOC setting for                       | 100           | When the capacity is greater than the set value, it switches to the inverter output mode.                                                                                                                                       |

|    |                                      |               |                                                                                                                                                                                                                       |
|----|--------------------------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | switching to inverter output         |               | (unit: %, only available during normal BMS communication)                                                                                                                                                             |
| 63 | Auto N-PE connection switch function | DIS (default) | Disable auto N-PE connection switch.                                                                                                                                                                                  |
|    |                                      | ENA           | Enable auto N-PE connection switch.                                                                                                                                                                                   |
| 67 | Power sales setting                  | 0 (default)   | Setting range: 0-rated power.                                                                                                                                                                                         |
| 68 | AC output phase mode                 | 0             | 0 represents the single-phase mode.<br>Assuming that the AC output voltage of item 38 is 120 V, the phase difference of L1-L2 is 0°, and L1/L2 can be connected in parallel, the phase voltage of L1-N/L2-N is 120 V. |
|    |                                      | 180 (default) | 180 represents the split-phase mode.<br>Assuming that the AC output voltage of item 38 is 120 V, the phase difference of L1-L2 is 180°, the phase voltage of L1-N/L2-N is 120 V, and the voltage of L1-L2 is 240 V.   |
| 73 | Max charging current by generator    | 40A           | POW-SunSmart 6.5KP setting range:0-80A.                                                                                                                                                                               |
| 74 | Generator input power                | 6KW           | setting range:0-10KW.                                                                                                                                                                                                 |


5.4 Timed charge/discharge function

POW-SunSmart 6.5KP has the timed power charge/discharge function. Users can set different charge and discharge periods according to the local time-of-use price, thus reasonably using mains and PV power. When mains is expensive, the battery inverter is used to supply power to the load; when mains is cheap, it can be used to supply power to and charge the load, thus helping users reduce electricity expenses to the full extent. Users can turn on/off the timed charge/discharge function in items 46 and 53 in the setup menu, and set charge and discharge periods in parameters 40-45 and 47-52.

The following is an example to help users understand the function.

Before using the function for the first time, please set the local time and date in parameters 54 and 55, and then you can set corresponding periods based on the local time-of-use price.

NOTICE

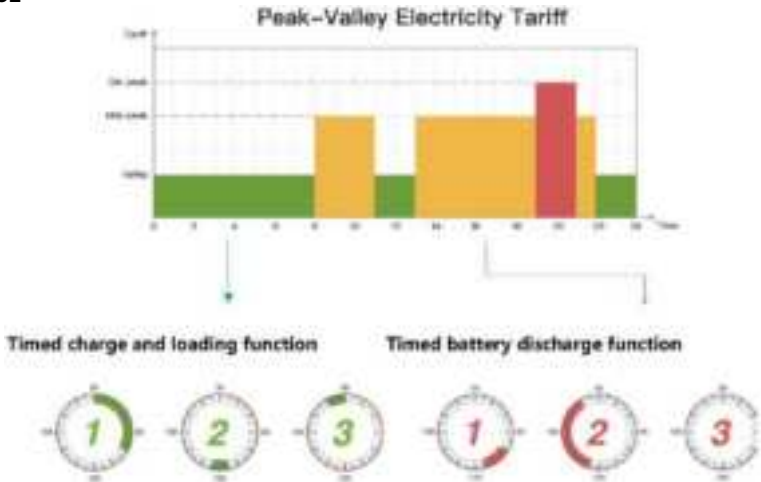

With 3 definable periods, users can freely set the mains charge/loading period in the range of 00:00-23:59. During the period set by the user, in case of PV energy output, it will be used first; in case of no PV energy output or lack of PV energy, mains will be used as a supplement.

With 3 definable periods, users can freely set the battery discharge period in the range of 00:00-23:59. During the period set by the user, the inverter will first use the battery inverter to load; if the battery power is insufficient, the inverter will automatically switch to mains to ensure stable operation of the load.

## 5.5 Battery parameters

### ➤ Lead-acid battery


| Battery type<br>Parameters                                                      | Sealed lead acid battery (SLD)  | Gel lead acid battery (GEL) | Flooded lead acid battery (FLD) | User-defined (USE) | Adjustable |
|---------------------------------------------------------------------------------|---------------------------------|-----------------------------|---------------------------------|--------------------|------------|
| Overvoltage disconnection voltage                                               | 60V                             | 60V                         | 60V                             | 60V                |            |
| Battery fully charged recovery point                                            | 52V                             | 52V                         | 52V                             | 52V                | ✓          |
| Boost charge voltage                                                            | 57.6V                           | 56.8V                       | 57.6V                           | 40~58.4V           | ✓          |
| Undervoltage alarm voltage([01] fault)                                          | 44V                             | 44V                         | 44V                             | 40~52V             | ✓          |
| Undervoltage alarm voltage recovery point([01] fault)                           | Undervoltage alarm voltage+0.8V |                             |                                 |                    |            |
| Low voltage disconnection voltage([04] fault)                                   | 42V                             | 42V                         | 42V                             | 40~51.2V           | ✓          |
| Low voltage disconnection voltage recovery point ([04] fault) (setup item [35]) | 52V                             | 52V                         | 52V                             | 52V                | ✓          |
| Discharge limit voltage                                                         | -                               | -                           | -                               | 40~50V             | ✓          |
| Over-discharge delay time                                                       | 5s                              | 5s                          | 5s                              | 5 ~ 50s            | ✓          |
| Boost charge duration                                                           | -                               | -                           | -                               | 5 ~ 900 minutes    | ✓          |

## ➤ Li-ion battery

| Battery type<br>Parameters                                                      | Ternary<br>(N13)                | Ternary<br>(N14) | LFP<br>(L16) | LFP<br>(L15) | LFP<br>(L14) | Adjustable |
|---------------------------------------------------------------------------------|---------------------------------|------------------|--------------|--------------|--------------|------------|
| Overvoltage disconnection voltage                                               | 60V                             | 60V              | 60V          | 60V          | 60V          |            |
| Battery fully charged recovery point                                            | 50.4V                           | 54.8V            | 53.6V        | 50.4V        | 47.6V        | √          |
| Boost charge voltage                                                            | 53.2V                           | 57.6V            | 56.8V        | 53.2V        | 49.2V        | √          |
| Undervoltage alarm voltage([01] fault)                                          | 43.6V                           | 46.8V            | 49.6V        | 46.4V        | 43.2V        | √          |
| Undervoltage alarm voltage recovery point([01] fault)                           | Undervoltage alarm voltage+0.8V |                  |              |              |              |            |
| Low voltage disconnection voltage([04] fault)                                   | 38.8V                           | 42V              | 48.8V        | 45.6V        | 42V          | √          |
| Low voltage disconnection voltage recovery point ([04] fault) (setup item [35]) | 46V                             | 49.6V            | 52.8V        | 49.6V        | 46V          | √          |
| Discharge limit voltage                                                         | 36.4V                           | 39.2V            | 46.4V        | 43.6V        | 40.8V        | √          |
| Over-discharge delay time                                                       | 30s                             | 30s              | 30s          | 30s          | 30s          | √          |
| Boost charge duration                                                           | 120 minutes                     | 120 minutes      | 120 minutes  | 120 minutes  | 120 minutes  | √          |


## 6 Communication

### 6.1 Overview

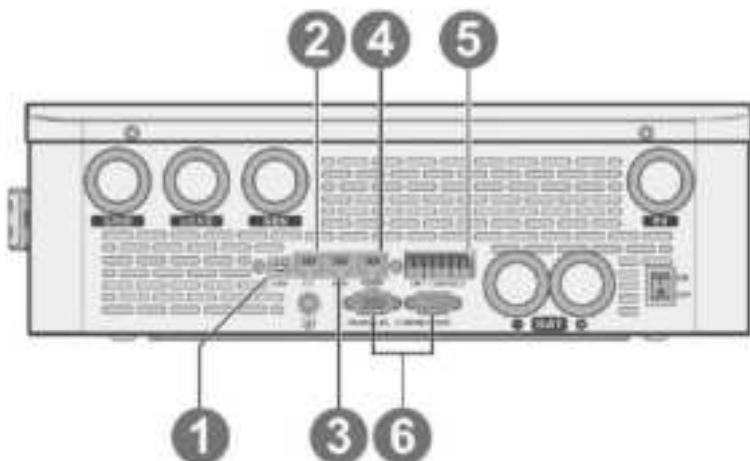

|   |                |   |                  |   |               |
|---|----------------|---|------------------|---|---------------|
| 1 | USB-B port     | 2 | CT port          | 3 | WIFI port     |
| 4 | RS485/CAN port | 5 | Dry contact port | 6 | Parallel port |


### 6.2 USB-B port

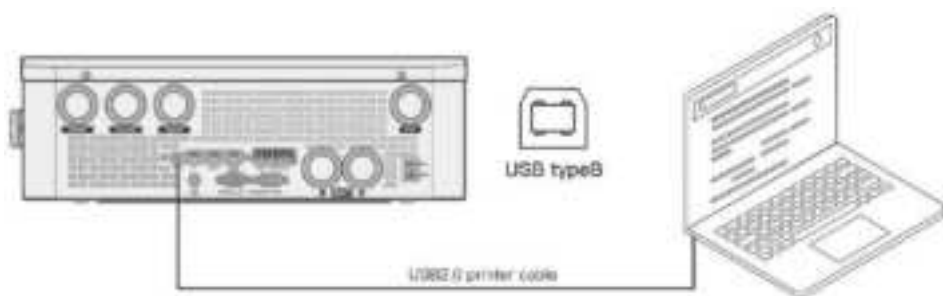

Users can use the upper computer software through the port to read and modify device parameters. If needing the installation package for the upper computer software, you can download it from the official website of SRNE, or contact us to get it.

6.3 WIFI port


The WIFI port is used to connect to the Wi-Fi/GPRS data acquisition module, and then users can view the operation status and parameters of the inverter via the mobile APP.

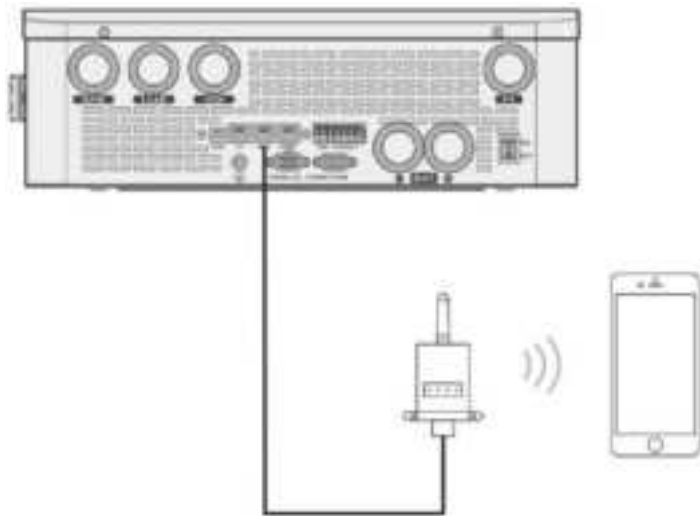

| RJ45  | Definition |
|-------|------------|
| Pin 1 | 5 V        |
| Pin 2 | GND        |
| Pin 3 | /          |
| Pin 4 | /          |
| Pin 5 | /          |
| Pin 6 | /          |
| Pin 7 | RS485-A    |
| Pin 8 | RS485-B    |

6.4 RS485/CAN port

The RS485/CAN port is used to connect to the BMS of the Li-ion battery.

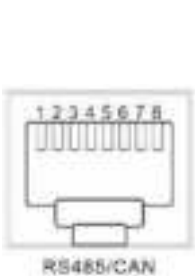


| RJ45  | Definition |
|-------|------------|
| Pin 1 | 5 V        |
| Pin 2 | GND        |
| Pin 3 | /          |
| Pin 4 | /          |
| Pin 5 | /          |
| Pin 6 | /          |
| Pin 7 | RS485-A    |
| Pin 8 | RS485-B    |

## 6.5 Dry contact port

The dry contact port has 4 functions:

1. RSD power supply
2. Remote ON/OFF
3. Battery temperature sampling
4. Remote generator start/stop

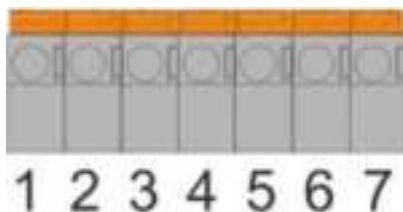


| Function                        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| RSD power supply                | PIN 1 is GND , PIN 2 is RSD 12V+                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| Remote ON/OFF                   | When pin 1 is connected to pin 3, the inverter will turn off the AC output. When disconnected, the inverter is in normal output.                                                                                                                                                                                                                                                                                                                                                                                          |
| Temperature sampling (reserved) | Pins 1 and 4 can be used for battery temperature sampling compensation.                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| Remote generator start/stop     | <p>When the battery voltage reaches the under-voltage alarm voltage (parameter 14) or the voltage threshold for mains to switch to the battery (parameter 04), pins 6 to 5 are normally open, and pins 7 to 5 are normally closed.</p> <p>When the battery voltage reaches the voltage threshold for the battery to switch to mains (parameter 05), or the battery is fully charged, pins 6 to 5 are normally closed, and pins 7 to 5 are normally open. (5/6/7 pin output: 125 VAC/1 A, 230 VAC/1 A, and 30 VDC/1 A)</p> |

### NOTICE

- If you need to use the remote start/stop function of the generator with dry contact, please ensure that the generator has an ATS and supports remote start/stop.

## 7 Fault Codes and Response Measures

### 7.1 Fault codes

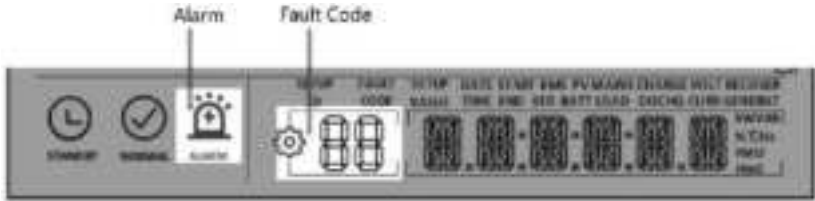

| Fault Code | Meaning          | Affect Output or Not | Description                                                            |
|------------|------------------|----------------------|------------------------------------------------------------------------|
| 01         | BatVoltLow       | Yes                  | Battery under-voltage alarm.                                           |
| 02         | BatOverCurrSw    | Yes                  | Overcurrent software protection for average battery discharge current. |
| 03         | BatOpen          | Yes                  | Disconnected battery alarm.                                            |
| 04         | BatLowEod        | Yes                  | Under-voltage battery discharge stop alarm.                            |
| 05         | BatOverCurrHw    | Yes                  | Battery overcurrent hardware protection.                               |
| 06         | BatOverVolt      | Yes                  | Charge overvoltage protection.                                         |
| 07         | BusOverVoltHw    | Yes                  | Bus overvoltage hardware protection.                                   |
| 08         | BusOverVoltSw    | Yes                  | Bus overvoltage software protection.                                   |
| 09         | PvVoltHigh       | Yes                  | PV overvoltage protection.                                             |
| 10         | PvBoostOCSw      | No                   | Boost overcurrent software protection.                                 |
| 11         | PvBoostOCHw      | No                   | Boost overcurrent hardware protection.                                 |
| 12         | SpiCommErr       | Yes                  | SPI communication fault of master and slave chips.                     |
| 13         | OverloadBypass   | Yes                  | Bypass overload protection.                                            |
| 14         | OverloadInverter | Yes                  | Inverter overload protection.                                          |
| 15         | AcOverCurrHw     | Yes                  | Inverter overcurrent hardware protection.                              |
| 16         | AuxDSpReqOffPWM  | Yes                  | Slave chip OFF request fault.                                          |
| 17         | InvShort         | Yes                  | Inverter short-circuit protection.                                     |
| 18         | Bussoftfailed    | Yes                  | Bus soft-start failure.                                                |
| 19         | OverTemperMppt   | No                   | PV heat sink over-temperature protection.                              |
| 20         | OverTemperInv    | Yes                  | Inverter heat sink over-temperature.                                   |

|    |                    |     |                                                                                                 |
|----|--------------------|-----|-------------------------------------------------------------------------------------------------|
| 21 | FanFail            | Yes | Fan fault.                                                                                      |
| 22 | EEPROM             | Yes | Memory fault.                                                                                   |
| 23 | ModelNumErr        | Yes | Model setting error.                                                                            |
| 24 | Busdiff            | Yes | Positive and negative bus voltage imbalance.                                                    |
| 25 | BusShort           | Yes | Bus short-circuit.                                                                              |
| 26 | Rlyshort           | Yes | Inverter AC output backward to bypass AC output.                                                |
| 28 | LinePhaseErr       | Yes | Mains input phase error.                                                                        |
| 29 | BusVoltLow         | Yes | Bus low-voltage protection.                                                                     |
| 30 | BatCapacityLow1    | Yes | Alarm of battery capacity rate below 10% (taking effect after BMS communication is successful). |
| 31 | BatCapacityLow2    | No  | Alarm of battery capacity rate below 5% (taking effect after BMS communication is successful)   |
| 32 | BatCapacityLowStop | Yes | Battery low-capacity OFF (taking effect after BMS communication is successful).                 |
| 34 | CanCommFault       | Yes | Parallel can communication fault.                                                               |
| 35 | ParaAddrErr        | Yes | Parallel ID (communication address) setting error.                                              |
| 37 | ParaShareCurrErr   | Yes | Parallel current sharing fault.                                                                 |
| 38 | ParaBattVoltDiff   | Yes | Large battery voltage difference in parallel mode.                                              |
| 39 | ParaAcSrcDiff      | Yes | Inconsistent mains input source in parallel mode.                                               |
| 40 | ParaHwSynErr       | Yes | Hardware synchronization signal error in parallel mode.                                         |
| 41 | InvDcVoltErr       | Yes | Inverter DC voltage error.                                                                      |
| 42 | SysFwVersionDiff   | Yes | Inconsistent system firmware version in parallel mode.                                          |

|    |                                   |     |                                                                                    |
|----|-----------------------------------|-----|------------------------------------------------------------------------------------|
| 43 | ParaLineContErr                   | Yes | Parallel connection fault.                                                         |
| 44 | Serialnumbererror                 | Yes | Failure to set the serial number before leaving factory.                           |
| 45 | Errorsettingofsplit-<br>phasemode | Yes | Setting error of setting items in parallel mode.                                   |
| 56 | Lowinsulation                     | No  | Abnormally low earth impedance of PV1+, PV2+, and PV-.                             |
| 57 | Leakagecurrent<br>overloadfault   | Yes | System current leakage out of the standard.                                        |
| 58 | BMSComErr                         | No  | BMS communication fault.                                                           |
| 60 | BMSUnderTem                       | No  | BMS under-temperature alarm (taking effect after BMS communication is successful). |
| 61 | BMSOverTem                        | No  | BMS over-temperature alarm (taking effect after BMS communication is successful).  |
| 62 | BMSOverCur                        | No  | BMS overcurrent alarm (taking effect after BMS communication is successful).       |
| 63 | BMSUnderVolt                      | No  | BMS under-voltage alarm (taking effect after BMS communication is successful).     |
| 64 | BMSOverVolt                       | No  | BMS overvoltage alarm (taking effect after BMS communication is successful).       |

## 7.2 Troubleshooting

| Fault Code | Meaning                                     | Cause                                                                                                    | Solution                                                                                                                                                                                                                |
|------------|---------------------------------------------|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| /          | No screen display                           | There is no power input, or the device switch at its bottom is not turned on                             | Check if the battery air-switch or PV air-switch has been closed; check if the switch is in "ON"; press any button on the screen to exit the screen sleep mode.                                                         |
| 01         | Battery under-voltage                       | The battery voltage is lower than the value set in parameter [14]                                        | Charge the battery until the battery voltage exceeds the value set in parameter [14].                                                                                                                                   |
| 03         | Disconnected battery                        | The battery is not connected, or the BMS of the lithium-ion battery is in the discharge protection state | The battery is not connected, or the BMS of the lithium-ion battery is in the discharge protection state                                                                                                                |
| 04         | Battery over-discharge                      | The battery voltage is lower than the value set in parameter 12                                          | Manual reset: Turn off the power, and restart Automatic reset: Charge the battery until the battery voltage is higher than the value set in parameter [35]                                                              |
| 06         | Rechargeable battery overvoltage protection | The battery is in the overvoltage state                                                                  | Manually turn off the power, and restart. Check if the battery voltage exceeds the limit. If the limit is exceeded, discharge the battery until the voltage is below the overvoltage recovery threshold of the battery. |
| 13         | Bypass overload (software detection)        | The output power or current of the bypass is overloaded within a certain period                          | Reduce the load power, and restart the device. For more details, please refer to item 11 in Protection Function.                                                                                                        |
| 14         | Inverter overload (software                 | The output power or current of the inverter                                                              |                                                                                                                                                                                                                         |

|    |                                                                                 |                                                                          |                                                                                                                                                                             |
|----|---------------------------------------------------------------------------------|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | detection)                                                                      | is overloaded within a certain period                                    |                                                                                                                                                                             |
| 19 | Over-high temperature of the heat sink for PV input (software detection)        | The temperature of the heat sink for PV input exceeds 90°C for 3s        | Wait until the temperature of the heat sink is below the over-temperature recovery temperature, when charge and discharge return to normal                                  |
| 20 | Over-high temperature of the heat sink for inverter output (software detection) | The temperature of the heat sink for inverter output exceeds 90°C for 3s |                                                                                                                                                                             |
| 21 | Fan fault                                                                       | Software detection finds the fan has a fault                             | Shut down, manually flick the fan, and check if any foreign objects are blocking it                                                                                         |
| 26 | AC input relay short-circuit                                                    | Stuck relay for AC output                                                | Manually shut down, and restart. If the fault occurs again after restarting, contact the after-sales service personnel to repair the machine                                |
| 28 | Mains input phase fault                                                         | The phase of AC input is inconsistent with that of AC output             | Ensure that the phase of AC input is the same as that of AC output. For example, if the output is in the split-phase mode, the input shall also be in the split-phase mode. |

**NOTICE**

- If you encounter product faults that cannot be solved by the methods listed in the above table, please contact our after-sales service department for technical support, and do not disassemble the device by yourself.

## 8 Protection Function and Product Maintenance

### 8.1 Protection function

| No. | Protection Function                  | Description                                                                                                                                                                                                |
|-----|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1   | PV current-limiting protection       | When the charge current or power of the configured PV array exceeds the rated current and power of the inverter, it will charge at the rated current and power.                                            |
| 2   | PV overvoltage protection            | If the PV voltage exceeds the maximum allowable value of hardware, the machine will report the fault, and stop the step-up of PV to output sine AC waves.                                                  |
| 3   | Reverse charge protection at night   | At night, as the battery voltage is greater than that of the PV module, it will prevent the battery from discharging to the PV module.                                                                     |
| 4   | Mains input overvoltage protection   | When the mains voltage of each phase exceeds 140 VAC, it will stop mains from charging, and switch it to inverter output.                                                                                  |
| 5   | Mains input under-voltage protection | When the mains voltage of each phase is lower than 90 VAC, it will stop mains from charge, and switch it to inverter output.                                                                               |
| 6   | Battery overvoltage protection       | When the battery voltage reaches the overvoltage disconnect voltage threshold, it will automatically stop PV and mains from charging the battery, thus preventing damage to the battery due to overcharge. |
| 7   | Battery under-voltage protection     | When the battery voltage reaches the low-voltage disconnect voltage threshold, it will automatically stop discharging the battery, thus preventing damage to the battery due to over-discharge.            |
| 8   | Battery overcurrent protection       | When the battery current exceeds the allowable range of hardware, the machine will turn off the output, and stop discharging the battery.                                                                  |

|    |                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|----|---------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9  | AC output short-circuit protection    | When a short-circuit fault occurs at the load output terminal, it will immediately turn off the output of AC voltage. Only after manually powering on the device, normal output restores.                                                                                                                                                                                                                                                                              |
| 10 | Heat sink over-temperature protection | When the internal temperature of the inverter is too high, the inverter will stop charging and discharging; when the temperature returns to normal, the inverter will charge and discharge again.                                                                                                                                                                                                                                                                      |
| 11 | Overload protection                   | After overload protection is triggered, the inverter output will be restored after 3 min, and after 5 times of overload, the output will be off until the frequency changer is restarted. (102%< load <110%): An error will be reported, and the output will be turned off after 5 min. (110%< load <125%): An error will be reported, and the output will be turned off after 10s. Load >125%: An error will be reported, and the output will be turned off after 5s. |
| 12 | AC backward protection                | Prevent the mains of battery inverter backward to bypass AC input                                                                                                                                                                                                                                                                                                                                                                                                      |
| 13 | Bypass overcurrent protection         | Built-in circuit breaker for AC input overcurrent protection.                                                                                                                                                                                                                                                                                                                                                                                                          |
| 14 | Bypass wiring error protection        | When the phase of the two bypass inputs is different from that of the inverter split-phase, the machine will prohibit connecting to the bypass, thus preventing the power failure or short circuit of load when connecting to the bypass.                                                                                                                                                                                                                              |

## 8.2 Maintenance

In order to maintain the best long-term performance, it is recommended to conduct following checks twice a year.

1. Make sure that the airflow around the inverter is smooth, and remove any dirt or debris from the heat sink.
2. Check whether the insulation of all exposed wires is damaged by exposure to sunlight, friction with other objects around them, dryness, bite by insects or rodents, etc. Repair or replace wires if necessary.
3. Verify the consistency of the indication and display with the device operation. Please pay attention to any faults or errors, and take corrective actions if necessary.
4. Check all wiring terminals for corrosion, insulation damage, and signs of high temperature or burning/discoloration, and tighten the terminal screws.
5. Check for dirt, nesting insects, and corrosion, clean up as required, and clean the Insect proof net regularly.
6. If the arrester fails, replace it in time against lightning damage to the inverter or even other devices of the user.

### **DANGER**

- Before conducting any inspection or operation, please ensure that the inverter is disconnected from all power sources and that the capacitor is fully discharged to avoid the risk of electric shock.

**Our company will not be held responsible for damage due to the following reasons:**

1. Damage caused by improper use or use in the wrong location.
2. The open circuit voltage of the PV module exceeds the maximum allowable voltage.
3. The operating temperature exceeds the limited operating temperature range.
4. Unauthorized personnel dismantle, and repair the inverter.
5. Force majeure: damage during transportation or handling of the inverter

## 9 Data sheet

| Inverter Model                      | POW-SunSmart 6.5KP                                         | Settable |
|-------------------------------------|------------------------------------------------------------|----------|
| <b>Inverter output</b>              |                                                            |          |
| Rated output power                  | 6500W                                                      |          |
| Max. peak power                     | 13,000 VA                                                  |          |
| Rated output voltage                | 120/240 VAC (single-phase/split-phase)                     | Y        |
| Rated frequency                     | 50/60 Hz                                                   | Y        |
| Output wave                         | Pure sine wave                                             |          |
| Switching time                      | 10 ms (typical value)                                      |          |
| Parallel number                     | 6                                                          |          |
| <b>Battery</b>                      |                                                            |          |
| Battery type                        | Lithium-ion battery/lead-acid battery/user-defined battery | Y        |
| Rated battery voltage               | 48 Vdc                                                     |          |
| Voltage range                       | 40 Vdc–60 Vdc                                              | Y        |
| Max. mains/generator charge current | 80 A                                                       | Y        |
| Max. mix charge current             | 140 A                                                      | Y        |
| <b>PV input</b>                     |                                                            |          |
| MPPT channel number                 | 2                                                          |          |
| Max. input power                    | 5000W/5000W                                                |          |
| Max. Input Current                  | 18/18 A                                                    |          |
| Max. open circuit voltage           | 550 Vdc+550Vdc                                             |          |
| MPPT operating voltage range        | 150 Vdc–450 Vdc                                            |          |
| <b>Mains/generator input</b>        |                                                            |          |
| Input voltage range                 | 65 VAC–140 VAC                                             |          |
| Input frequency range               | 50/60 Hz                                                   |          |
| Bypass overload current             | 40A                                                        |          |
| <b>Efficiency</b>                   |                                                            |          |
| MPPT tracking efficiency            | 99.9%                                                      |          |
| Max. efficiency of battery          | 93%                                                        |          |


|                            |                                              |   |
|----------------------------|----------------------------------------------|---|
| inverter                   |                                              |   |
| <b>General</b>             |                                              |   |
| Dimension                  | 584.6mm*410 mm*133 mm                        |   |
| Weight                     | 18.9 kg                                      |   |
| Protection level           | IP20, for indoor use only                    |   |
| Ambient temperature        | -10°C-55°C, >45°C derating                   |   |
| Noise                      | <60 dB                                       |   |
| Cooling mode               | Intelligent fan                              |   |
| <b>Communication</b>       |                                              |   |
| Built-in interface         | RS485/CAN/USB/dry contact                    | Y |
| External module (optional) | Wi-Fi/GPRS                                   | Y |
| <b>Certification</b>       |                                              |   |
| Safety                     | IEC62109-1, IEC62109-2, and UL1741           |   |
| EMC                        | EN61000-6-1, EN61000-6-3, and FCC 15 class B |   |
| RoHS                       | Yes                                          |   |

## 10 Parallel Wiring

### 10.1 Parallel operation

1. The parallel operation supports up to six solar storage inverters.
2. When using the parallel function, it is necessary to connect the parallel communication cable in a correct and reliable manner. See the figure blow for the communication cable (packaging accessory):

Parallel communication cable\*1

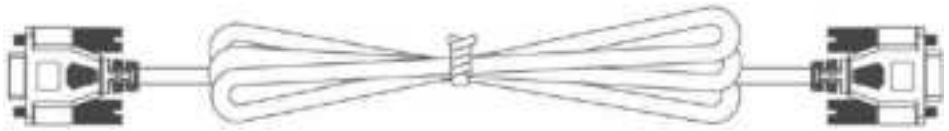

### 10.2 Cautions for parallel connection

**Warning:**

**1. PV wiring:**

In parallel connection, the PV array of each inverter must be independent, and the PV array of PV1 and PV2 for one inverter must also be independent.

**2. Battery wiring:**

In single-phase or three-phase parallel connection, all solar storage inverters must be connected to the same battery, with BAT+ connected to BAT+ and BAT- to BAT-, and before power on and start-up, it is necessary to check and ensure correct connection, wiring length, and cable size, so as to avoid the abnormal operation of parallel system output caused by wrong connection.

**3. LOAD wiring:**

In single-phase parallel connection, all solar storage inverters must be connected in the manner of L-to-L, N-to-N, and PE-to-PE, and before power on and start-up, it is necessary to check and ensure correct connection, wiring length, and cable size, so as to avoid the abnormal operation of parallel system output caused by wrong connection. In three-phase parallel connection, all solar storage inverters must be connected in the manner of N-to-N and PE-to-PE. The L lines of all inverters in the same phase shall be connected together, but the AC output L lines of different phases shall not be connected together. Other cautions are the same as those for single-phase

parallel connection.

#### **4. GRID and GEN wiring:**

In single-phase parallel connection, all solar storage inverters must be connected in the manner of L-to-L, N-to-N, and PE-to-PE, and before power on and start-up, it is necessary to check and ensure correct connection, wiring length, and cable size, so as to avoid the abnormal operation of parallel system output caused by wrong connection. Meanwhile, it is not allowed to have multiple different AC source inputs to avoid damage to the external equipment of the inverter. The AC source input shall be consistent and unique.

In three-phase parallel connection, all solar storage inverters must be connected in the manner of N-to-N and PE-to-PE. The L lines of all inverters in the same phase shall be connected together, but the AC output L lines of different phases shall not be connected together. Other cautions are the same as those for single-phase.

#### **5. Communication wiring:**

Our company's communication cable for parallel operation is a DB15 standard computer cable with shielding function, and it is used for single-phase or three-phase parallel connection. Each inverter shall be connected with one out and one in, that is, the male connector (out) of the inverter is to be connected to the female connector (in) of the parallel inverter, not the one of the inverter. In addition, DB15 terminal screws will be used to tighten the communication cable of each parallel inverter to avoid falling off or poor contact of the communication cable, followed by abnormal operation or damage of the system output.

- 6.** Before and after connecting the system, please carefully refer to the following system wiring diagrams to ensure that all wiring is correct and reliable before power on.

10.3 Wiring diagram for single-phase parallel connection (phase difference between L1 and L2: 0°)


The communication cable of parallel solar storage inverter is to be locked with screws after connecting. See the diagram below:




➤ See the diagram below for parallel connection

Set the item [31] to "PAL" and the item [68] to "0°." When setting the item [38] to "120 V," the output L-N voltage is 120 V


1. Two parallel-connected solar storage inverters:

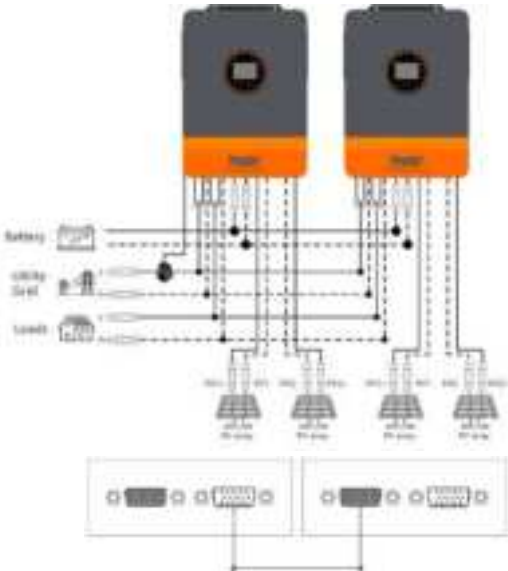


## 2. Three parallel-connected solar storage inverters:

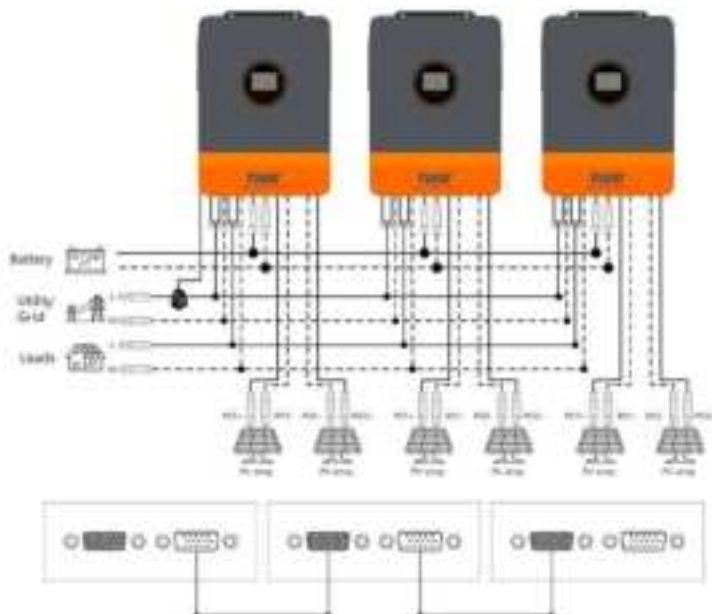


## 3. Four parallel-connected solar storage inverters:

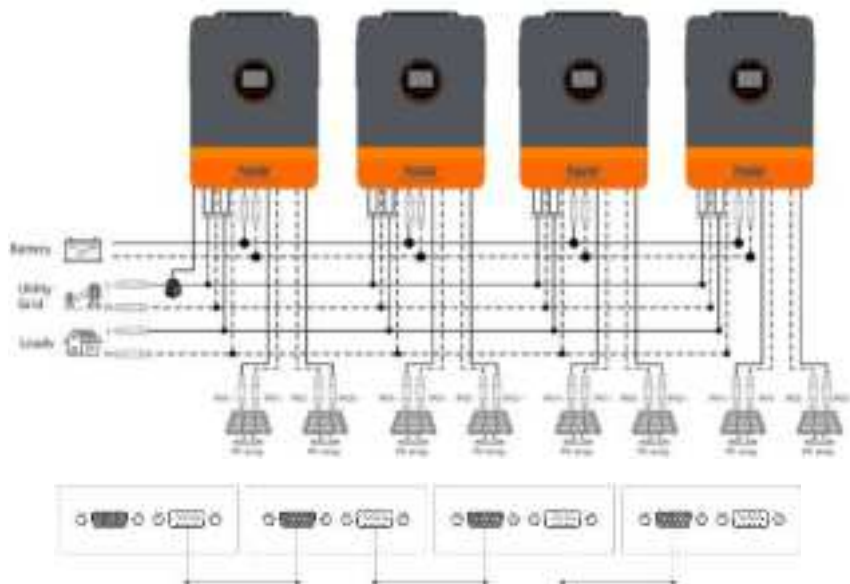

4. Five parallel-connected solar storage inverters:

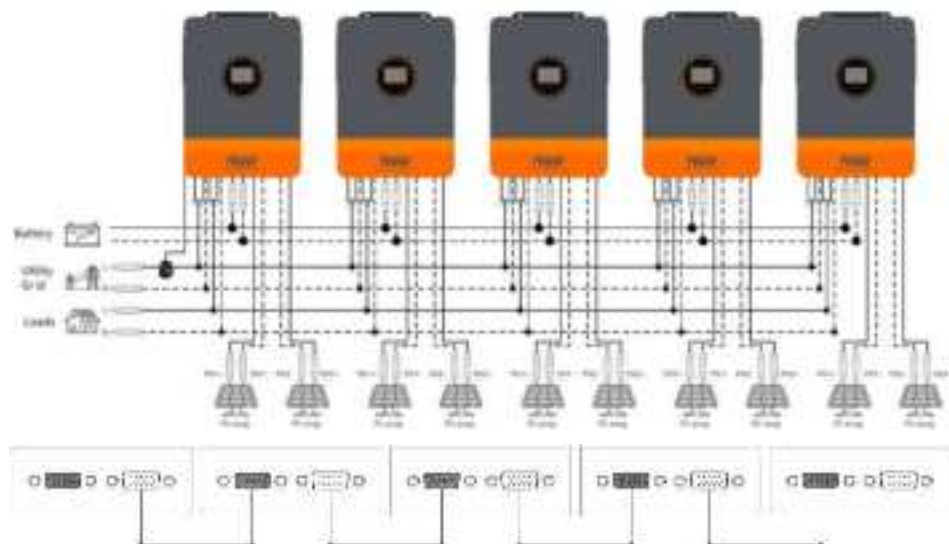

5. Six parallel-connected solar storage inverters:

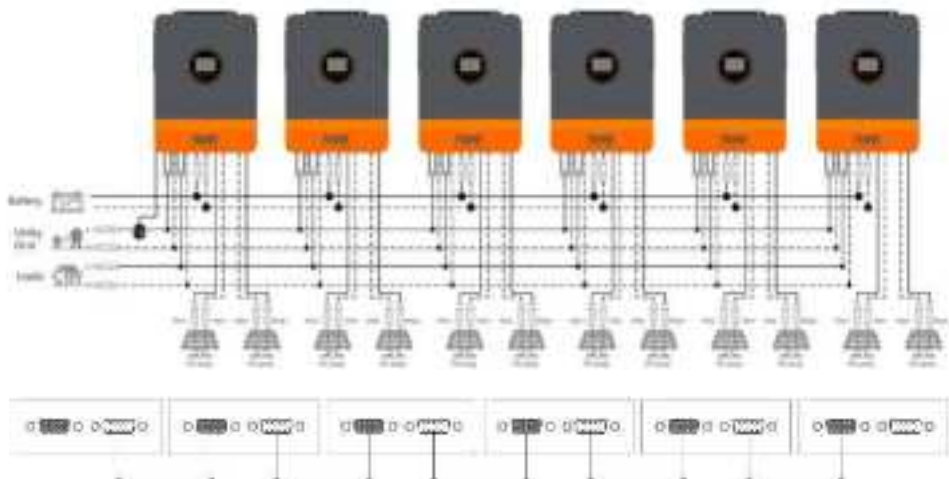


## 10.4 Wiring diagram for two-phase parallel connection (phase difference between L1 and L2: 0°)

- (1) P1: Set the item [31] to "2P0;" P2: Set the item [31] to "2P1," all of the P1/P2 inverter item [68] can not be set, it is default "0°" and the phase difference between P1 and P2 is 120°. When setting the item [38] to "120 V," the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is 208 V, and the L1-N voltage is 120 V.
- (2) P1: Set the item [31] to "2P0;" P2: Set the item [31] to "2P2," all of the P1/P2 inverter item [68] can not be set, it is default "0°" and the phase difference between P1 and P2 is 180°. When setting the item [38] to "120 V," the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is 240 V, and the L1-N voltage is 120 V, L2-N voltage is 120V.


### a. Split-phase system (two inverters)

1+1 system:

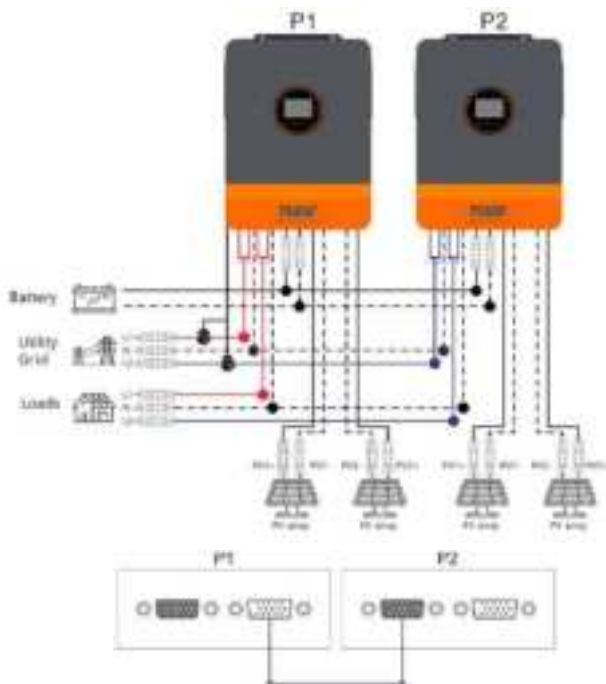


b. Split-phase system (three inverters)


2+1 system

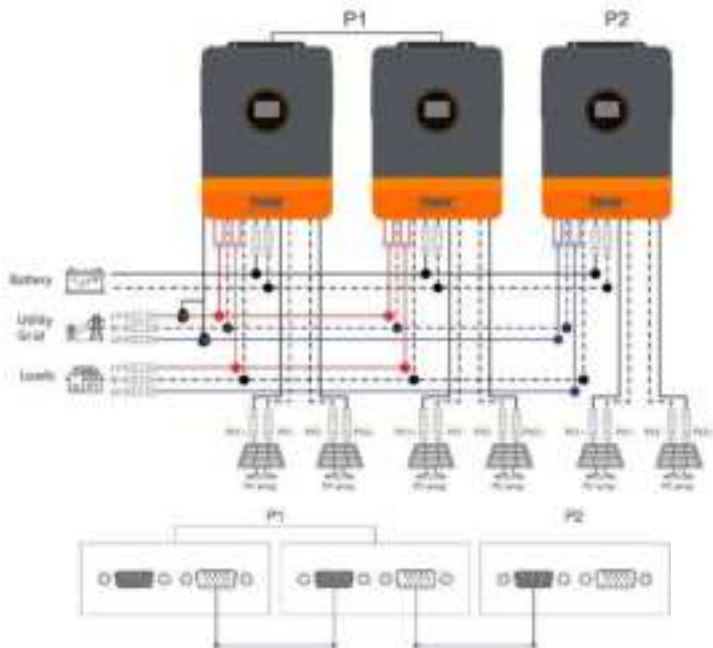


c. Split-phase system (four inverters)

3+1 system:

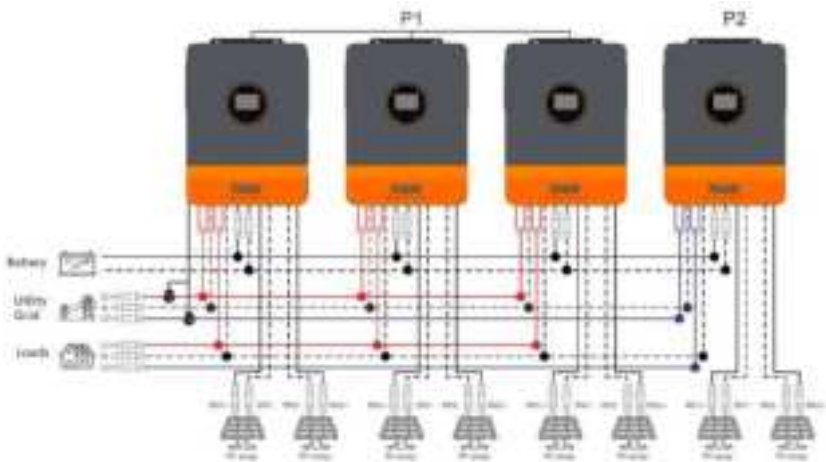

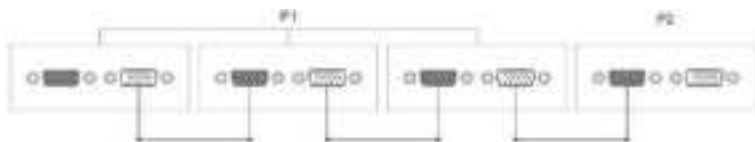



2+2 system:

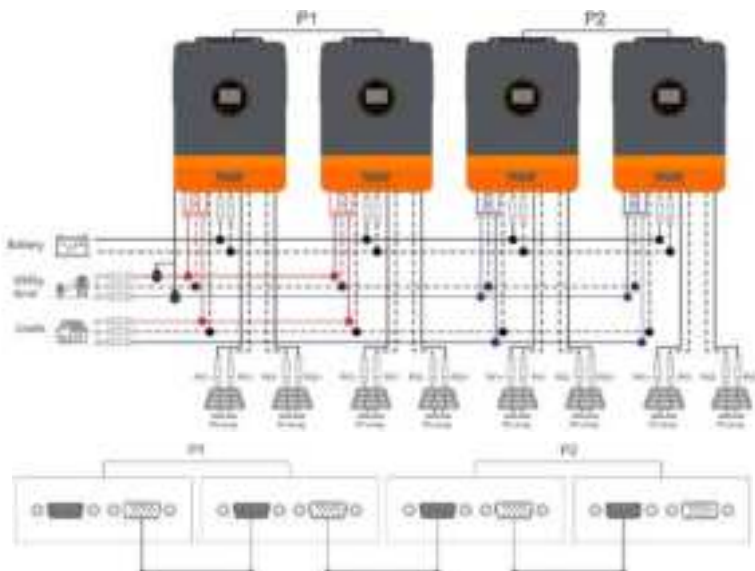


d. Split-phase system (five inverters)

4+1 system:

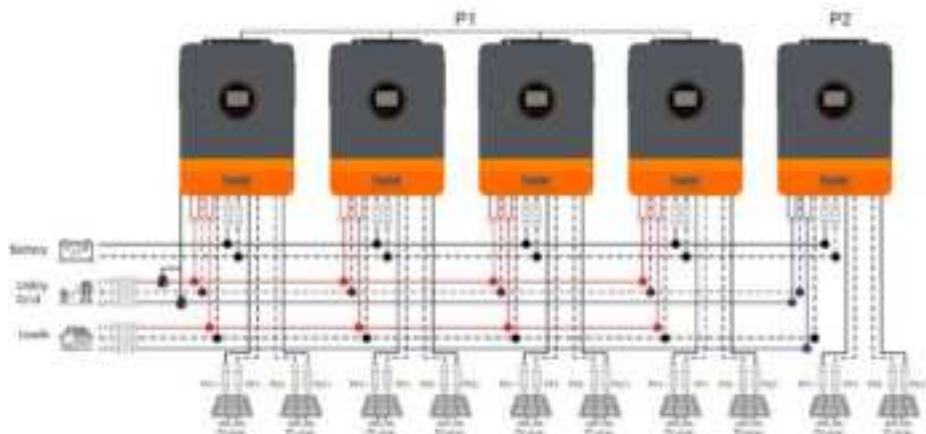

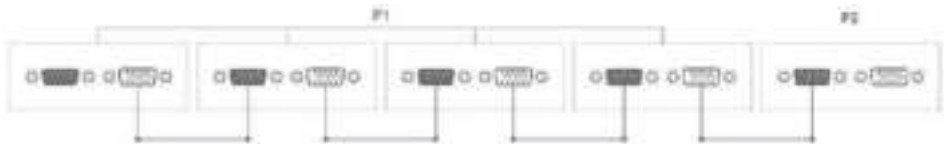


3+2 system:

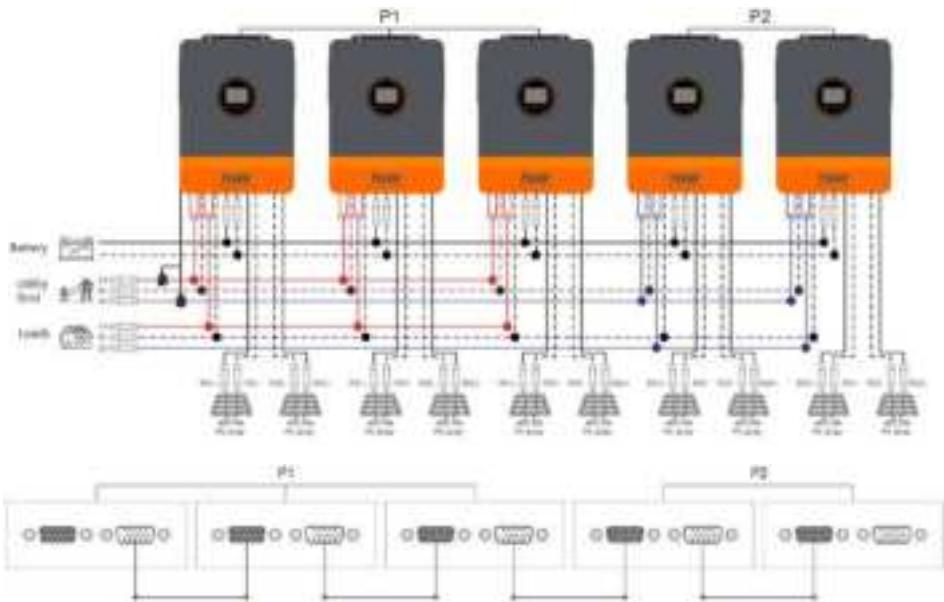


**e. Split-phase system (six inverters)**

5+1 system:

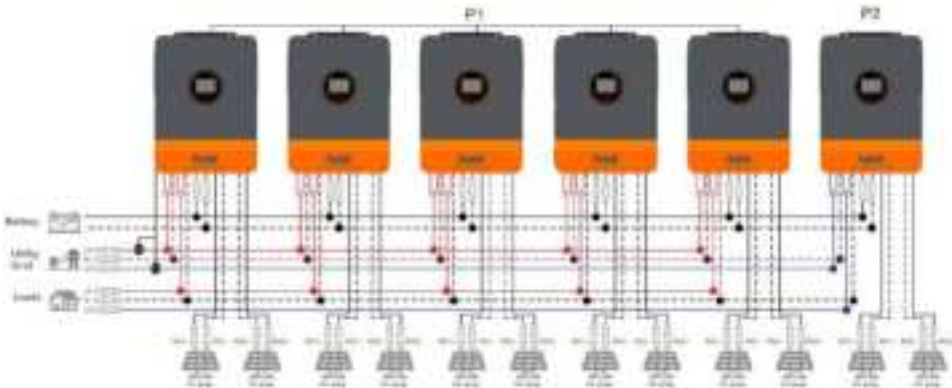




4+2 system:

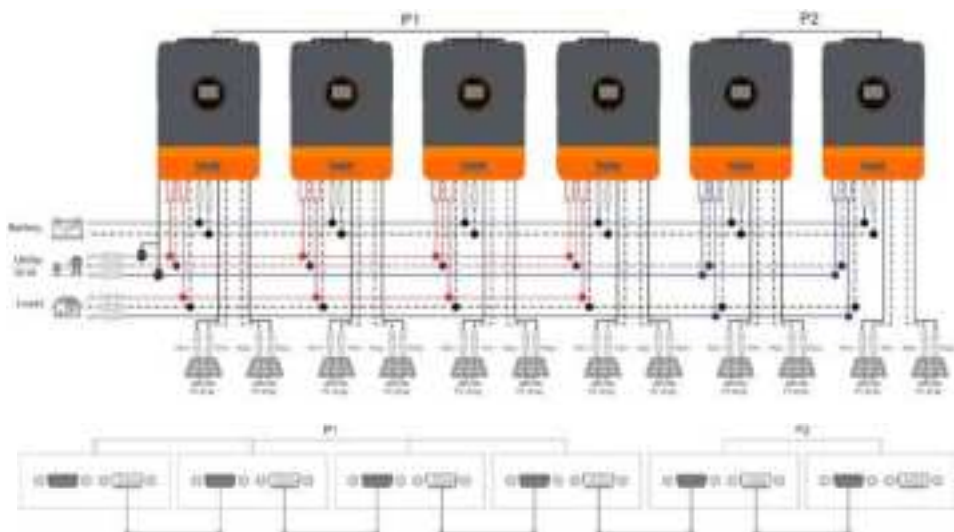


3+3 system:

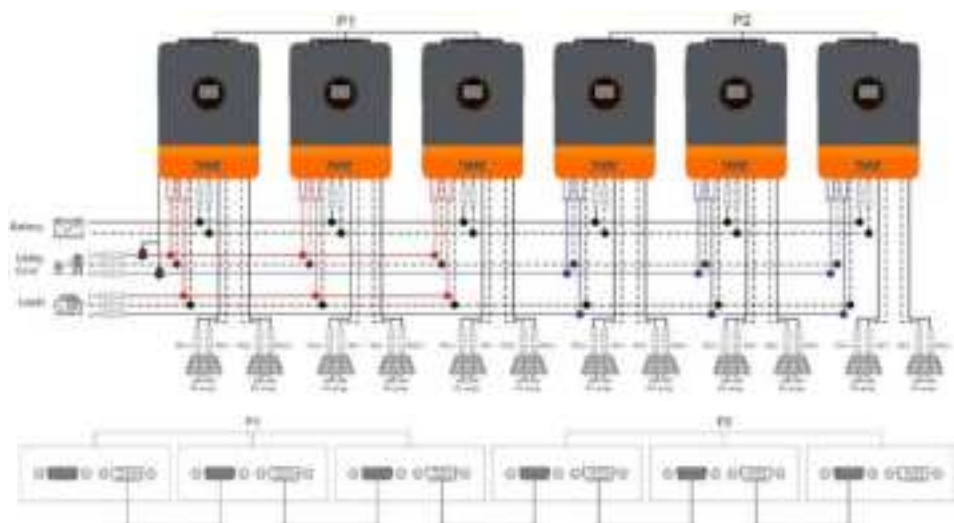


10.5 Wiring diagram for split-phase parallel connection (phase difference between L1 and L2: 180°)


Set the item [31] to PAL, and set the item [68] to 180°. When setting the item [38] to "120 V," the L1-L2 voltage is 240 V, and the L1-N voltage is 120 V, L2-N voltage is 120V.

a. Two parallel-connected solar storage inverters:

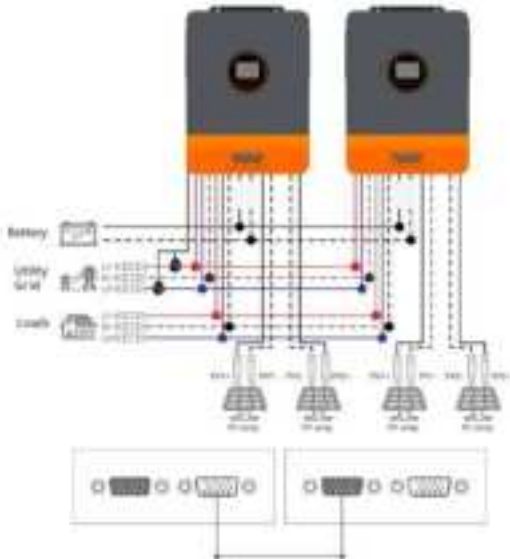


 b. Three parallel-connected solar storage inverters:

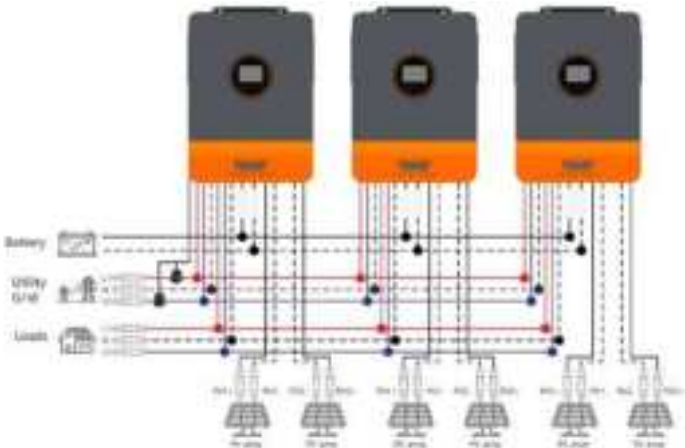





**c. Four parallel-connected solar storage inverters:**

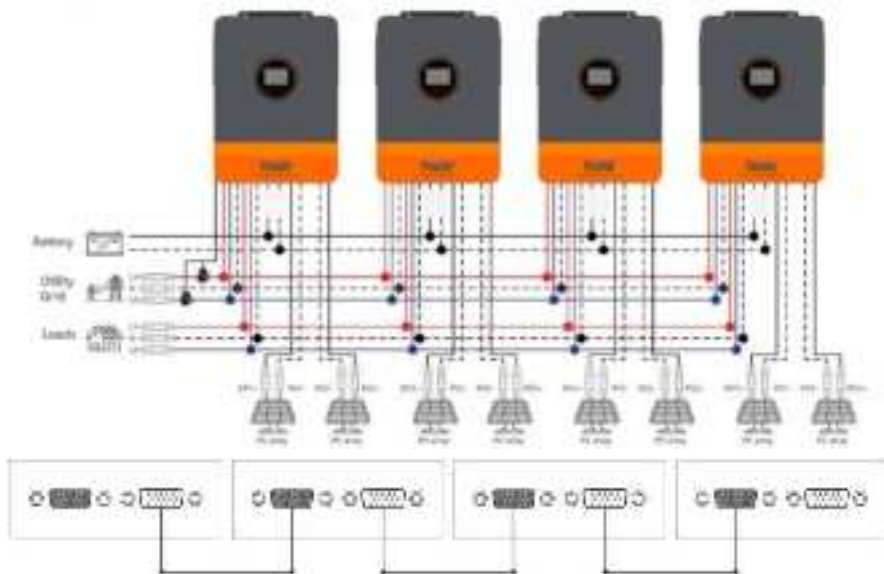


**d. Five parallel-connected solar storage inverters:**

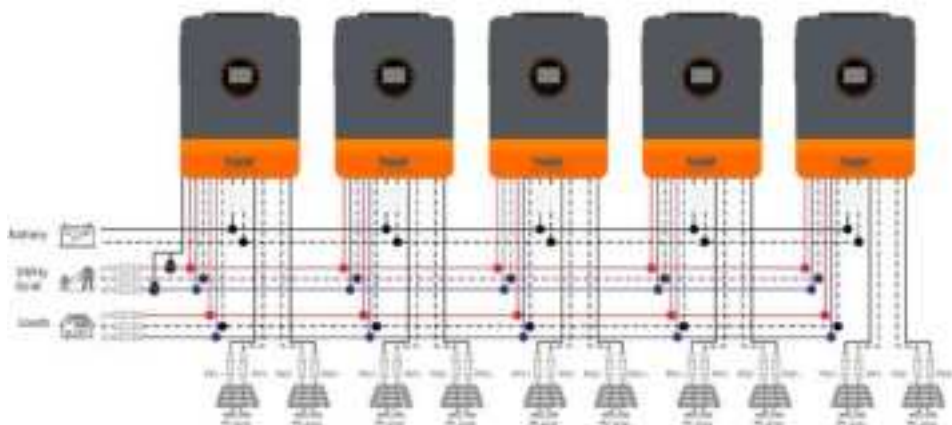

 

e. Six parallel-connected solar storage inverters:

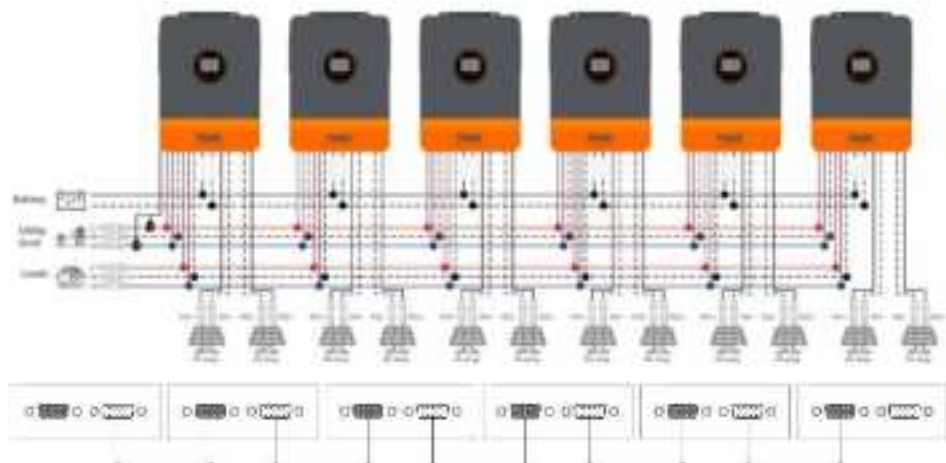


## 10.6 Wiring diagram for three-phase parallel connection

P1: Set the item [31] to "3P1;" P2: Set the item [31] to "3P2;" P3: Set the same to "3P3", all of P1/P2/P3 inverters item [68] can not be set, it is default "0"

At this point, the P1-P2, P1-P3, and P2-P3 phase difference is  $120^\circ$ . When setting the item [38] to "120 VAC," the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is  $120 \times 1.732 = 208$  VAC. Similarly, the L1-L3 and L2-L3 voltage is 208 VAC:


### a. Three-phase system (three inverters)

1+1+1 system:

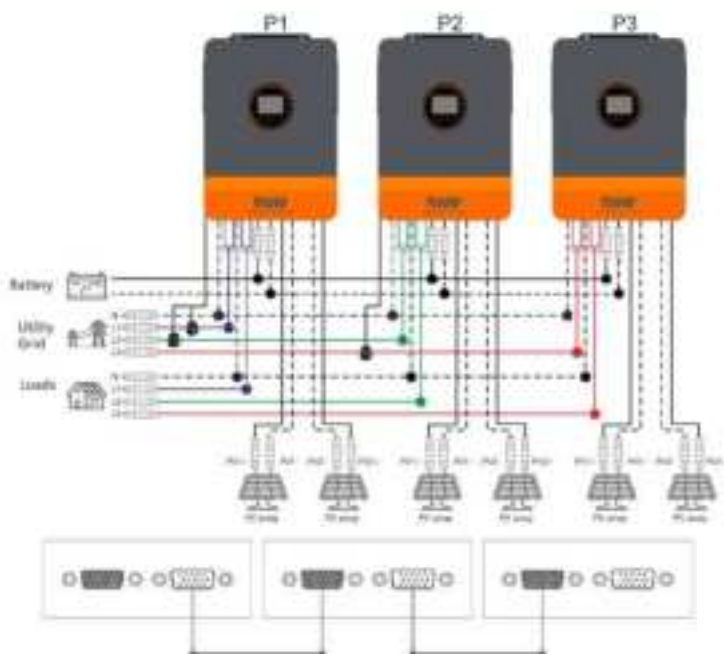


b. Three-phase system (four inverters)


2+1+1 system:

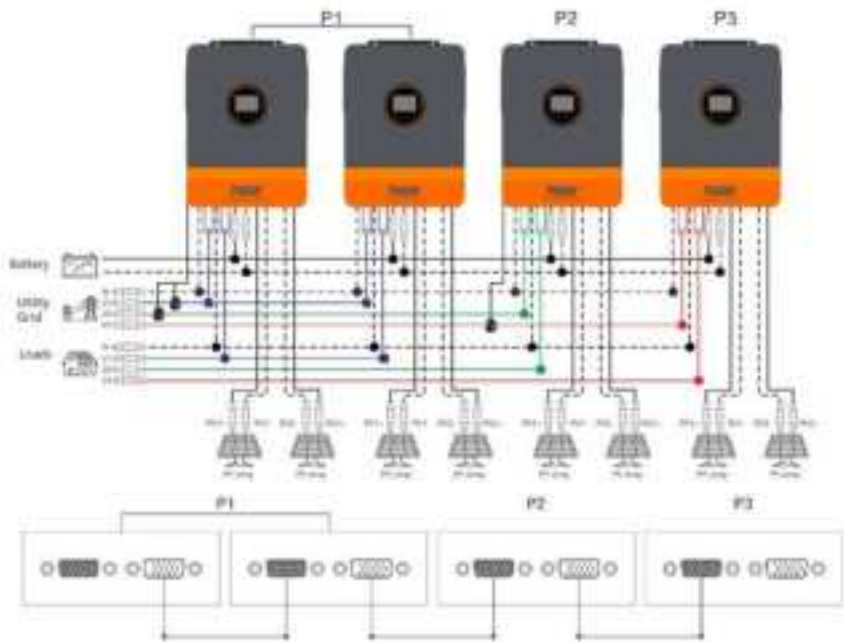


c. Three-phase system (five inverters)

3+1+1 system:

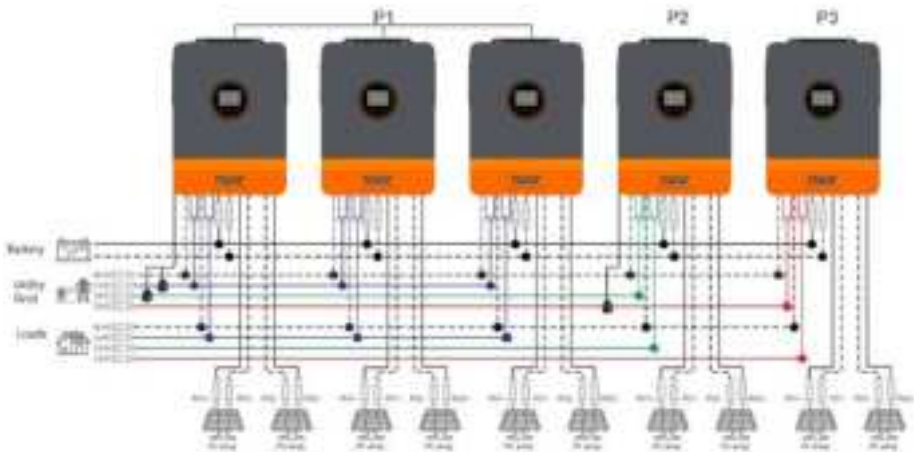

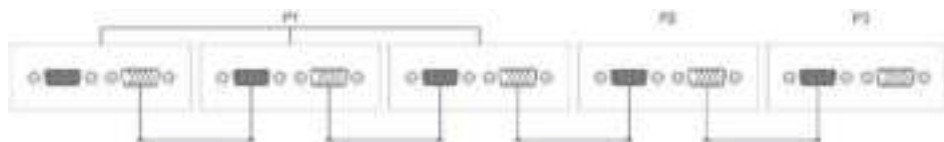



2+2+1 system:

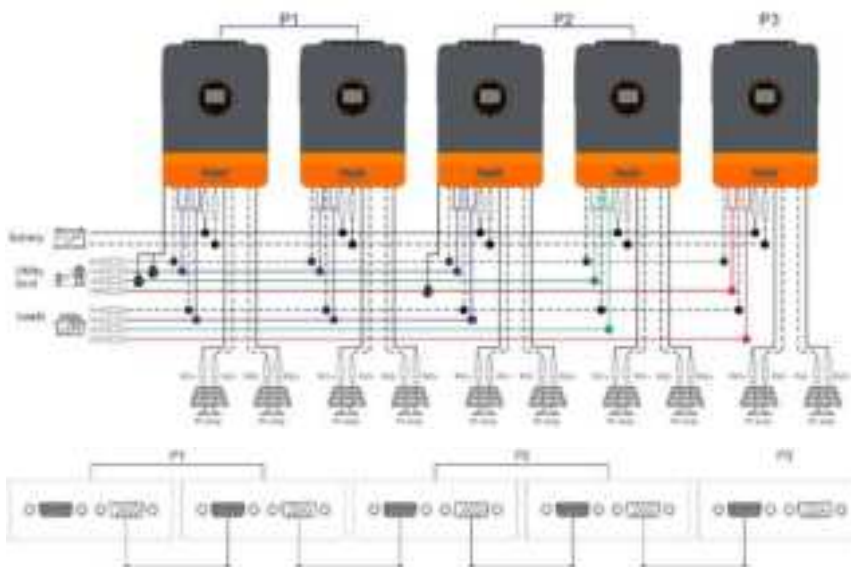


## d. Three-phase system (six inverters)

 2+2+2 system:

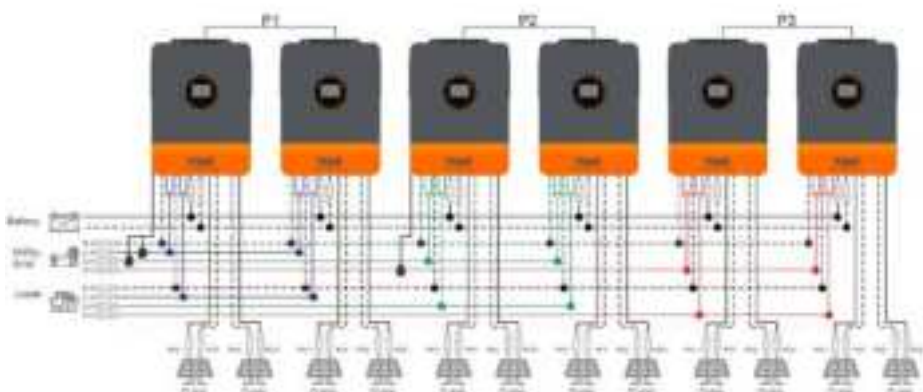



3+2+1 system:

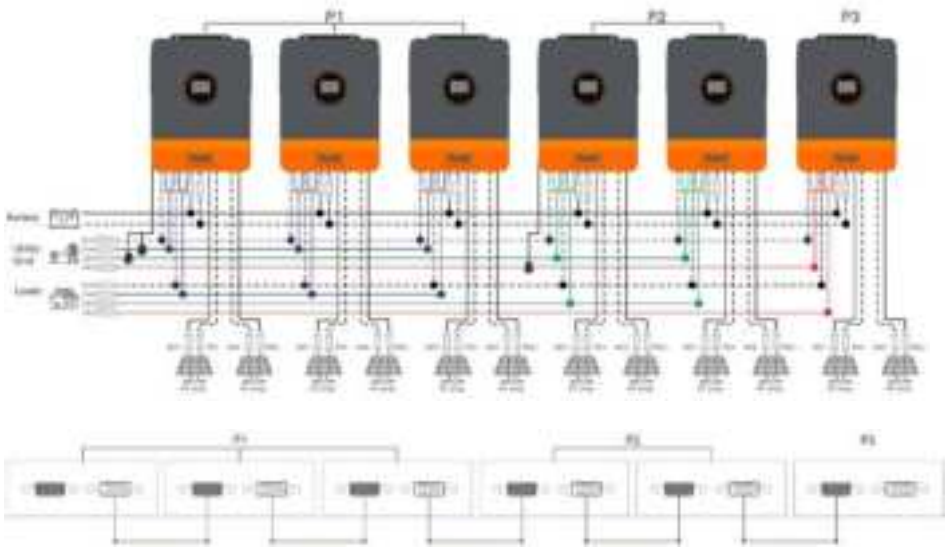

**Note:**

- 1) Before powering on and lighting up the screen, check for correct wiring according to the above wiring diagrams to avoid system problems.
- 2) Check all connections for firm fixing to avoid detachment and abnormal system operation.
- 3) When connecting the AC output to the load, complete wiring according to the requirements of the electrical load to avoid damage to the load.
- 4) Set the item [38] to the same parameter, or only set it in the host inverter. During parallel operation, the voltage set in the host shall prevail, so the host inverter will forcibly set the item to the value for slave inverters. Only in standby mode can the item be set.
- 5) The inverter defaults to single mode at the factory. If using the parallel or three-phase function, set the item [31] on the screen as follows:

Power on one inverter each time, turn off the other inverters, and then set the item [31] according to the on-site system operation mode. After setting the inverter, turn off the inverter,

and set the other inverters one by one. After all are set, power on all inverters at one time to enter the working state.

**In single-phase parallel operation:**

Set the item [31] to "PAL" and the item [68] to "0°." When setting the item [38] to "120 V," the output L-N voltage is 120 V.

**In two-phase parallel operation:**

- a) P1: Set the item [31] to "2P0;" P2: Set the item [31] to "2P1," all of P1/P2 inverters item [68] can not be set, it is default "0°" and the phase difference between P1 and P2 is 120°. When setting the item [38] to "120 V," the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is 208 V, and the L1-N voltage is 120 V.
- b) P1: Set the item [31] to "2P0;" P2: Set the item [31] to "2P2," all of P1/P2 inverters item [68] can not be set, it is default "0°" and the phase difference between P1 and P2 is 180°. When setting the item [38] to "120 V," the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is 240 V, and the L1-N voltage is 120 V.

**In split-phase parallel operation:**

Set the item [31] to PAL, and set the item [68] to 180°. When setting the item [38] to "120 V," the L1-L2 voltage is 240 V, and the L1-N voltage is 120 V.

**In three-phase parallel operation:**

P1: Set the item [31] to "3P1;" P2: Set the item [31] to "3P2;" P3: Set the same to "3P3" all of P1/P2/P3 inverters item [68] can not be set, it is default "0°".

At this point, the P1-P2, P1-P3, and P2-P3 phase difference is 120°. When setting the item [38] to "120 VAC," the voltage between the live wire L1 of P1 phase and the live wire L2 of P2 phase is  $120 \times 1.732 = 208$  VAC. Similarly, the L1-L3 and L2-L3 voltage is 208 VAC:

- 6) After the system runs, measure the correct output voltage before connecting to loads.



# POWMr

**SHENZHEN HEHEJIN INDUSTRIAL CO.,LTD**

---

Tel/Fax: +86 755-28219903

Email: [support@powmr.com](mailto:support@powmr.com)

Web: [www.powmr.com](http://www.powmr.com)

Add: Henggang Street, Longgang District, Shenzhen, Guangdong, China