 


YOKEKON | Humidifier KC-MH-301

USER MANUAL

Thanks for your purchase.
We provide a one-year warranty.
If there are any quality issues,
replacement or refund is available.
Please feel free to contact us via E-mail:

✉ info@yokekon.com

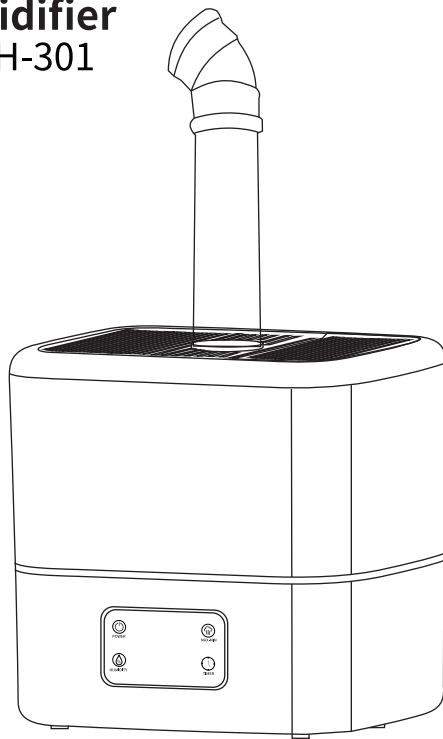

Precautions

Thank you for purchasing our humidifier **KC-MH-301**.

Please read this manual carefully before use and keep it for future reference.

All pictures shown are for illustration purposes only.

Actual products may vary due to ongoing product improvements.

For more installation information,
please visit the official website link or scan the QR code:
<https://keecoon.com/pages/customer-instruction-manual>



Contents

Safety Guide	01-02
Components	03
Placement	04
Installation	05-07
Water filling	08
Control Panel & Remote Control	09-10
Care & Maintenance	11-13
Troubleshooting and Solutions	14-16
Product Specifications	17
Warranty	18-19

 
Safety Guide

- ❗ Do not unplug the power cord with wet hands to prevent electric shock. Always unplug the device before refilling with water or cleaning.
- ❗ If the machine tilts during operation, turn off the power and reposition the machine to its correct upright position. Do not leave the machine tilted for long periods during normal operation, as this could cause the stainless steel atomizer to overheat and be damaged.
- ❗ Do not touch the central stainless steel atomizer while the machine is in operation, as this may cause discomfort or pain. Do not move the machine randomly. If you need to move the machine, please turn off the power first.
- ❗ Do not disassemble or modify the machine's parts unless you are a qualified technician.
- ❗ Do not bend, pull, scratch, knot, or twist the power cord excessively, and avoid placing heavy objects on it. This may cause electric shock, short circuit, or fire. If the power cord is damaged, it must be replaced by the manufacturer or a professional technician with a cord of the same specification. Do not replace the power cord by yourself.
- ❗ Do not allow children to touch or operate the machine to avoid potential danger.
- ❗ This machine is designed for fixed-location use only. Do not submerge the machine in water.


Safety Guide

- ❗ Do not add metals, chemicals, detergents, or other substances to the water tank, as this may reduce the mist output or prevent misting altogether, and may cause damage to the stainless steel atomizer.
- ❗ Do not pour water directly into the air outlet to avoid electrical short circuits or fire hazards from water coming into contact with internal wiring.
- ❗ If not in use for an extended period, empty the water tank, unplug the device, and wipe the machine clean. Store it in a place out of reach of children.
- ❗ When changing the water in the tank, make sure to turn off the power first to avoid dry heating of the stainless steel atomizer, which can reduce its lifespan. When cleaning the water tank, avoid using hard brushes or sharp objects to scrub the misting plate, as this may damage the nozzle.

Components

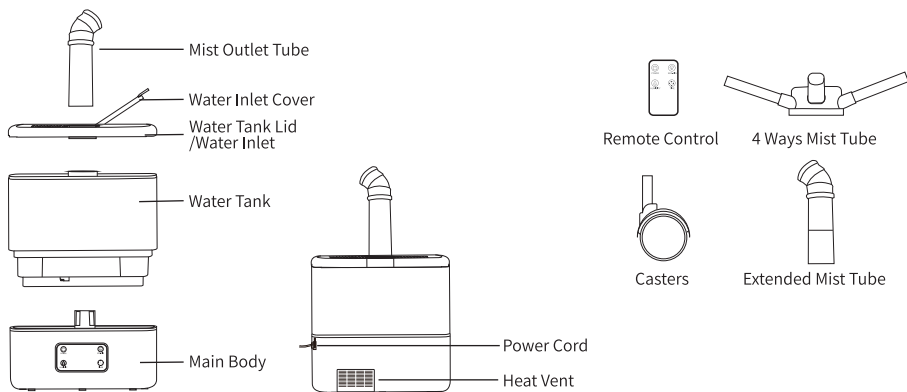


Main Body Inside

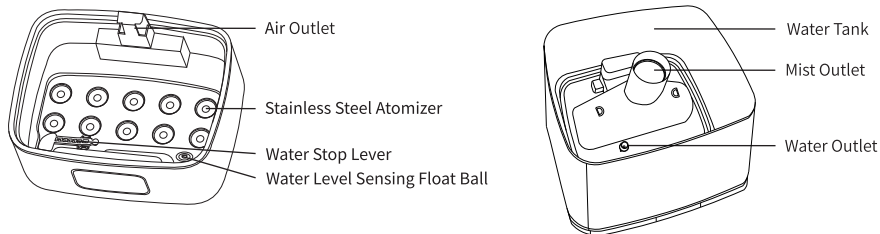

Placement

Place the humidifier on a level, dry surface free from any inclinations. The mist outlet should not be directed towards walls or furniture to avoid moisture damage.

Avoid using the humidifier in the following situations to prevent water leakage, signal jamming, damage, or injury:

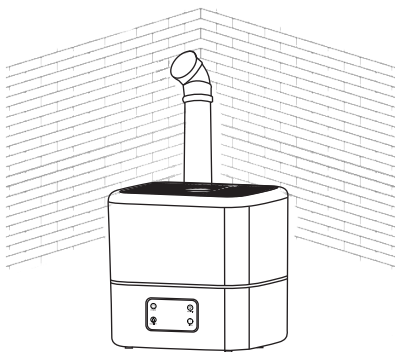


- ❗ In direct sunlight.
- ❗ On an unstable platform.
- ❗ In high temperatures, humidity, or dust.
- ❗ Near heat sources like air conditioners, heaters, stoves, or any other objects that emit heat.
- ❗ Near precision instruments like mobile phones, computers, and other electronic devices
- ❗ Near objects that emit radio waves such as radios.
- ❗ Under tables, curtains, carpets, bedding, or any other similar objects to avoid dampness.

Please follow these guidelines carefully to ensure the safe and proper operation of your humidifier. If you have any questions or concerns, please refer to the user manual or contact customer support.


Installation

1

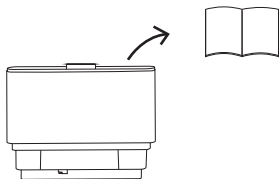


Take the main body out of the packaging and remove the remote control and other accessories from the water tank.

2

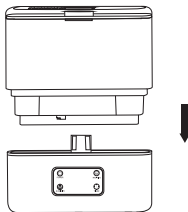


Place the water tank on the main body properly.

3

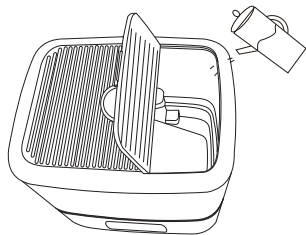

Open the top cover of the main unit to add water, making sure not to exceed the maximum water level (30L/7.93Gal).

4

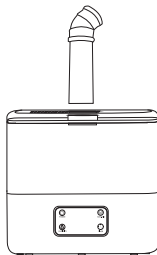


Install the mist outlet tube


Installation

4 Installation Options


- ❶ Single-way Mist Tube Installation.

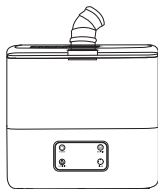


- ❷ 4 Ways Mist Tube Installation.

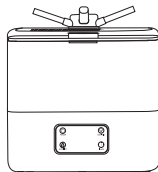

- ❸ Extended Mist Tube + Single-way Installation.

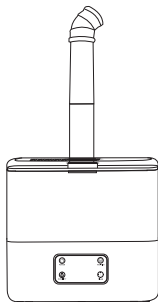


- ❹ Extended Mist Tube + 4 Ways Installation.

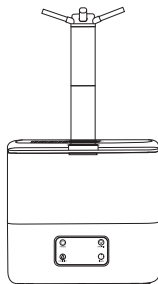


Installation



How to Install the Mist Tube?

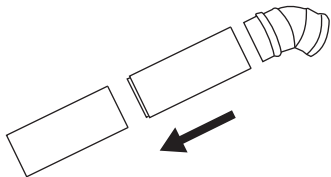

Step 1: Assemble the extended mist tube.

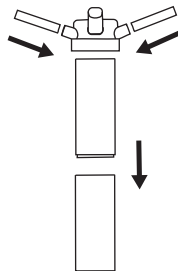


Step 2: Assemble the 4 ways mist tube.

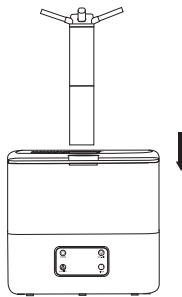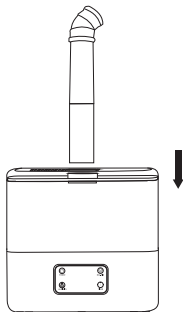

Step 3: Insert the mist tube into the mist outlet.

Water Filling

Open the water inlet cover on the side and fill the water tank with purified water or clean tap water. After filling, close the lid.

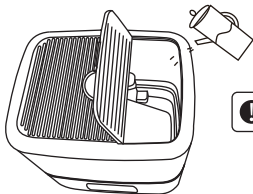


! Do not exceed the full water line(MAX).

Note:

- Please add water below 40°C (104°F).
- Distilled water or RO water is recommended.
- Please do not exceed the maximum water mark.
- Please do not allow water to enter the mist outlet, or water may enter the inside and cause the machine to malfunction.
- Please do not add mineral water, plasma water or tap water that has not been used for a long time. If mold or impurities grow, it may cause health problems.
- When the buzzer alarms, it indicates that the machine is in low water protection mode. Add water to the water tank through the water slot on the main unit. When the buzzer stops, it means the water tank is full, and the machine can operate normally.
- When the water level in the tank is insufficient, the built-in safety mechanism automatically disconnects the atomization circuit. At this point, the sprayer will stop working, and the buzzer will sound. To continue using, please turn off the power and refill the water.

Control Panel & Remote Control

The control panel and remote control allow you to operate the humidifier with ease.

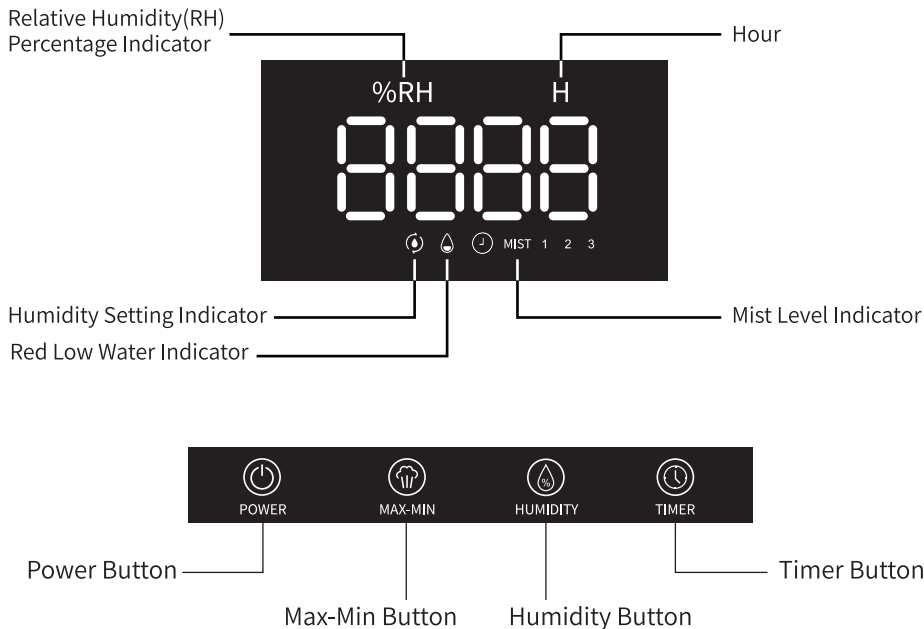





Control Panel & Remote Control



Display & Buttons



Remote Control

 POWER	<p>After plugging in the power, press the power button to turn on the machine. Lightly touch the power button to turn off the machine, and the fan will shut down with a 10-second delay.</p>
 MAX-MIN	<p>The product has three mist levels that can be adjusted. Press the mist level button to cycle through the levels. The machine defaults to the highest mist level (Mist3) at startup and does not retain the setting. Display: Mist1 Mist2 Mist3</p>
 HUMIDITY	<p>Adjustable range: 45-90%. Lightly touch the humidity control button to activate the humidity control function, and the Humidity Indicator on the display lights up. The default humidity is 45%, and each subsequent press increases it by 5% until reaching 90%. Press again to exit the humidity control function. When the ambient humidity reaches the preset value, the machine stops working. If the ambient humidity is more than 5% below the preset value, the machine resumes operation.</p>
 TIMER	<p>Adjustable range: 1-12 hours. Once set, it takes effect immediately. The display shows the ambient humidity along with the TIME icon and the selected number.</p>

- Point the infrared emitter of the remote control towards the humidifier's control panel.
- If there is water around the machine during use, it indicates that the room humidity is too high. Please adjust the mist level accordingly.


Care & Maintenance



- Always turn off and UNPLUG the humidifier before any cleaning or maintenance.
- Do not clean the main body under running water.
- Do not let water splash into the air outlets.
- Use mild detergent and make sure to remove any residue to avoid harm to health.
- If the humidifier will not be used for more than 24 hours, pour out the water from the tank and sink to avoid mold or impurities that may be harmful to health.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.
- Do not overfill the humidifier due to the potential risk of electric shock.

Step 1

Unplug the humidifier and remove the water tank from the base.

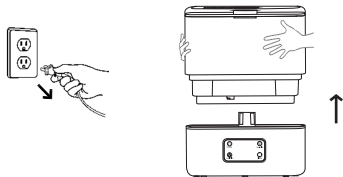


Step 2

Descaling (RECOMMENDED ONCE A MONTH)

Empty any water in the base. Add two cups of distilled water and one tablespoon of vinegar to the base. Let it sit for 15-20 minutes. Carefully swish the solution around the tank and base chamber.


Do not allow liquid to contact the air outlet.

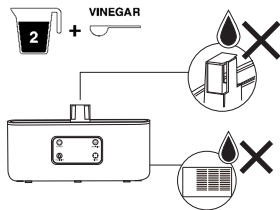

Care & Maintenance


Step 3

Clean the inside surfaces of sinks and tanks with a soft cloth or brush.

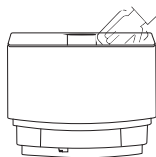

Step 4

Pour out the vinegar solution, wipe the base dry, and reattach the water tank.

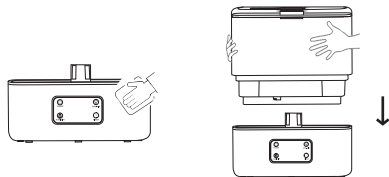

Step 5

Wipe the outside of the humidifier with a damp, soft cloth or sponge. Ensure the water temperature is below 40°C (104°F) to avoid damaging the unit.



Care & Maintenance

Step 6

Dry all parts with a cloth. Make sure all parts are completely dry before reassembling or storing.

Additional Tips

- For stubborn mineral deposits, repeat the descaling process or use a specialized humidifier cleaner.
- Always use distilled or purified water to reduce the frequency of descaling.
- Regular cleaning helps maintain optimal performance and extends the lifespan of your humidifier.

Troubleshooting

My humidifier does not work.

1. Make sure that the cord is connected to a powered outlet and the mains voltage corresponds with the voltage indicated on the humidifier.
2. The humidifier will shut down automatically in the event of low water.
3. Check if the water tank is installed properly.
4. Make sure that no water enters the inside unit during cleaning or use. If water does get inside, do not power on the humidifier immediately. Place it in a dry, well-ventilated area and let it dry for at least 48 hours before use.

Water leaks from my humidifier.

1. Make sure the silicone sealing ring around the water outlet valve is secure.
2. Avoid running the humidifier in a room with over 60% relative humidity
3. Wipe any excess water.
4. Do not shake the humidifier.
5. Make sure to place the humidifier on a flat, level surface.
6. Check the water tank for leaks. If there are leaks, contact Customer Support.

Troubleshooting

The mist produces an unpleasant smell.

1. Use purified or distilled water only. It is not recommended to use tap water.
2. Change water regularly to avoid dirty water accumulation.
3. Clean the humidifier and keep it dry for 12 hours with the cover detached.

My humidifier is not misting.

1. Please check whether the air inlet is blocked.
2. The water in water reservoir is nearly used up.
3. Your room might have too much ventilation. Please close doors and windows.
4. Check if there is scale attached to the surface of the atomizer. If necessary clean it according to the instructions.

Why is the humidity in the room not changing?

1. Ensure the humidifier is appropriately sized for the room.
2. Close windows and doors to minimize air exchange with the outside environment.
3. Adjust the mist output to a higher setting if the room is large or very dry.

Troubleshooting


There is white dust in the water tank.

You should descale the humidifier regularly. Using purified or distilled water can help prevent the formation of scale.

If your problem is not listed or still persists, contact our Customer Support:
info@yokekon.com

Product Specifications

Product Name	Industrial and Commercial Humidifier
Model Number	KC-MH-301
Operation Mode	Low Medium High
Rated Power	250W
Rated Voltage	100-240V~
Rated Frequency	60Hz
Tank Capacity	30L/7.93Gal
Size	17.13 x 13.39 x 16.73in
Net weight	11.46 Pounds
Gross weight	13.45 Pounds
Safety Functions	1-12 hours timer
	Waterless auto shut-off

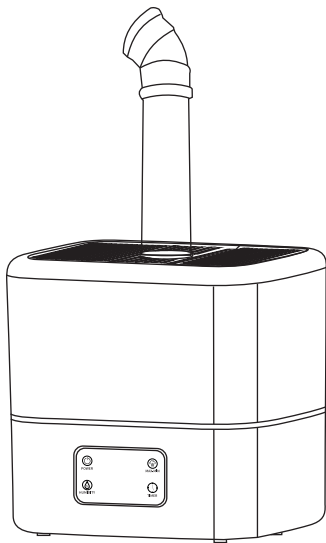

Warranty Card

Model Number	KC-MH-301		
Warranty Period	Within 1 year from the date of purchase		
Purchase date	Year	Month	Date
Customer	Name		
	Address		
	Phone Number		
Store			

Warranty

Warranty Period

- ❗ We provide a one-year warranty starting from the date of purchase.
- ❗ If you need to return the product, please make sure that it is intact and the packaging boxes and accessories are completely assembled.

Non-Warranty Policy

The following conditions are not covered by the warranty:

- ❗ Damage that occurs after the warranty period has expired.
- ❗ Damage caused by natural disasters or other force majeure events
- ❗ Any damage caused by use that does not follow the requirements outlined in the User Manual.
- ❗ Failure or damage caused by the forced use of the product. The user disassembles or repairs the product without authorization.

Warranty Requirements

In order to receive warranty service, please follow these steps:

Provide the warranty card and the order number.

Describe the problems you are experiencing in detail and provide pictures or videos if possible.

Send an email to  **info@yokekon.com**

Please note that we cannot provide warranty service if you are unable to provide the above information.

Thank you for choosing our product, and we hope you enjoy using it. If you have any questions or concerns, please don't hesitate to contact us.