

USERS GUIDE

10PBS2Gx SERIES PUSHPLATE

DUAL SWITCH PUSHPLATE


This pushplate is designed to fit neatly into standard double-gang electrical boxes. The faceplates are made of stainless steel for durable use. The pushplate may be hard wired to the door operator or connected to one of B.E.A.'s line of radio-controlled transmitters.

RELATED OPTIONAL ACCESSORY

RADIO CONTROLLED TRANSMITTER AND RECIEVERS: Wide range of analog and digital transmitters and receivers

INSTALLATION INSTRUCTIONS

1. Wire the switches of the pushplates to the door controllers or radio-controlled transmitters using the NC contacts and common.
2. Fasten the pushplate to the double-gang electrical box (by others) using the enclosed #6-32 x 1" screws.
3. Test the pushplate for proper activation.

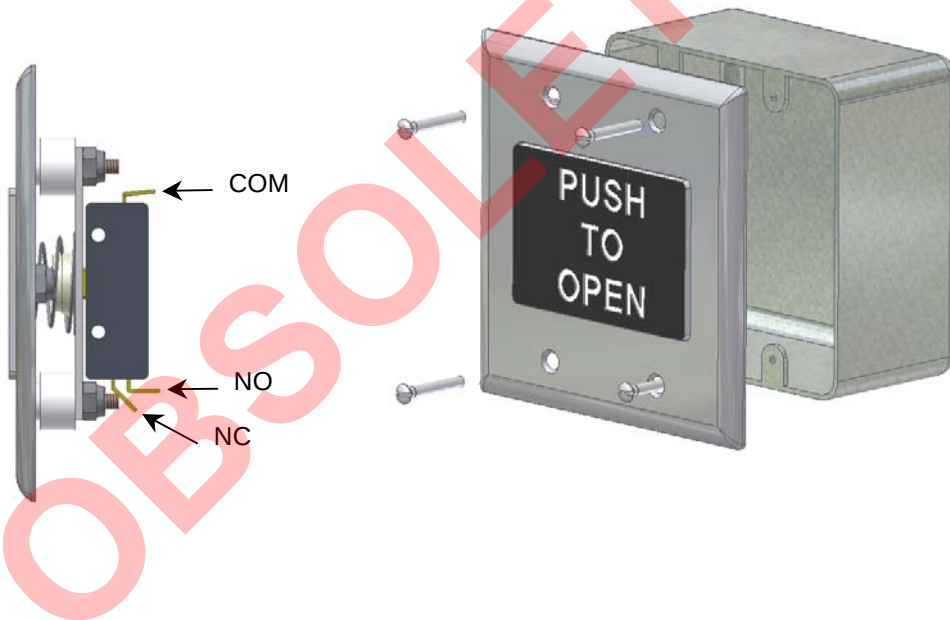

PUSHPLATE CLEANING

The pushplates are constructed with durable stainless steel and painted with scuff-resistant coatings. To clean the plates, use only a damp, non-abrasive cloth. Repeated cleaning with harsh solvents or abrasive materials may cause deterioration of the coating. Please make the end-user aware of this procedure.

TECHNICAL SUPPORT

If after troubleshooting a problem, a satisfactory solution cannot be achieved, please call B.E.A., Inc. for further assistance during Eastern Standard Time at 1-800-523-2462 from 7am - 5pm or 1-800-407-4545 from 5pm - midnight & weekends.

DO NOT leave any problem unresolved. If you must wait for the following workday to call B.E.A., leave the door inoperable until satisfactory repairs can be made. **NEVER** sacrifice the safe operation of the automatic door or gate for an incomplete solution.